


adjustable thin plaster ring Ø38 installation instruction


1

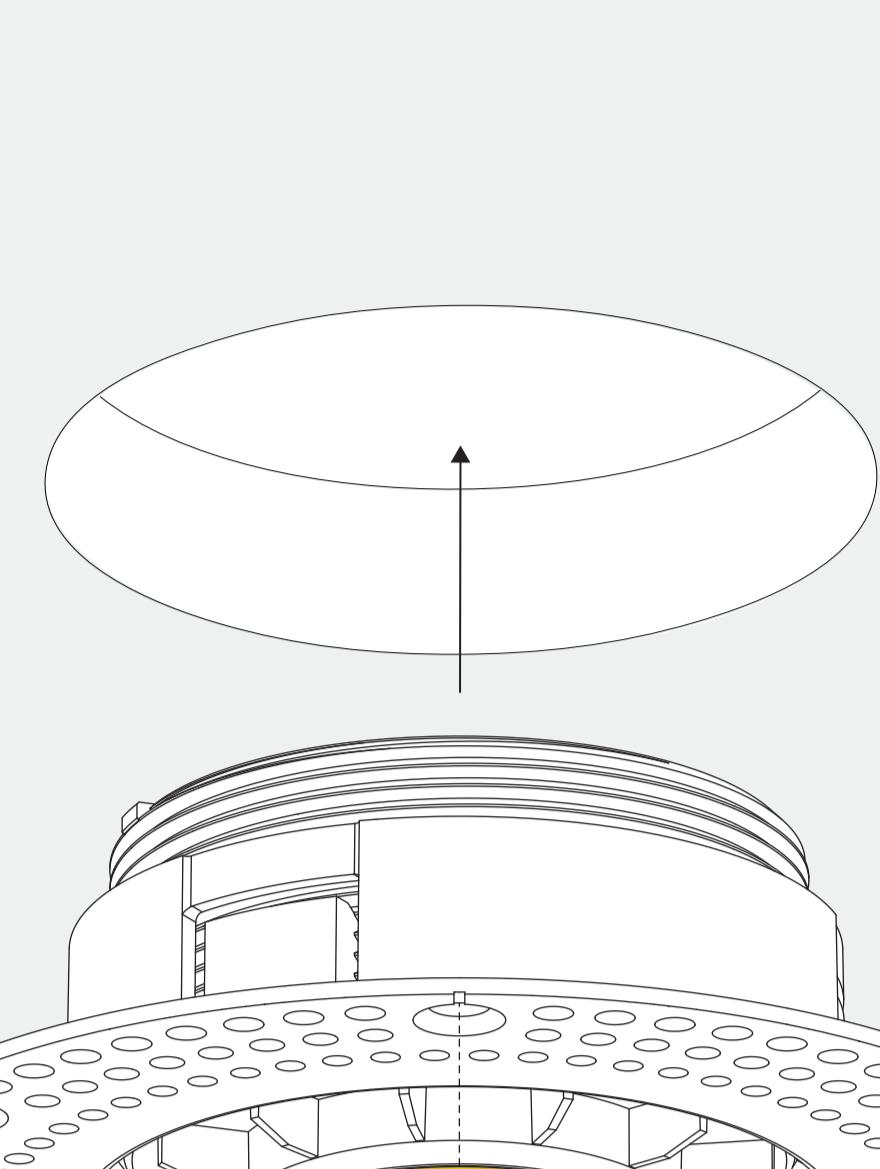

Ø 76


Cut a round hole (\varnothing 76). Consult the chosen luminaire tech specs for required height and free air dimensions.

2

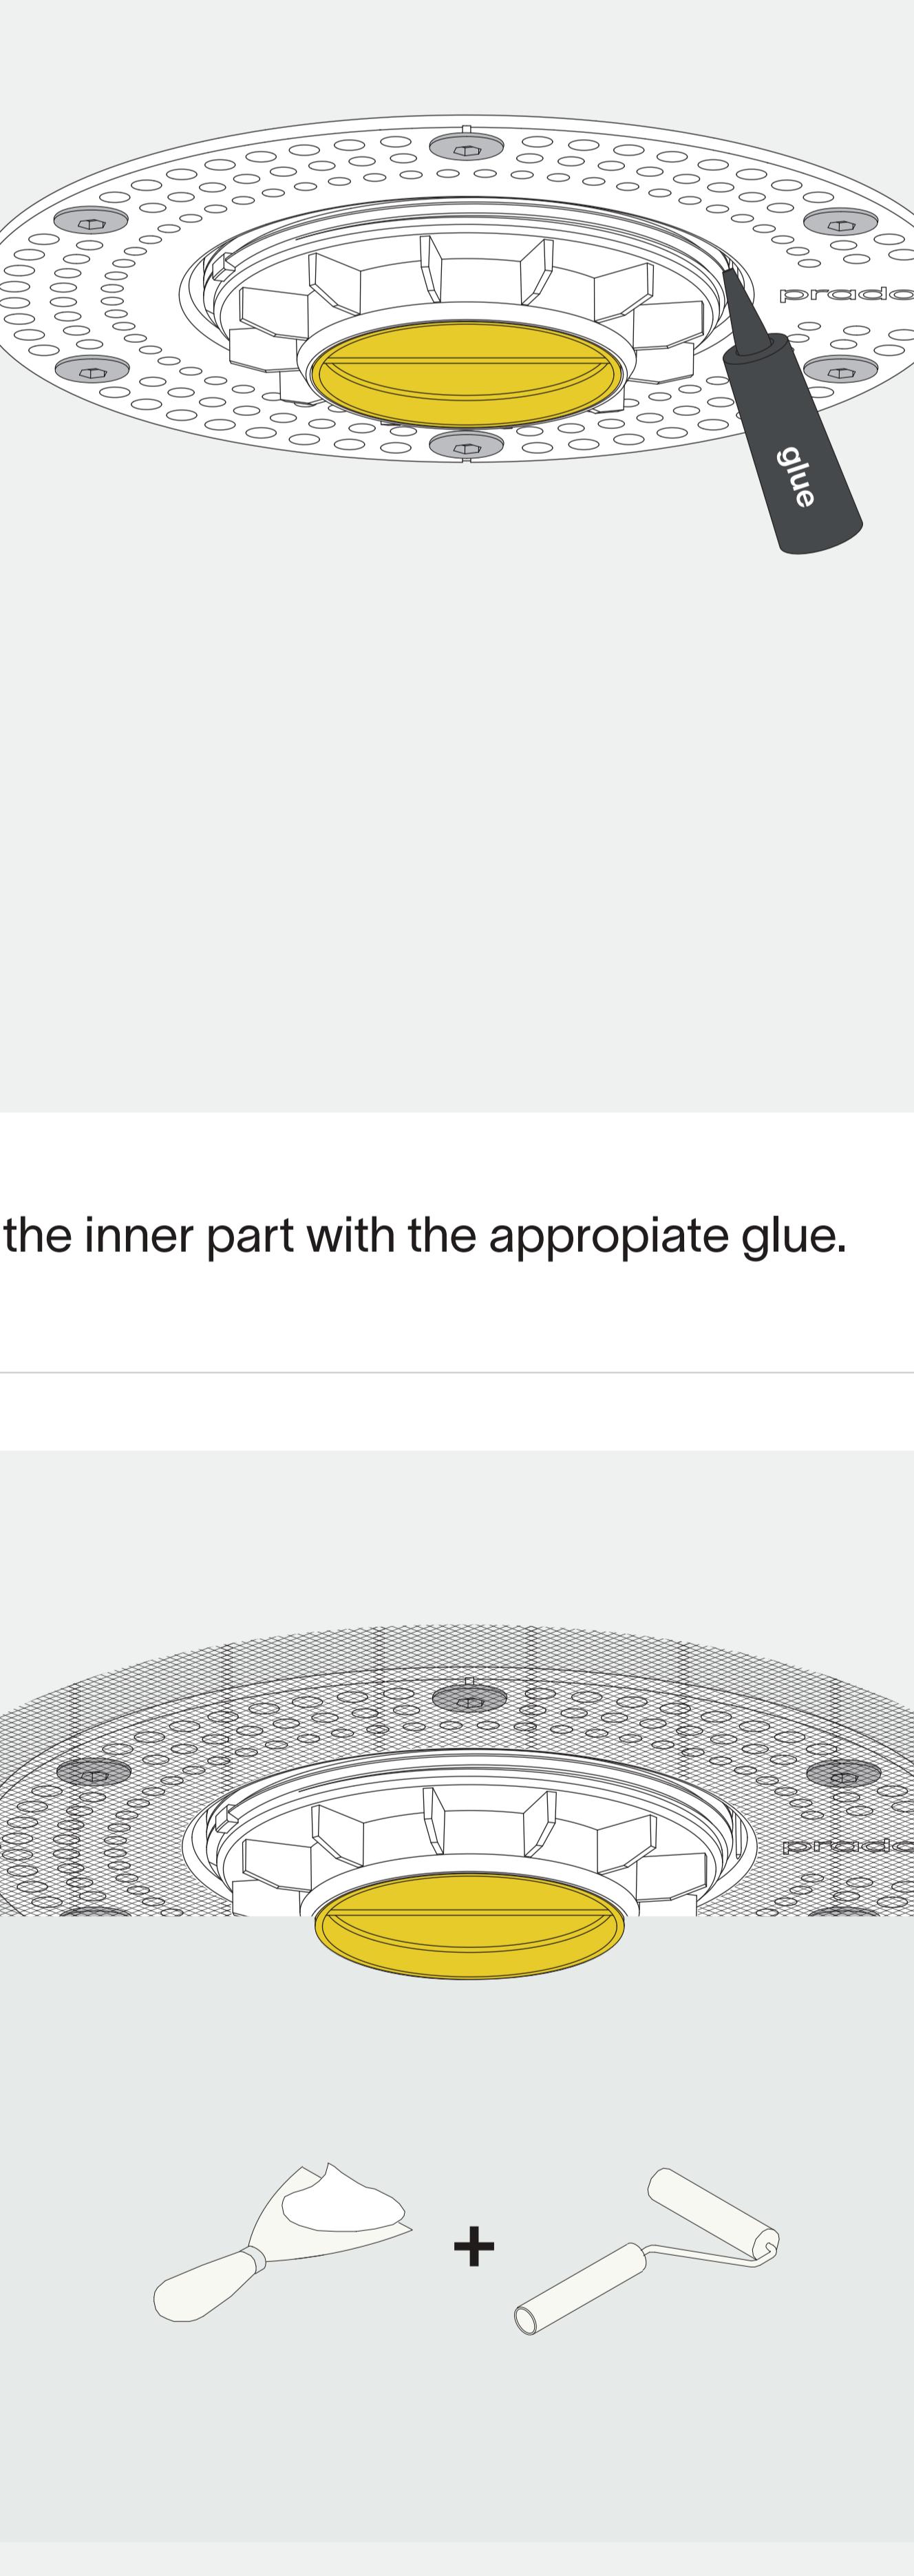


Insert the plaster ring and securely fasten it with glue or the appropriate screws on a screwfast surface. The attachment must be able to obtain a static load of 5 kg. It's the installers responsibility to ensure optimal attachment.

3

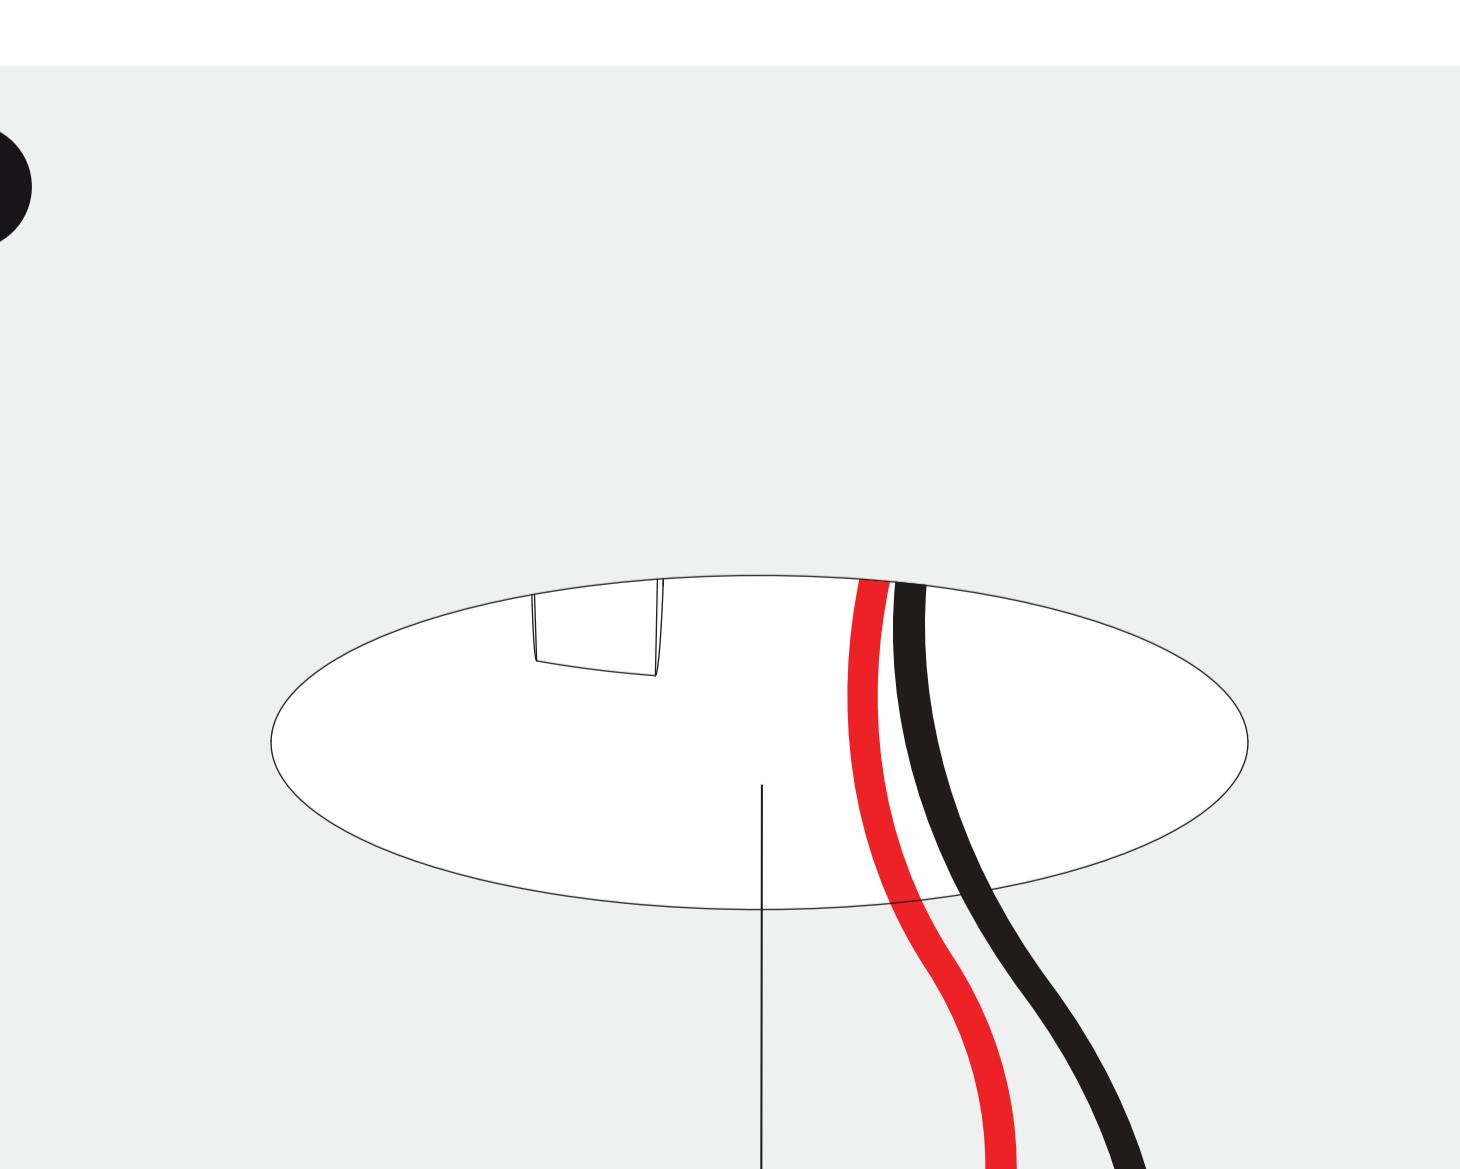

Adjust the height of the plaster ring by twisting the inner part of the kit (min. 3.6mm - max. 20mm).

4

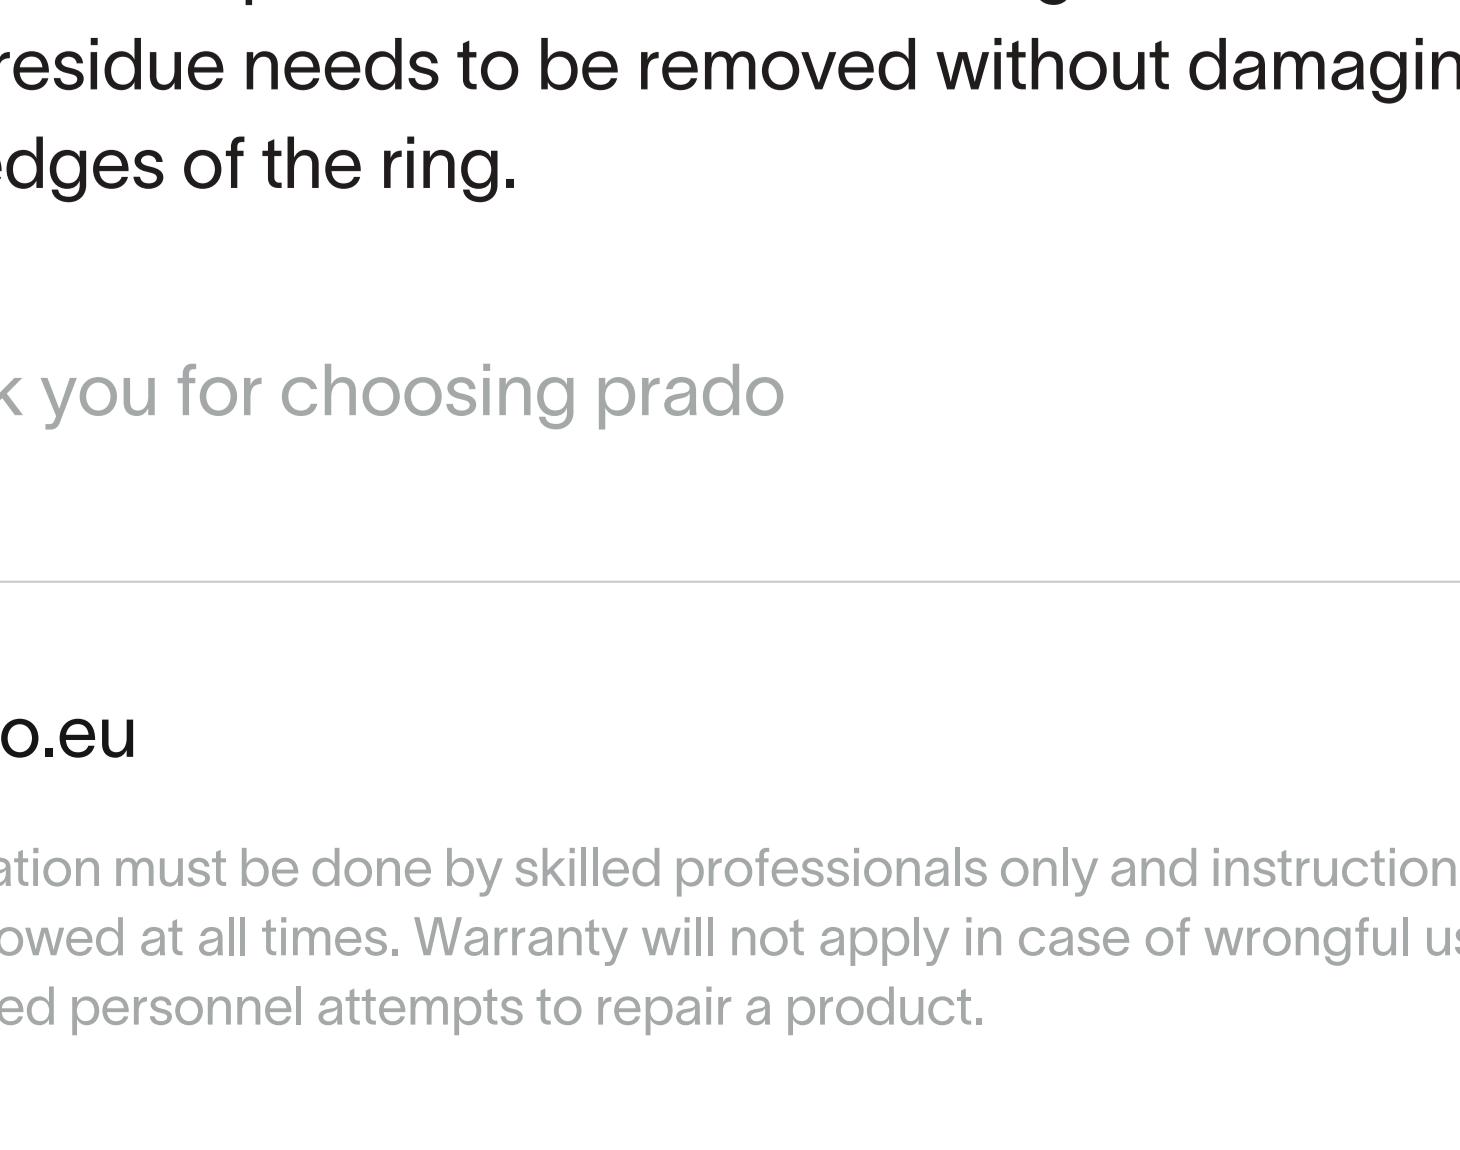

Fixate the inner part with the appropiate glue.

prado.eu

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongfull use or if unskilled personnel attempts to repair a product.