

cold stretch ceiling ring Ø108 installation instruction

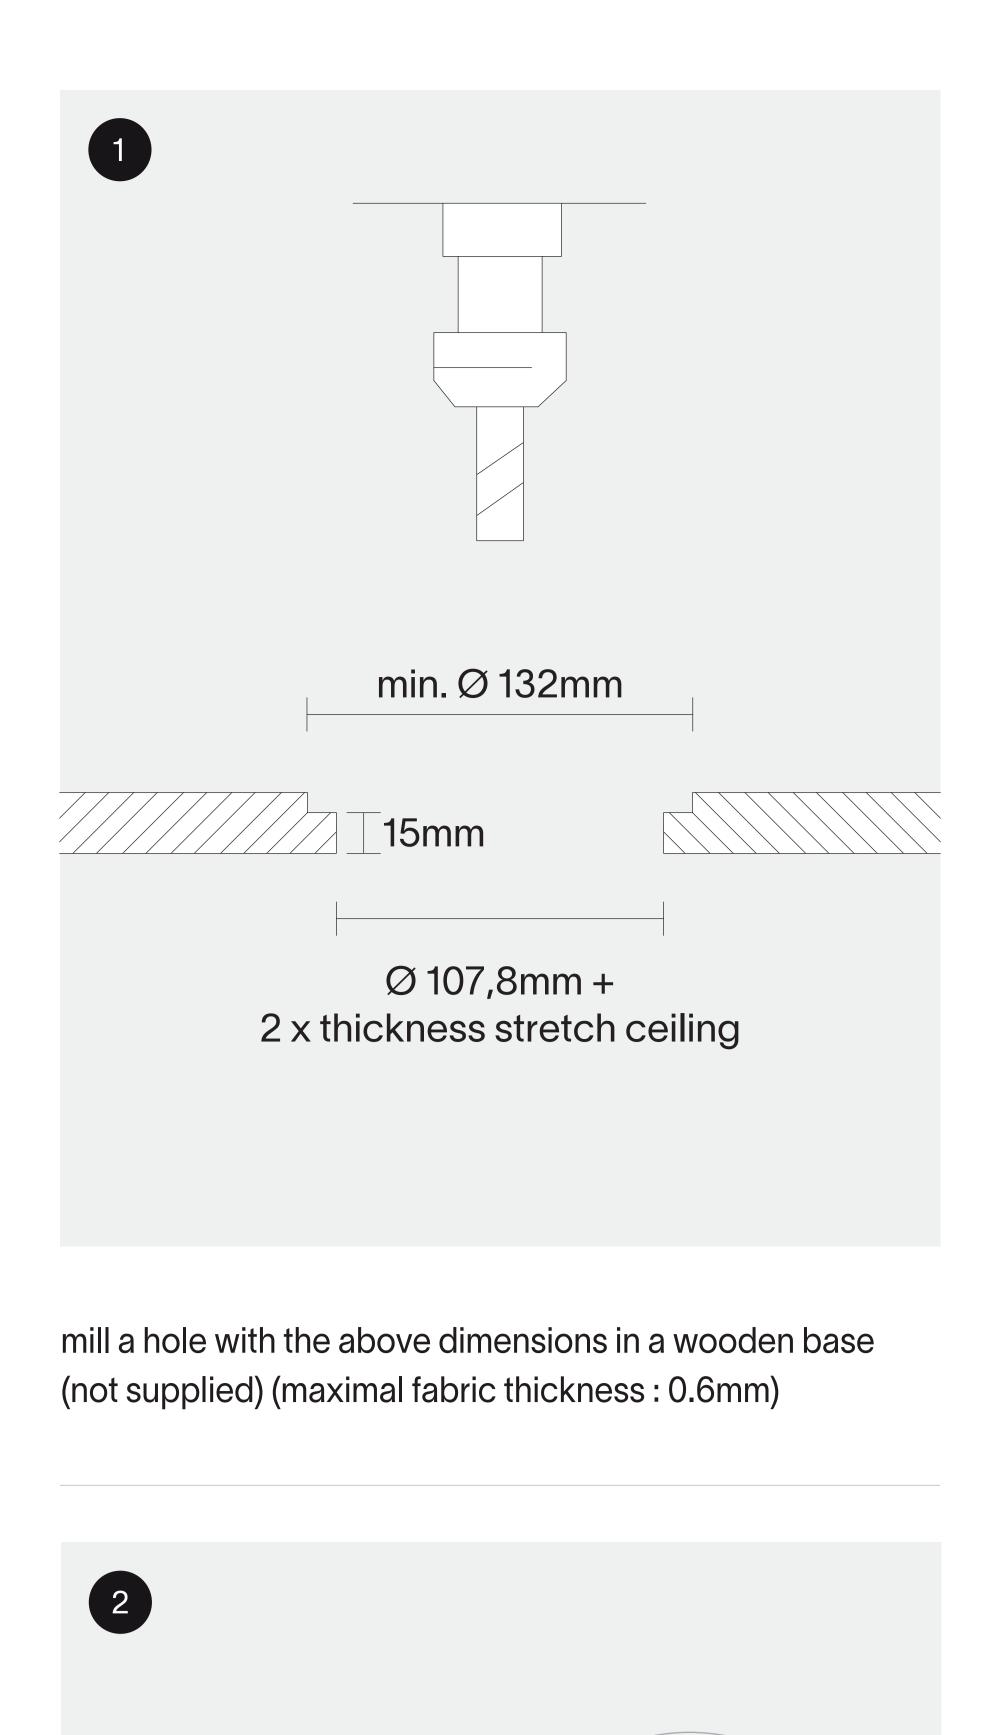

Ø 20 mm

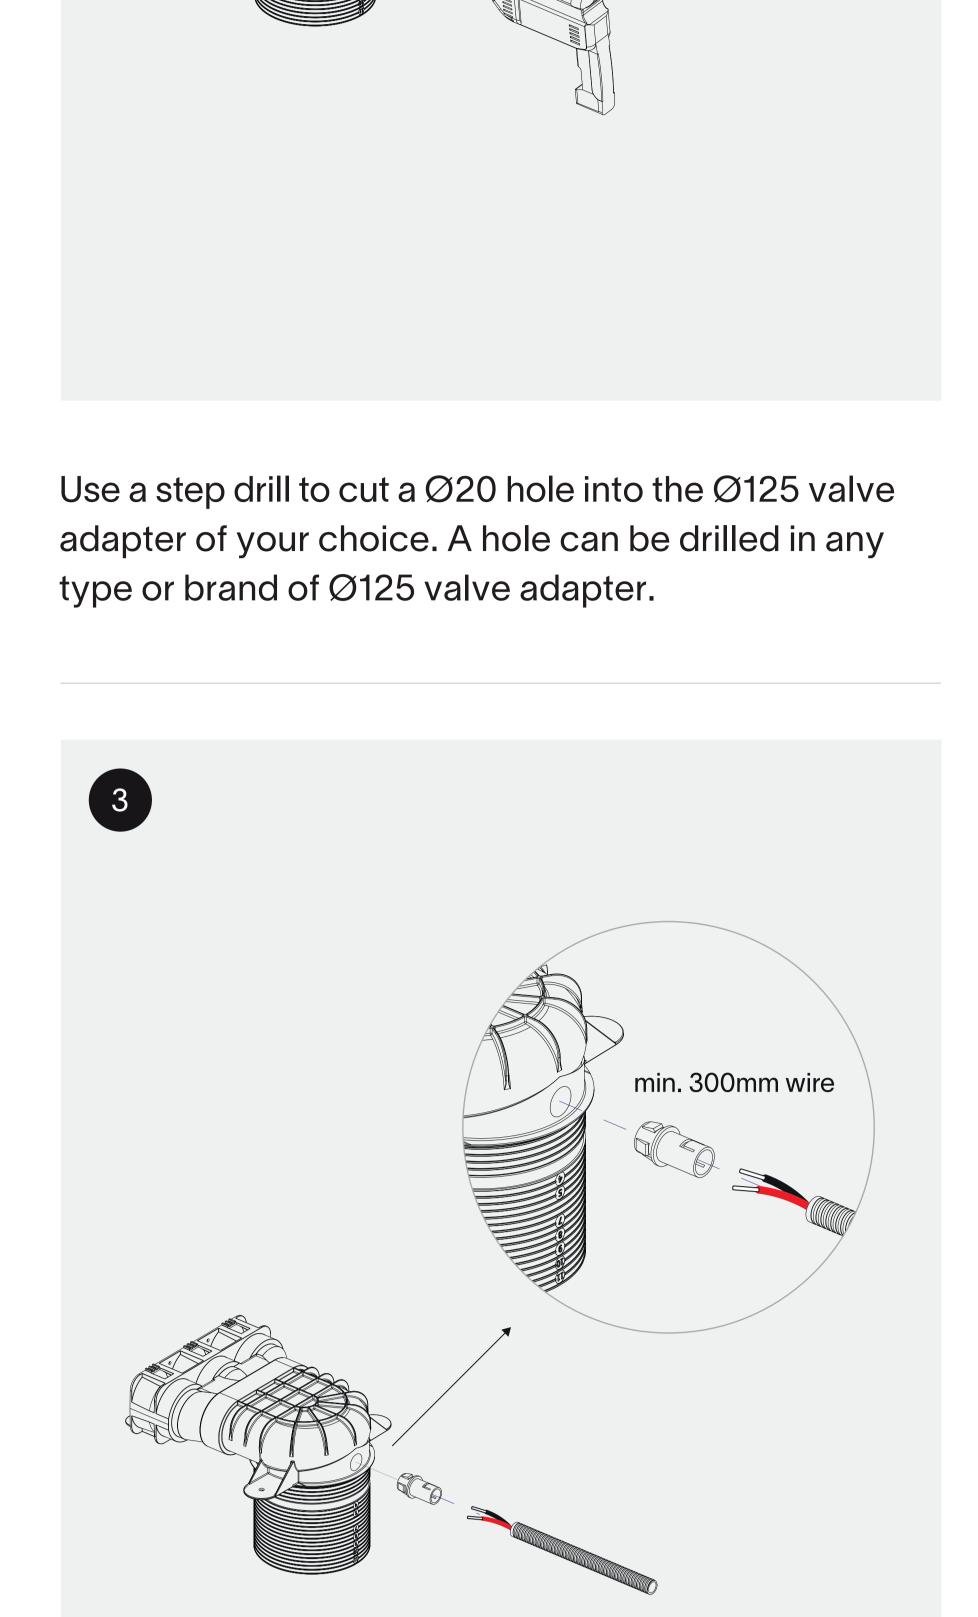

min. 60mm

Connect the Ø16 preflex and the valve adapter with


Driver must be placed remotely to remain accessible.

the prado connector. Make sure to add minimal

300mm of wire into the valve adapter.


POWER


OFF

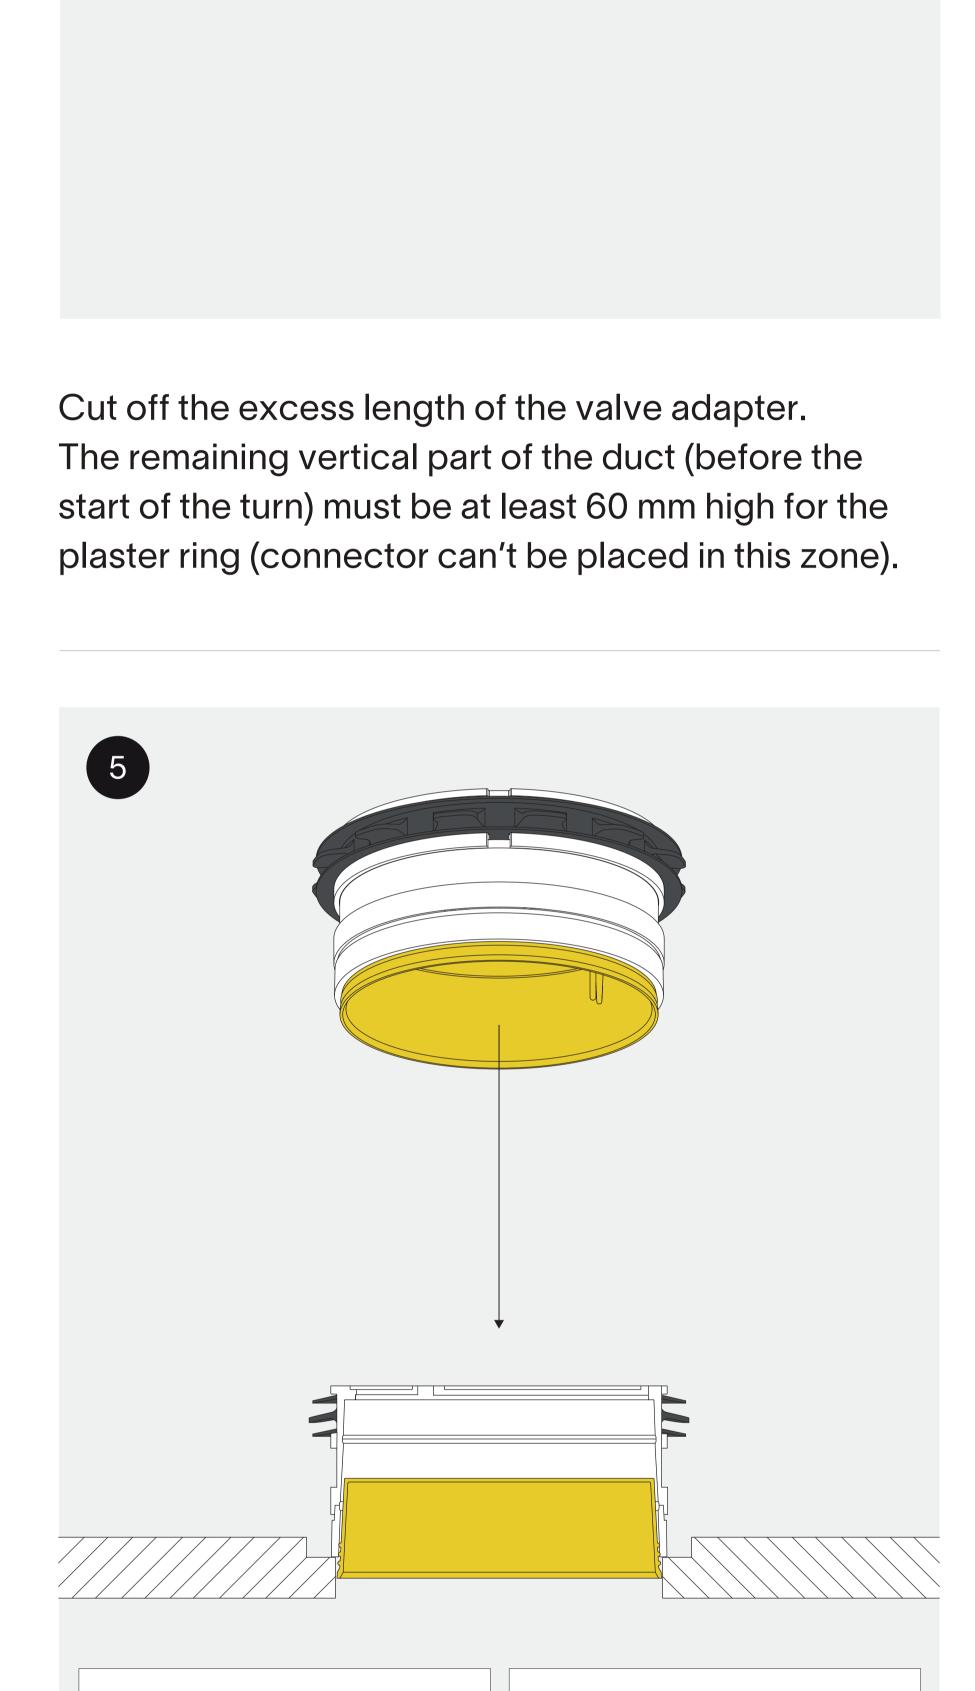

place the csc ring in the hole - yellow lid facing down

fix the csc ring to the wooden base with the right gue

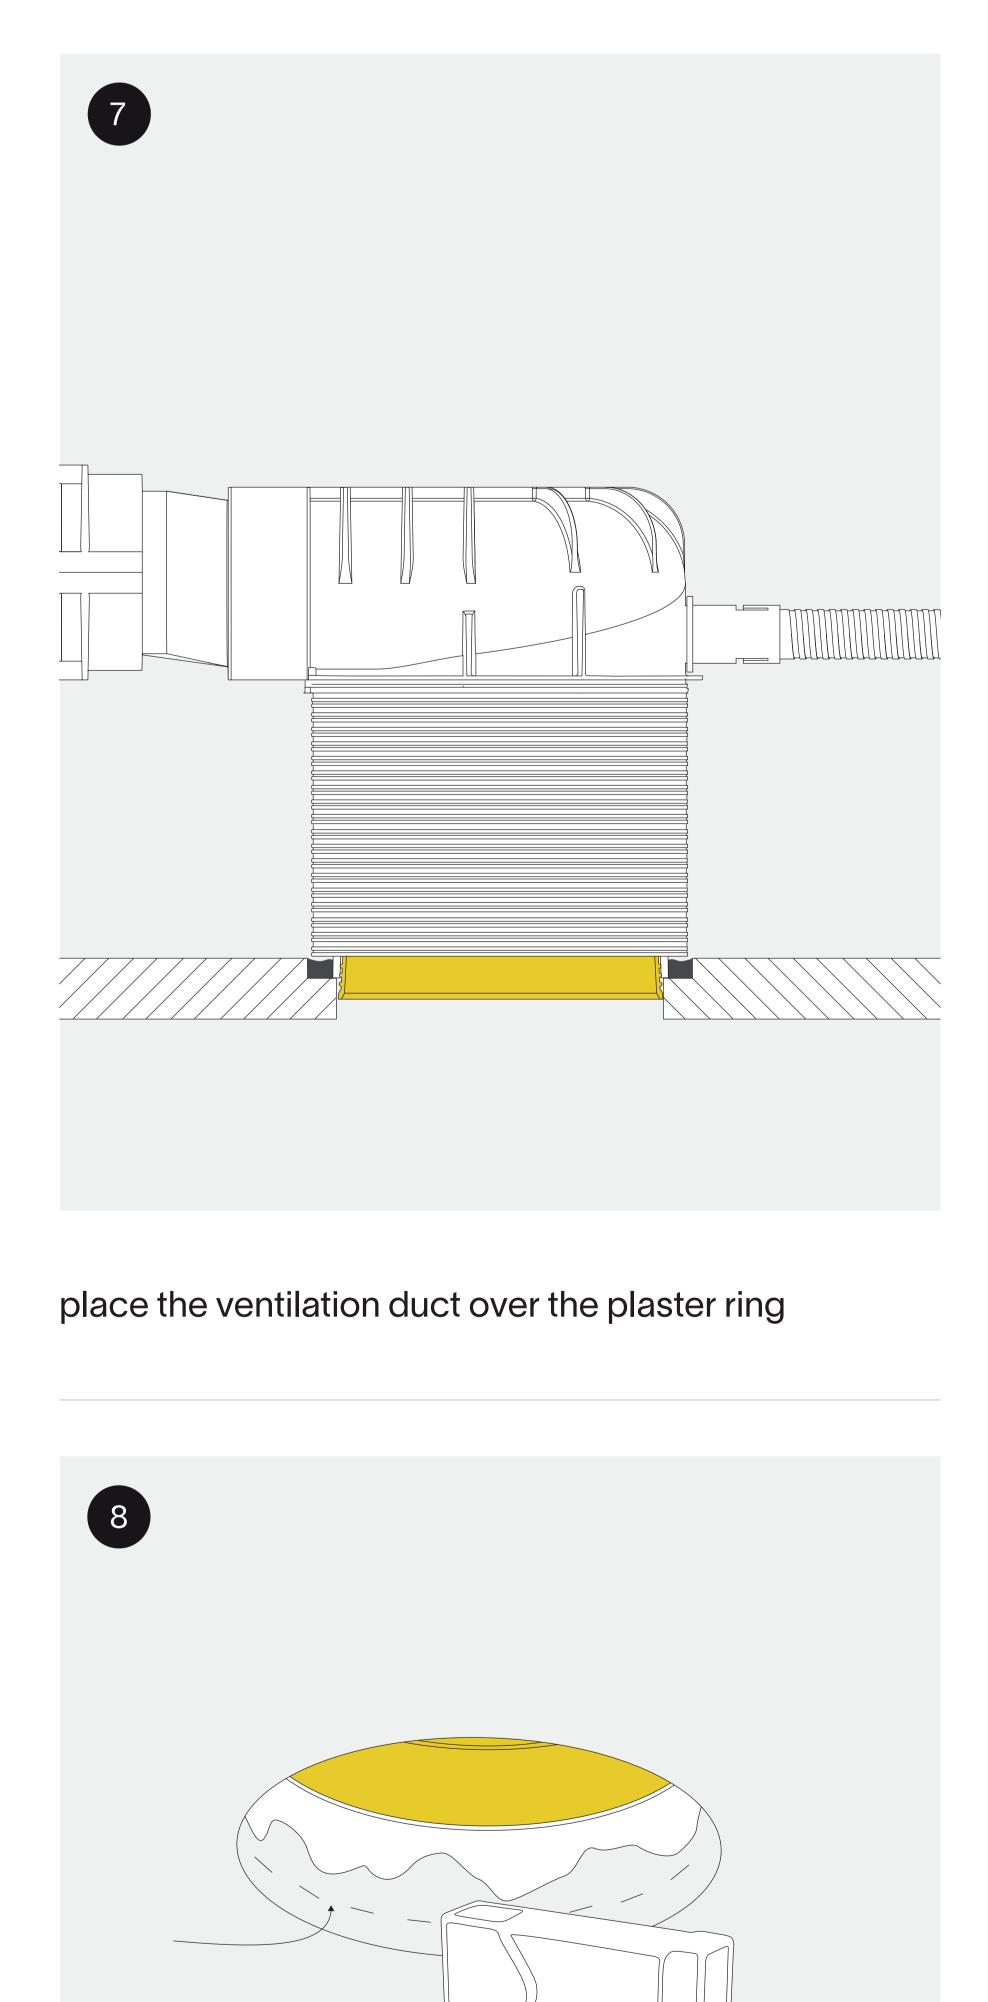

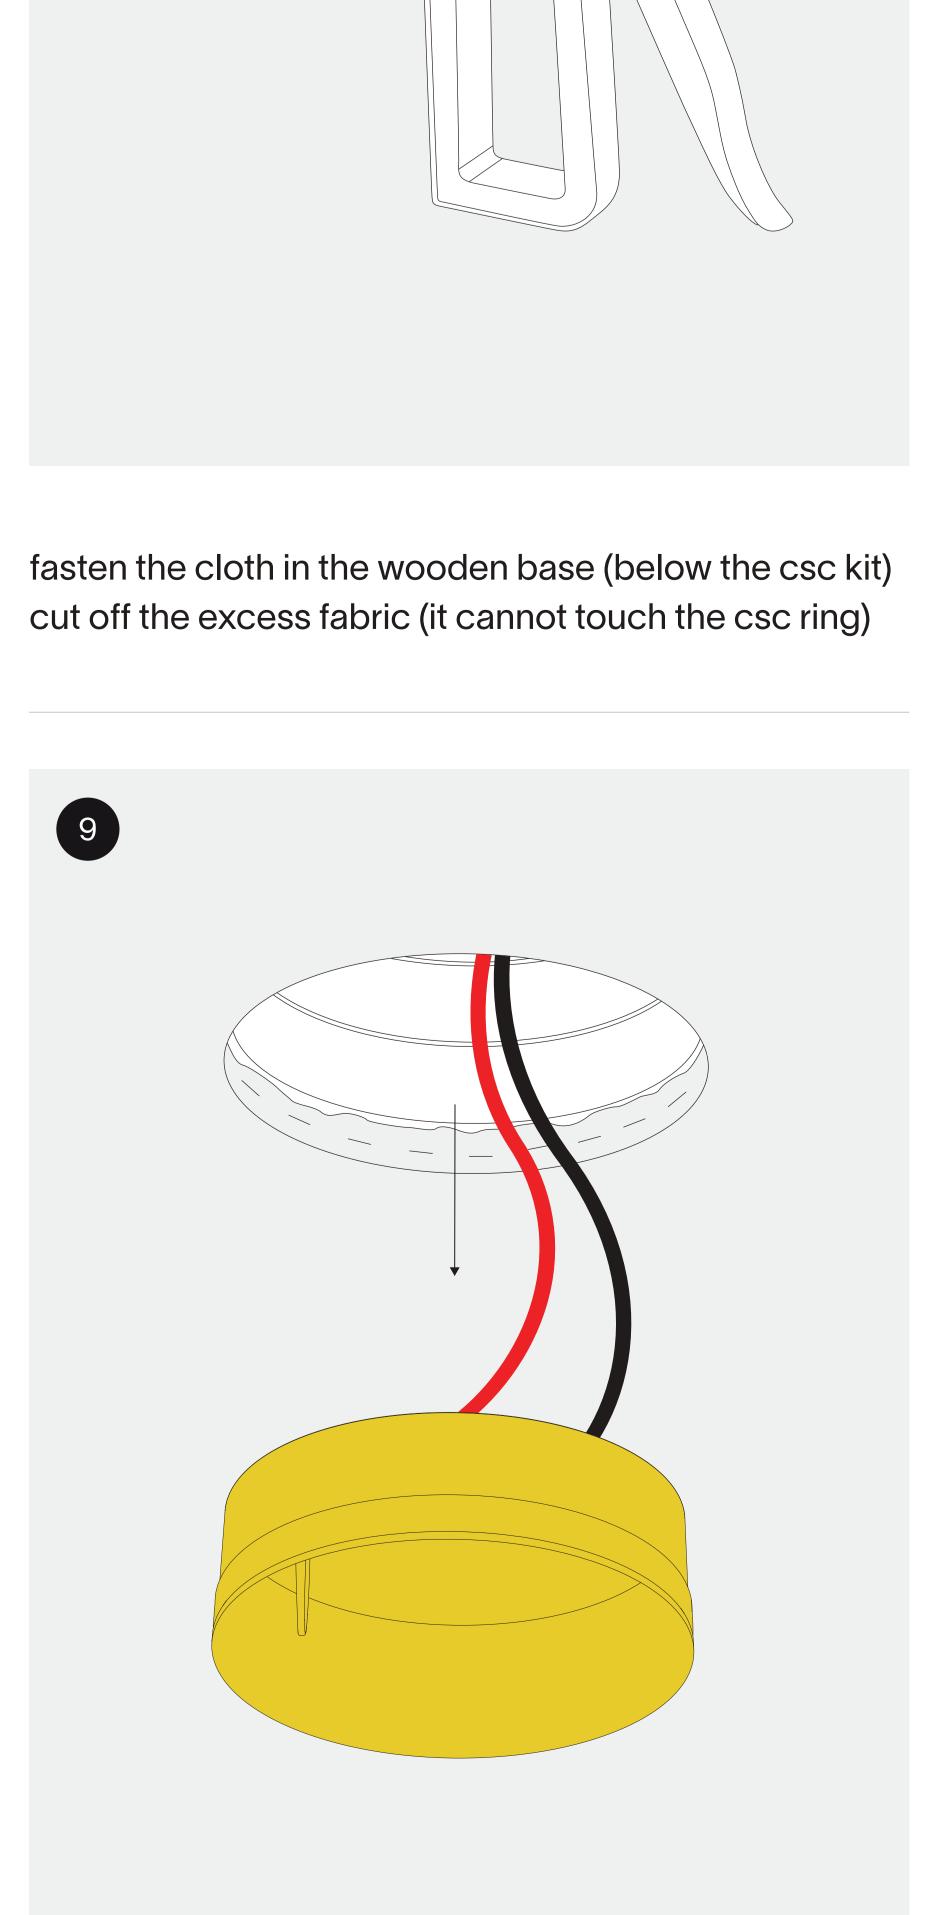

remove the yellow lid just before installing the fixture thank you for choosing prado

prado.eu Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use of if unskilled personnel attempts to repair a product.