


trim spot


installation instruction

1

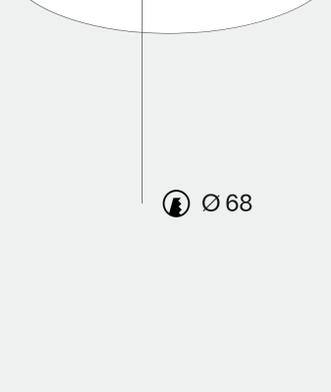


Cut a round hole (Ø 68). Consult the chosen luminaire tech specs for required height and free air dimensions.

2

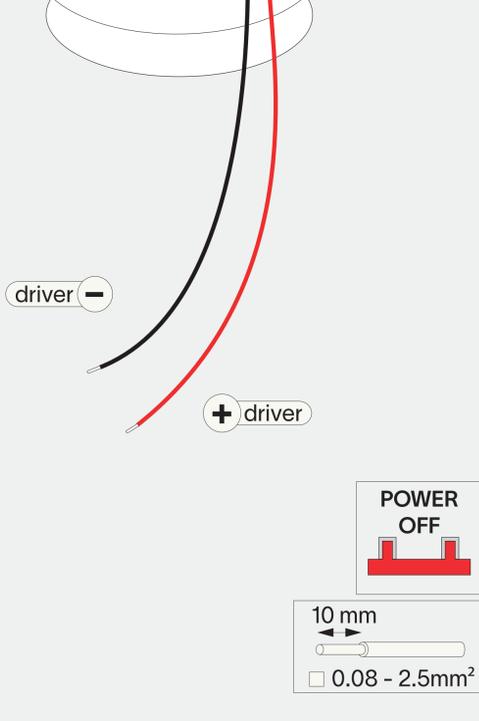

constant current (mA)	typical forward voltage (V)	typical power (W)
350	16,9	5,9
500	17,4	8,7
700	18,2	12,7
850	18,5	15,7


3

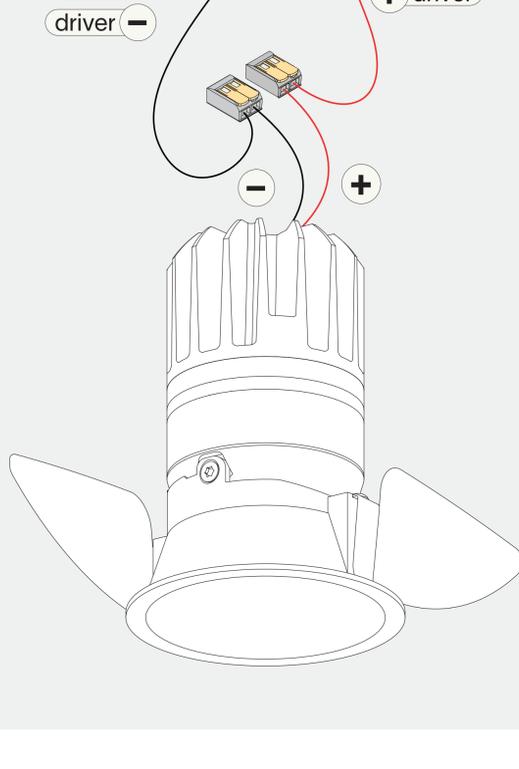

connect the wires with wago connectors for serial connection, respect polarity


combine with a prado LED-driver

4

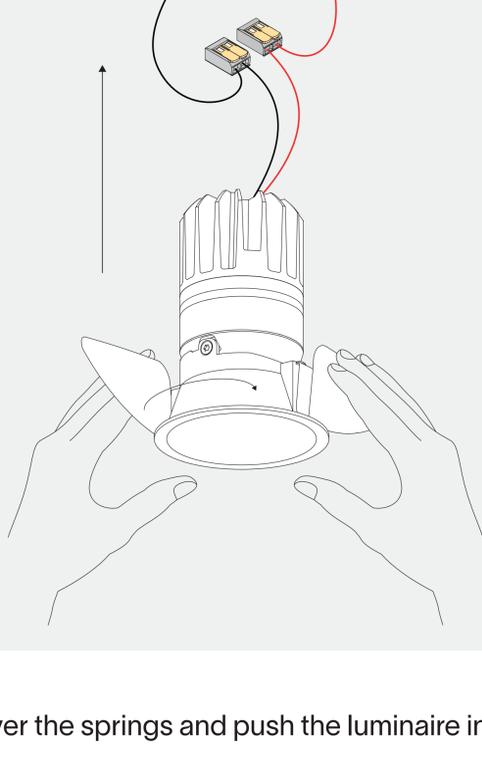

bend over the springs and push the luminaire into the ceiling


5

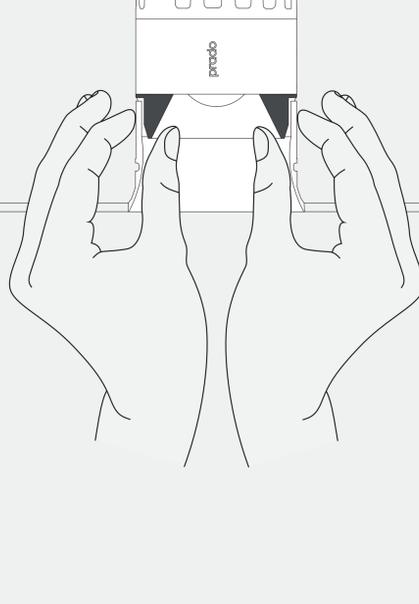

POWER ON

twist the luminaire as desired


recommended free air dimensions

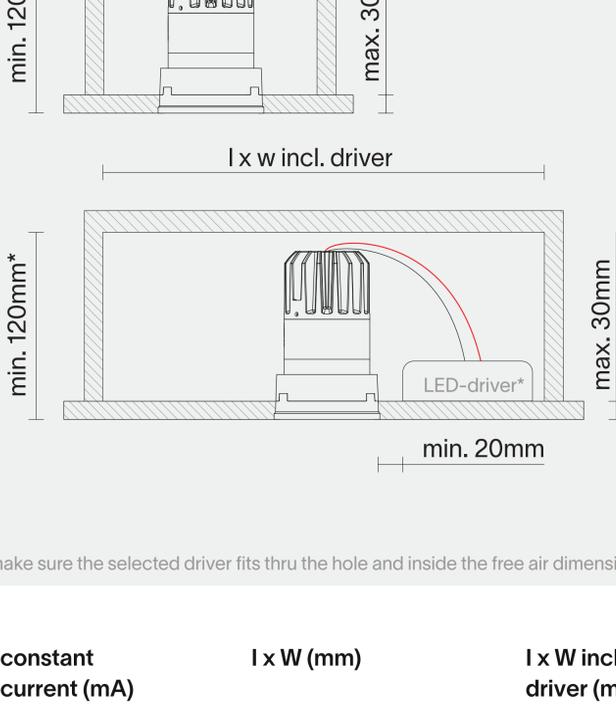

*make sure the selected driver fits thru the hole and inside the free air dimensions

constant current (mA)	I x W (mm)	I x W incl. driver (mm)
500	100 x 100	200 x 200
700	200 x 200	250 x 250
850	350 x 350	350 x 350

thank you for choosing prado



Replace glass lens when broken. Luminaire shall only be used together with glass lens.