




surface spot mini installation instruction

1

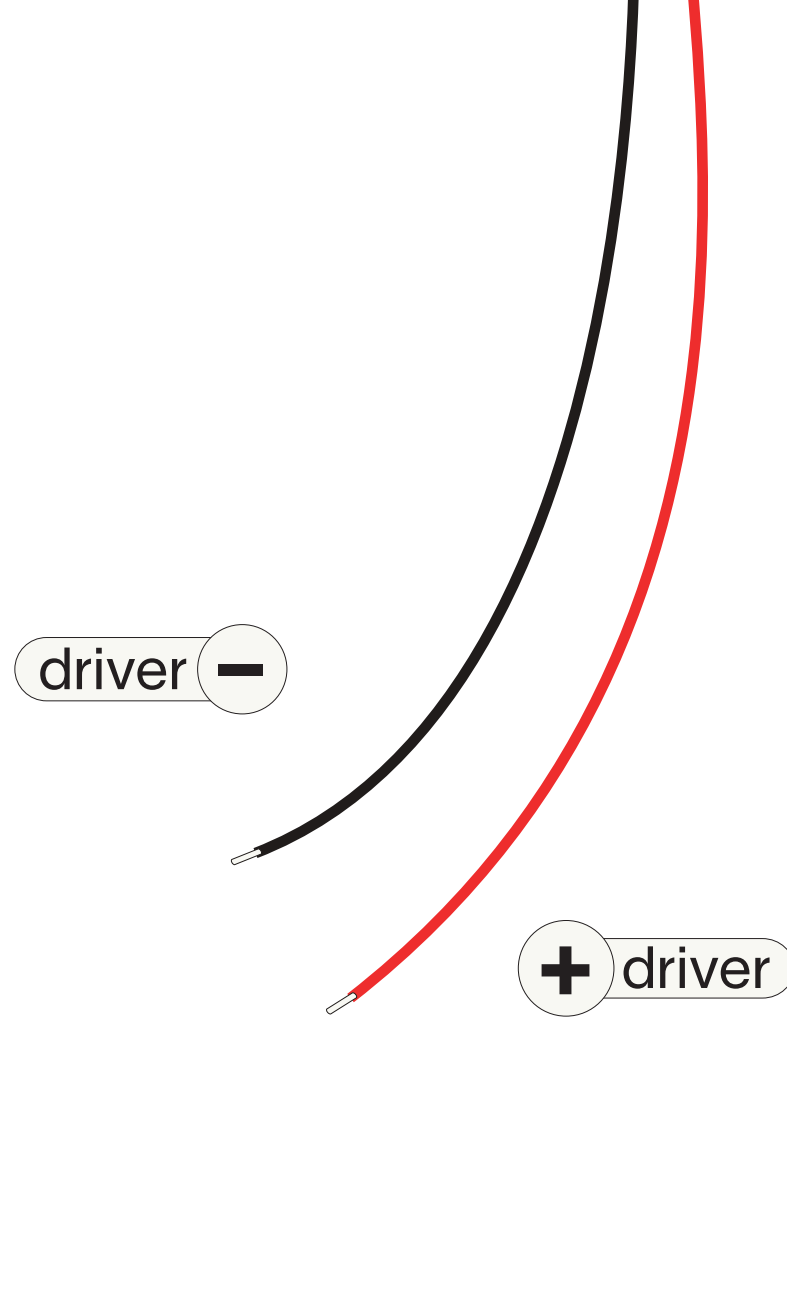


Turn the power off.

2

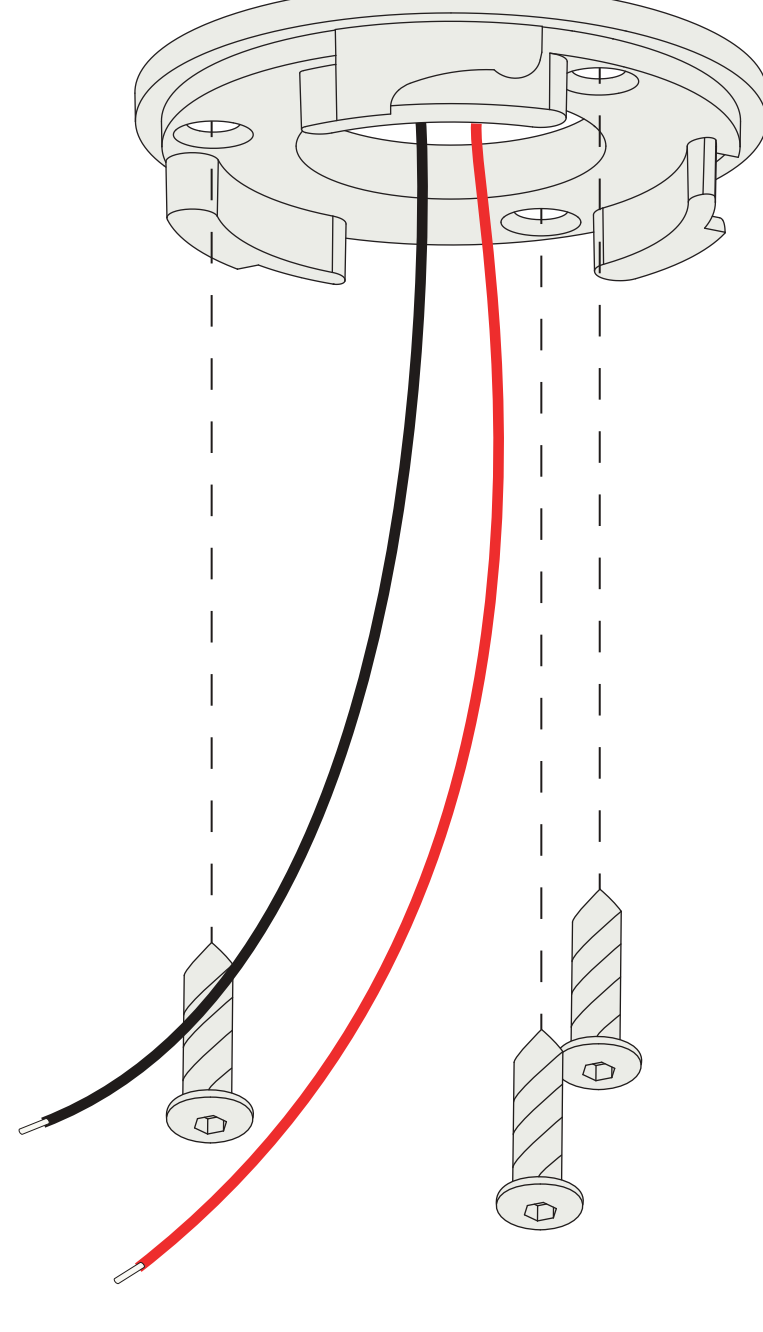


Fix the mounting plate on the ceiling with appropriate screws

3

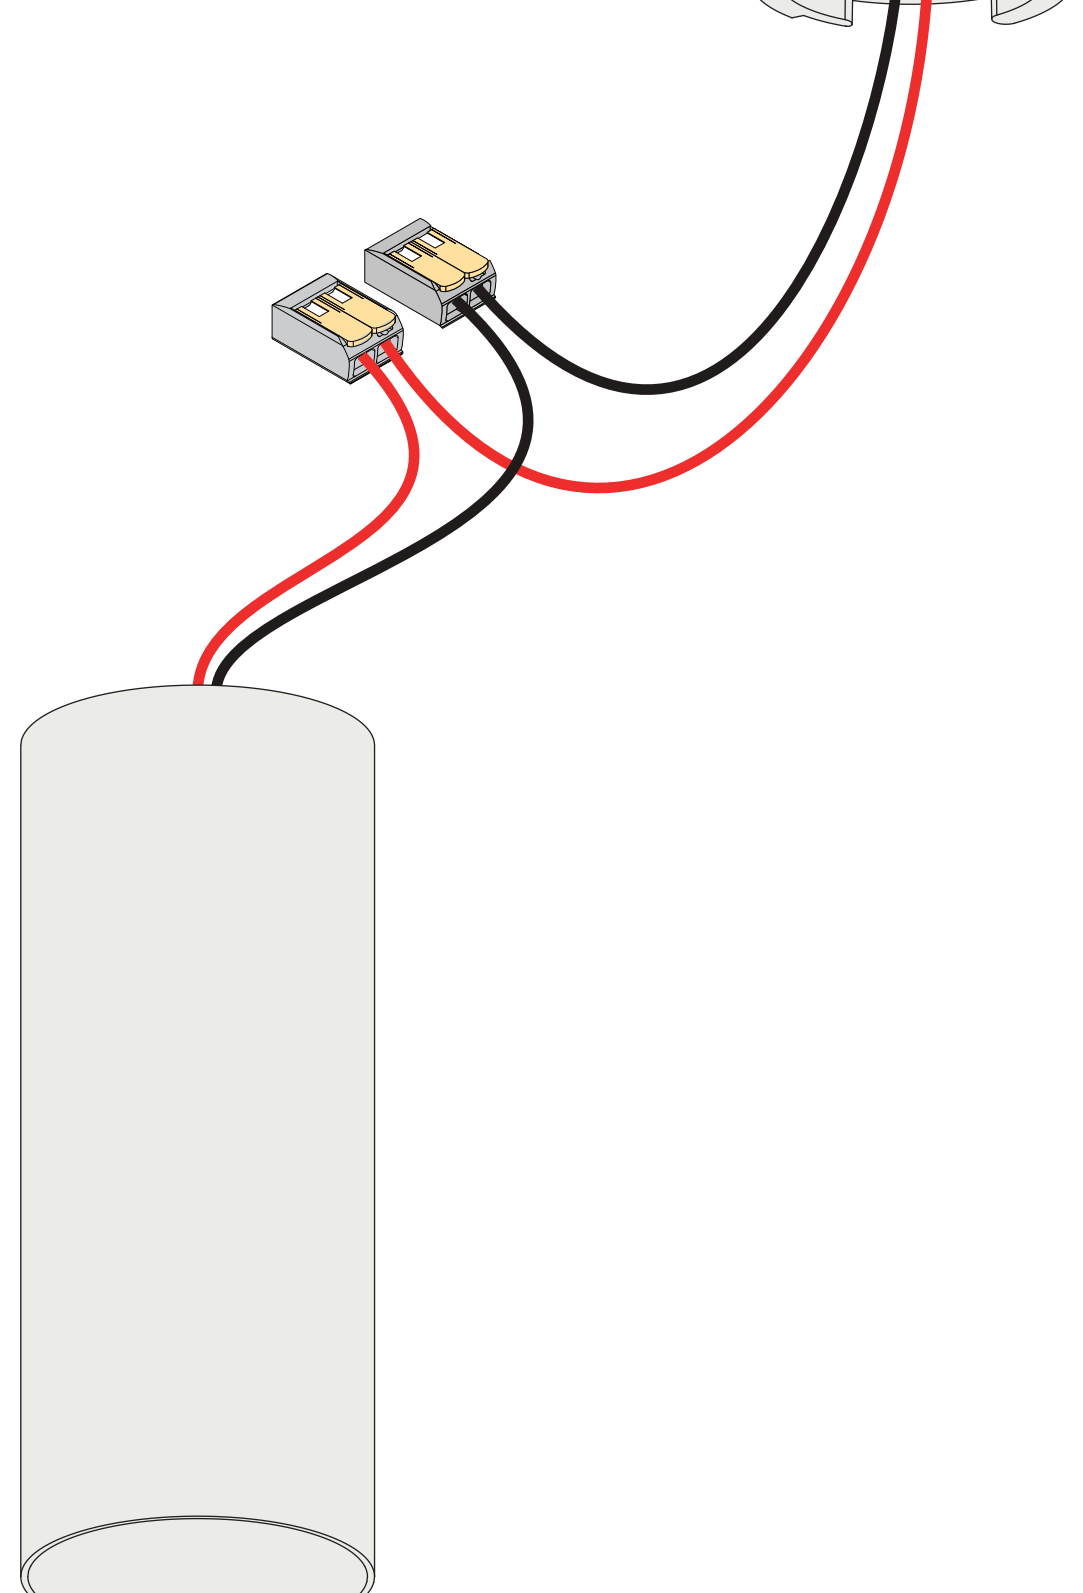


Connect the wires with the wago connectors.
For serial connection, respect polarity.
Combine with a prado LED-driver.

4

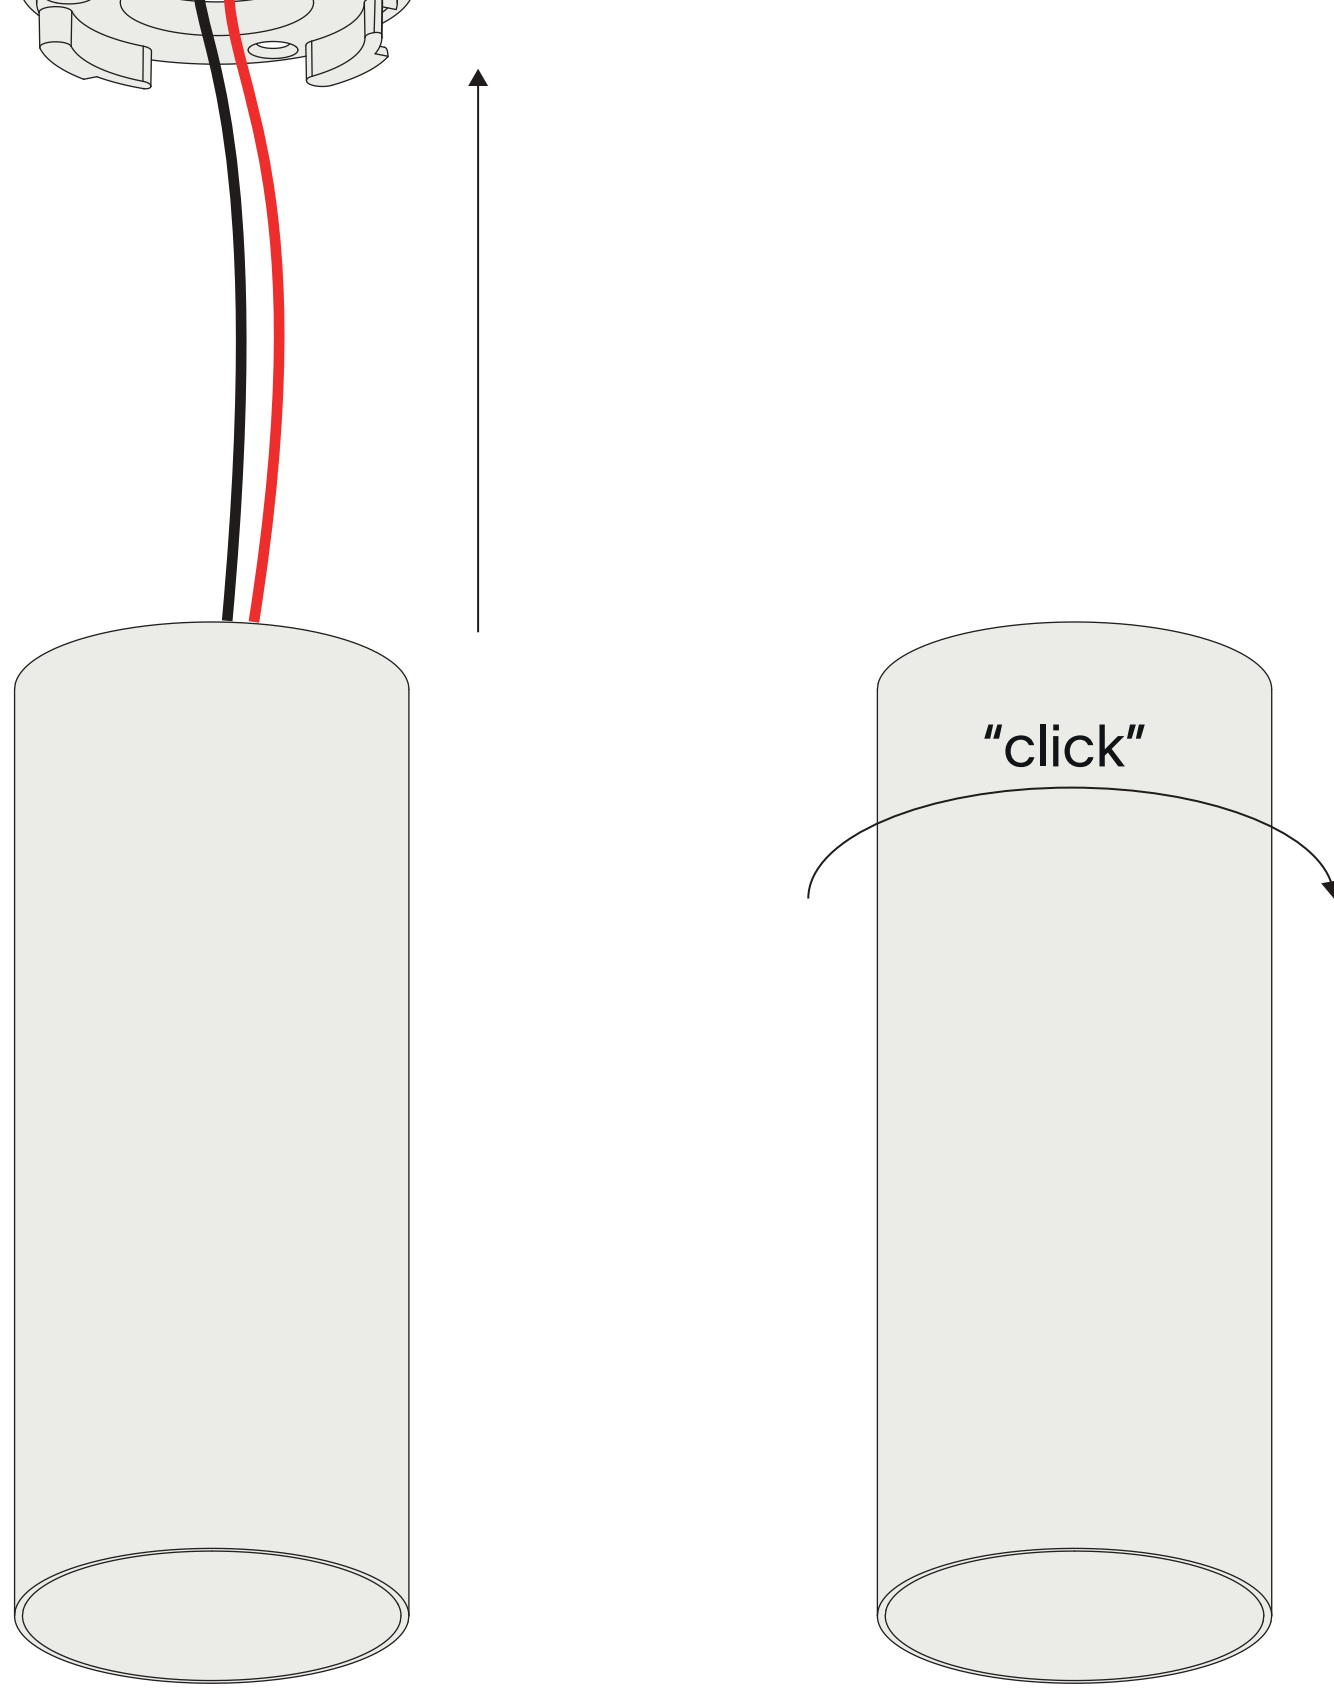

Slide the luminaire over the connecting plate and turn until it clicks.

5

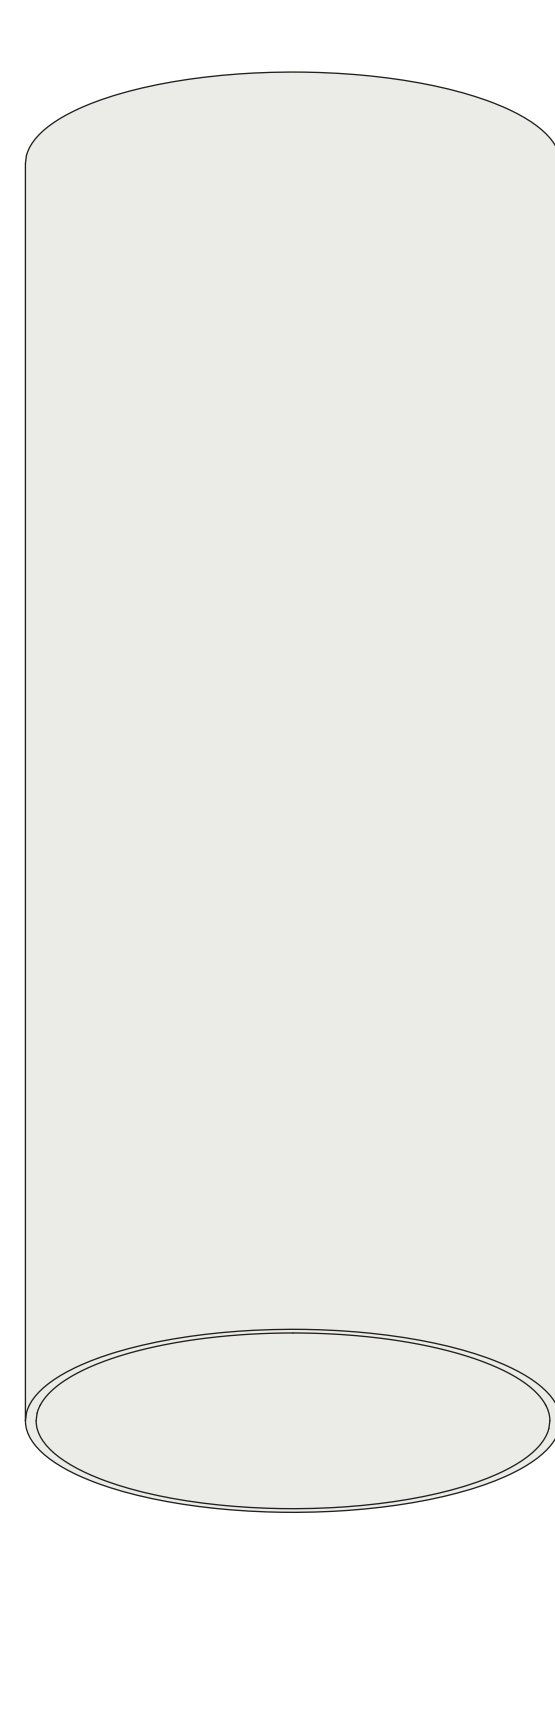

Turn the power back on.
Thank you for choosing prado

