


light + motion | trimless 2.0


installation instruction

1

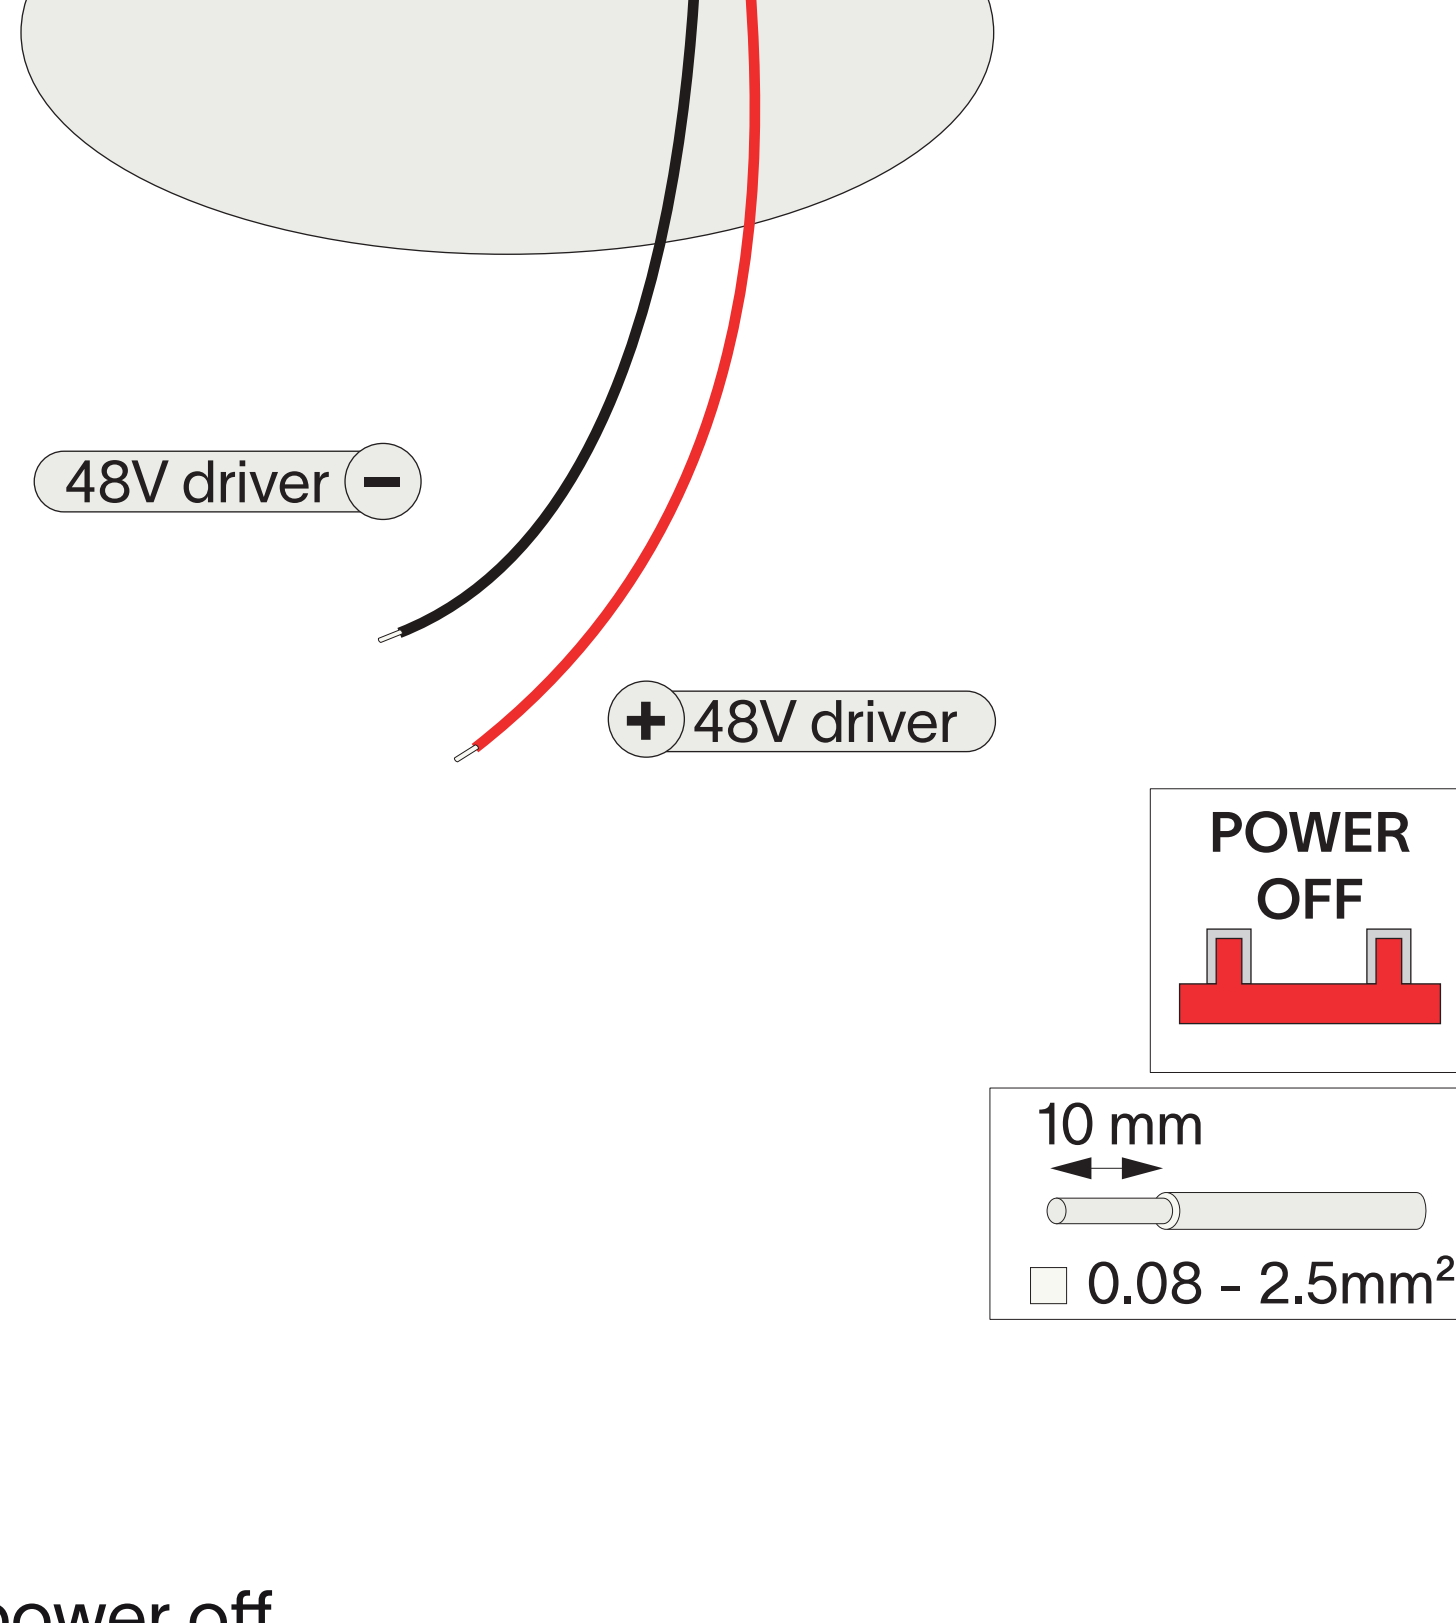


Turn the power off.

2

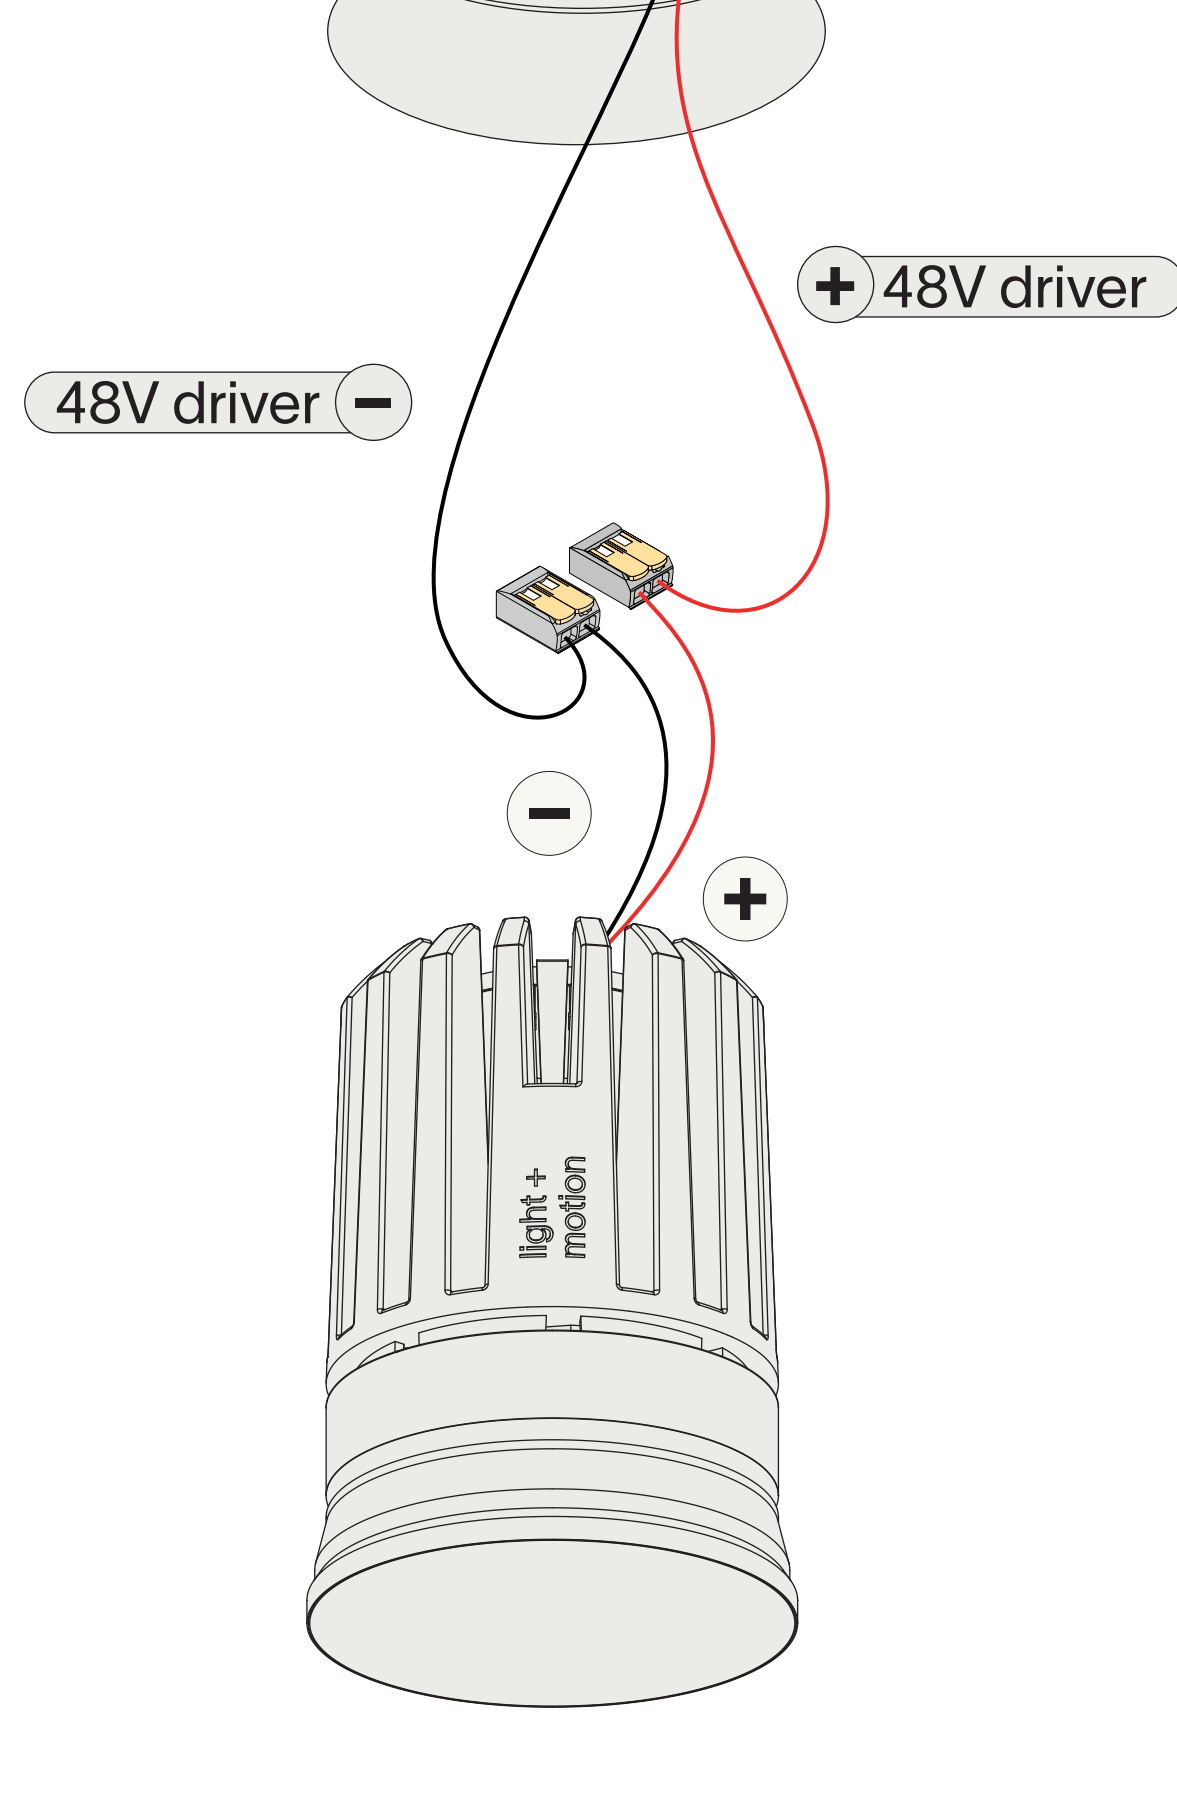


Connect the wires with wago connectors for parallel connection, respect polarity. Combine with a prado LED-driver.

3

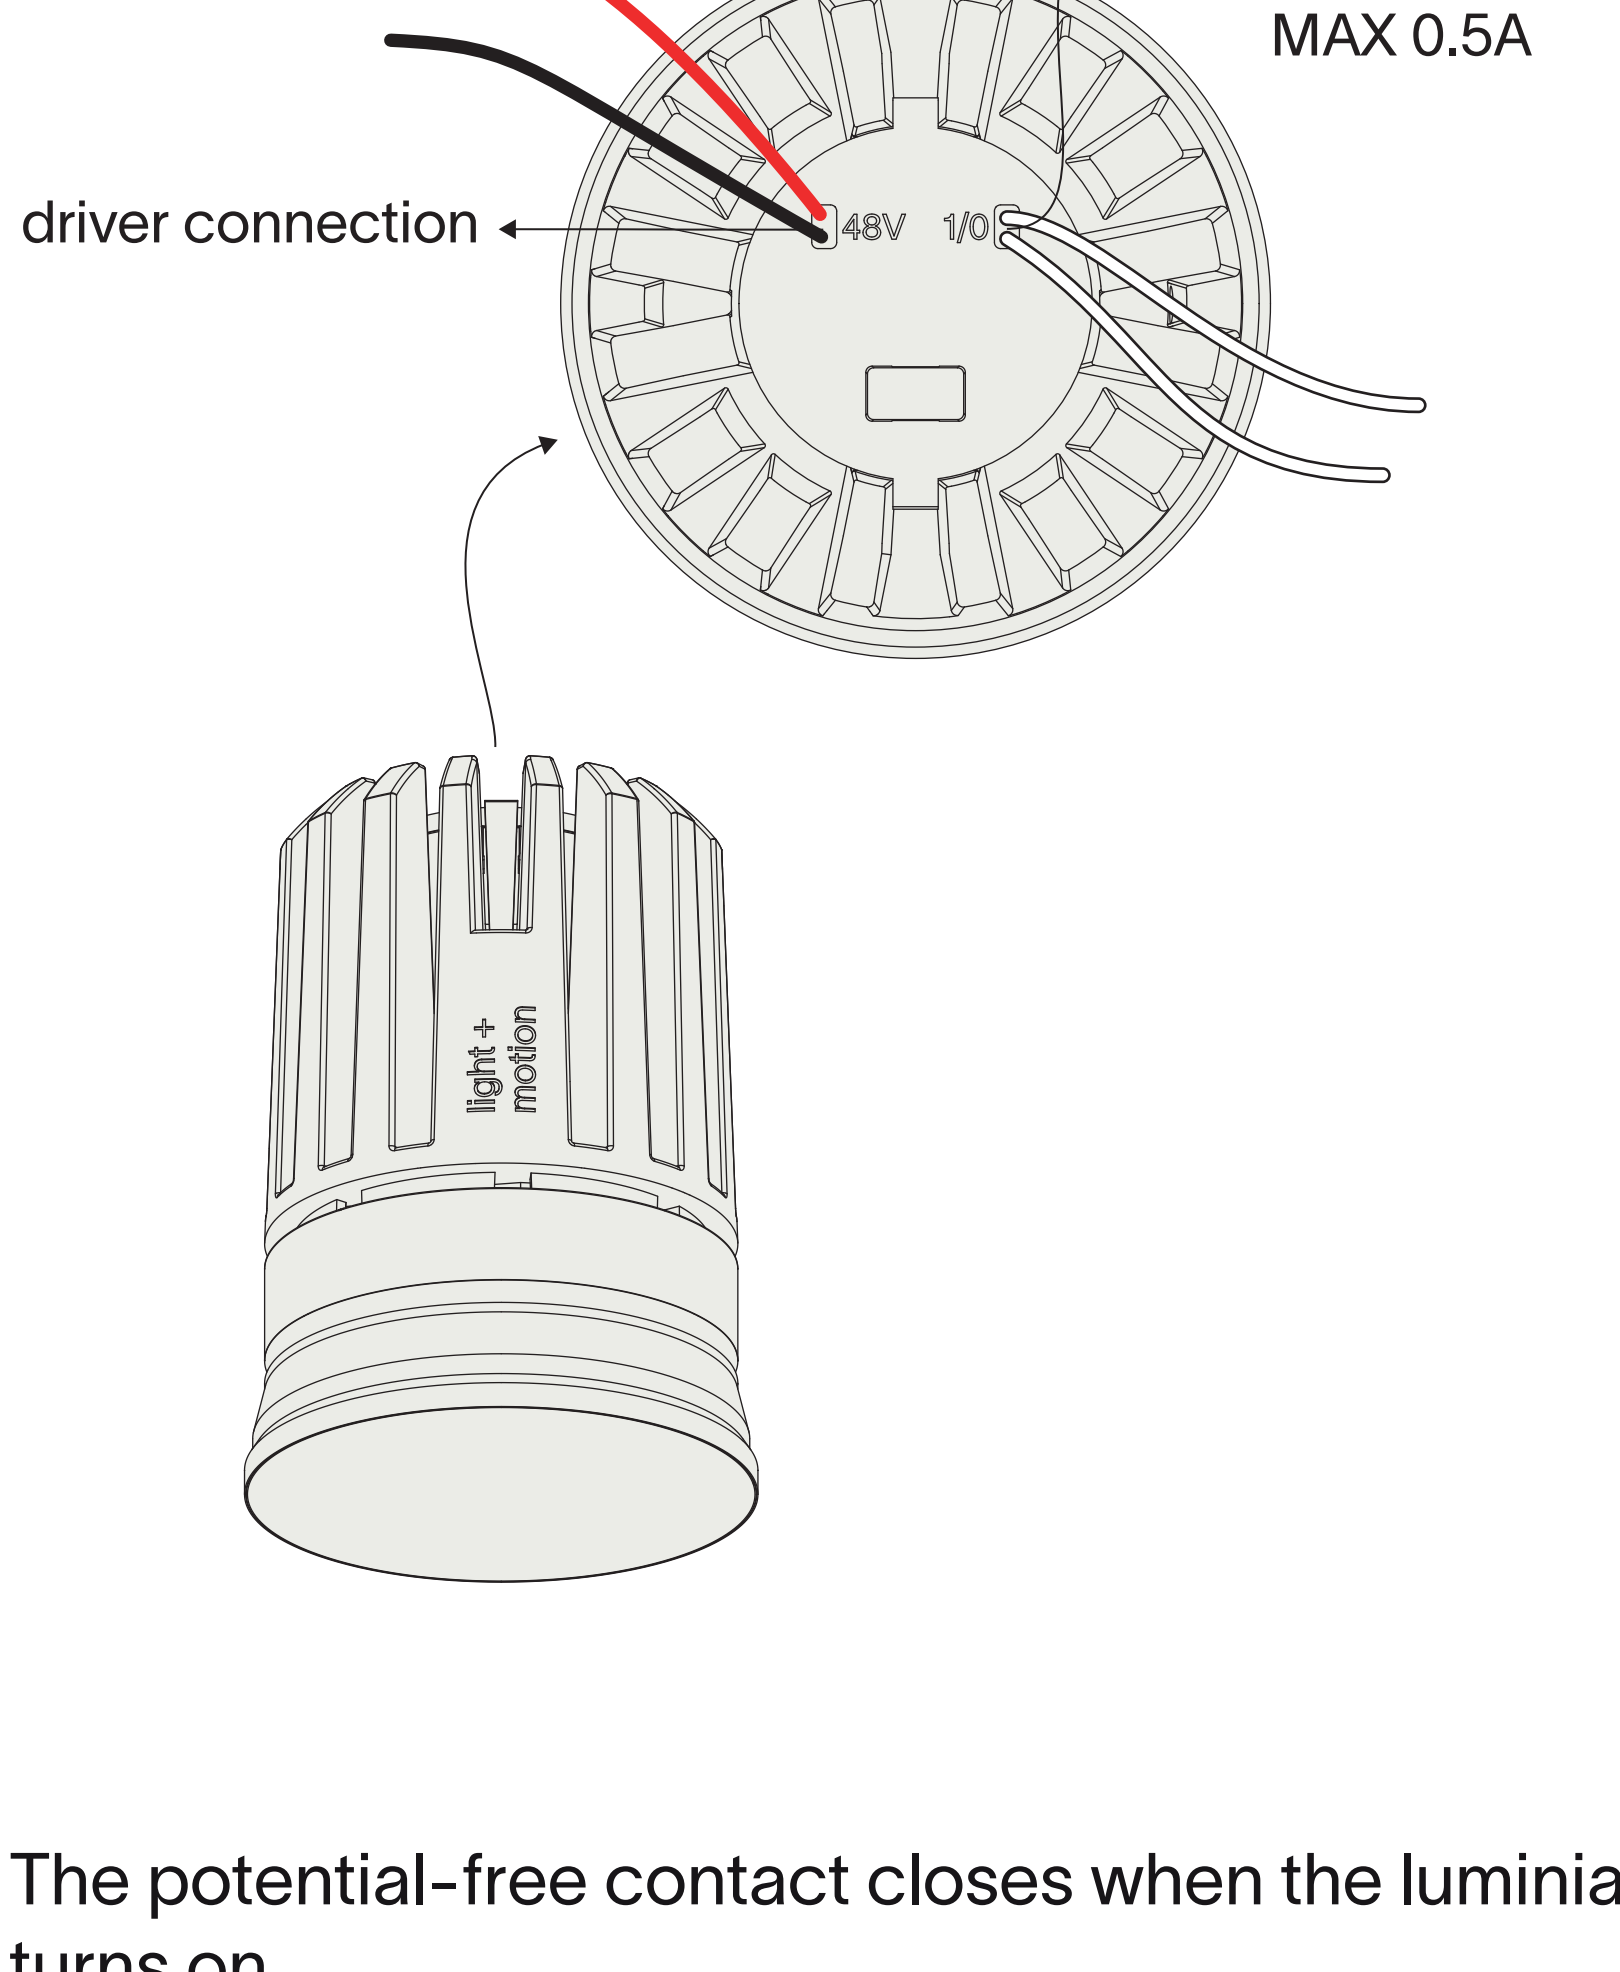


The potential-free contact closes when the luminaire turns on.

4

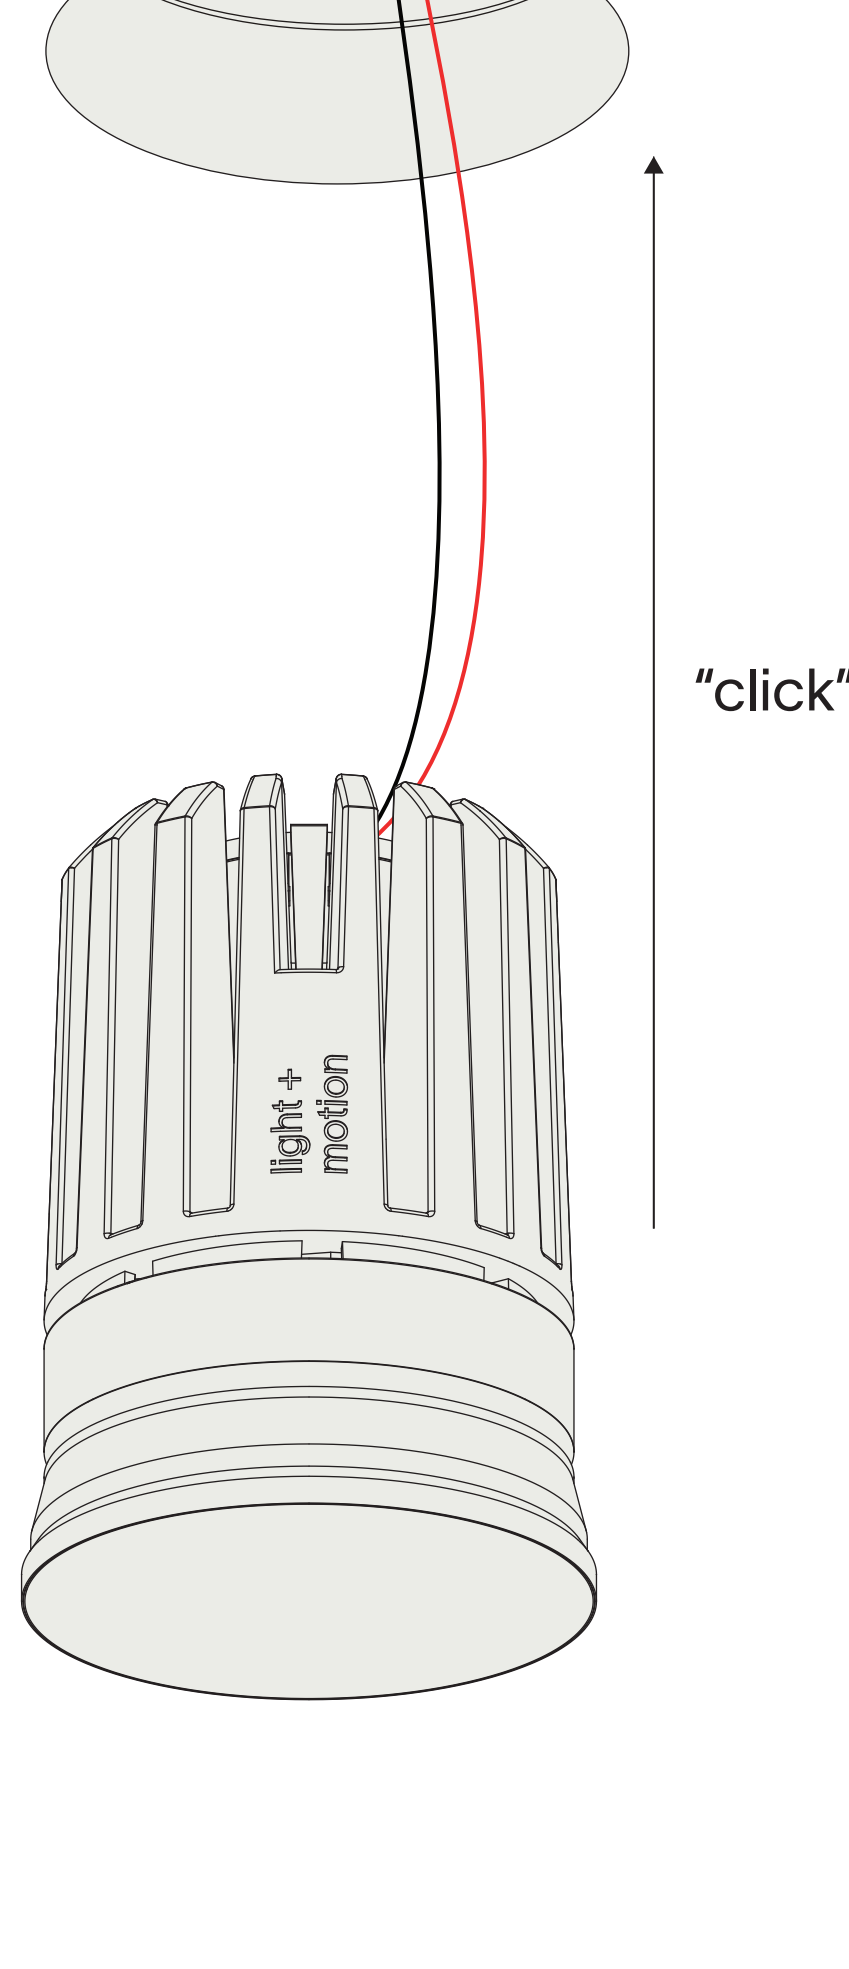


Gently click the luminaire into the plasterkit.

5

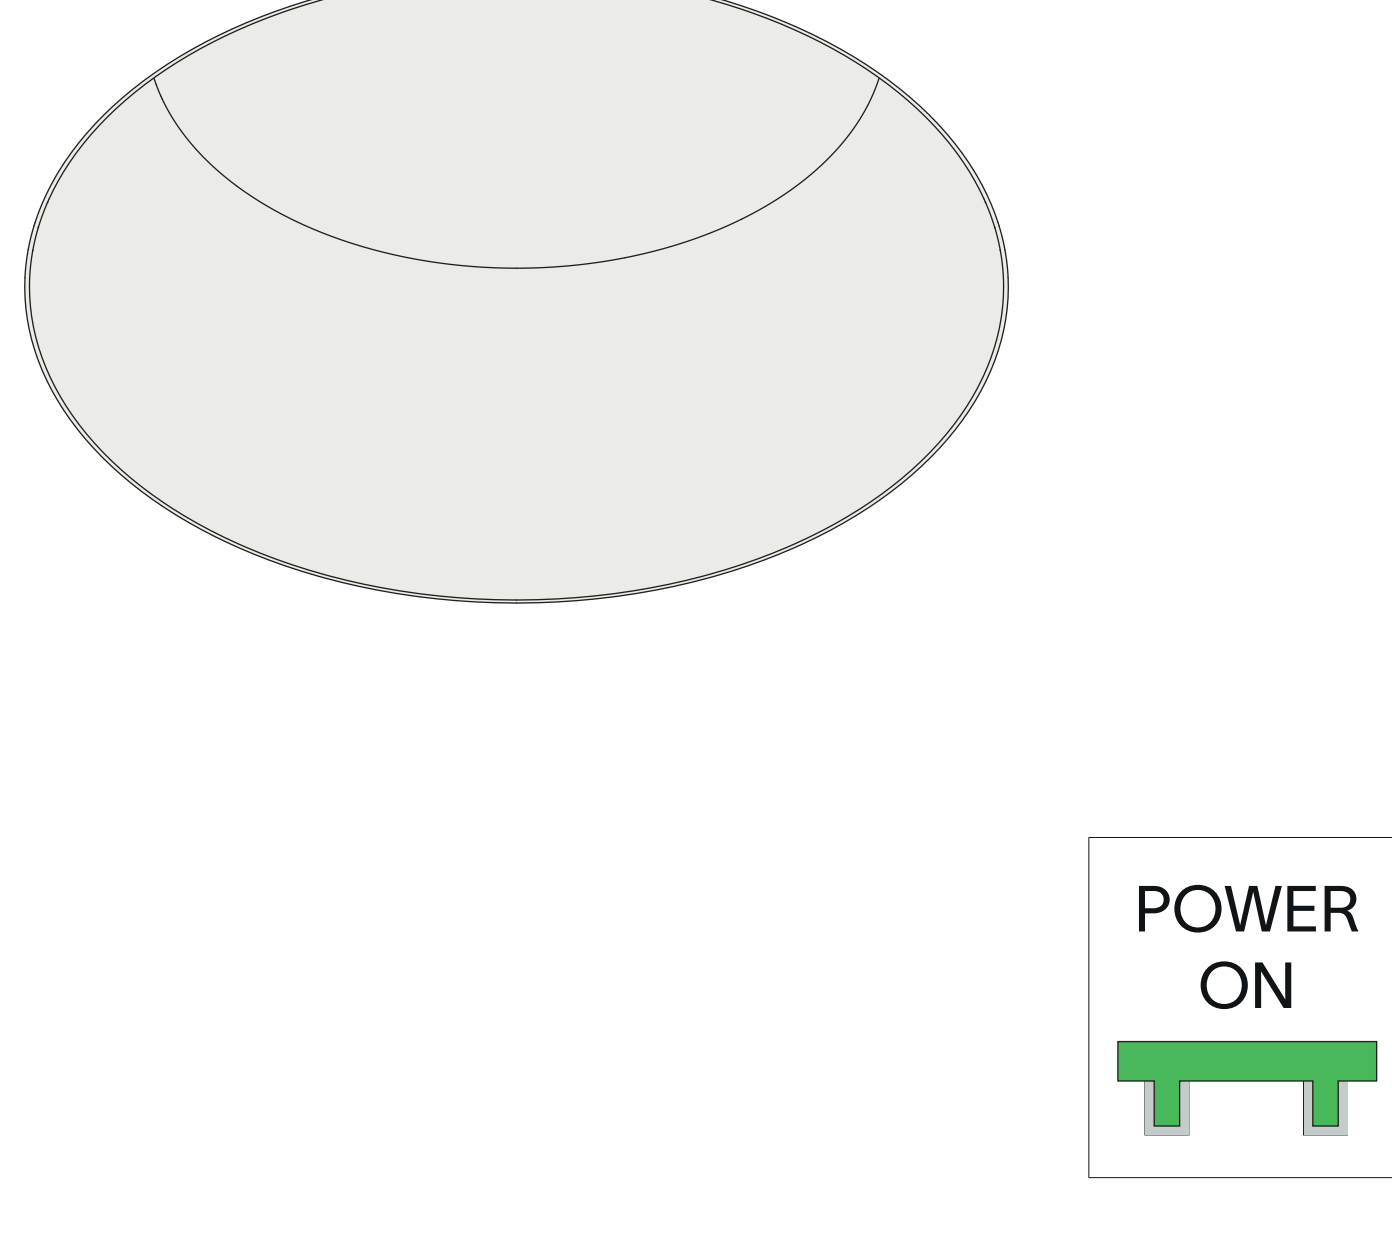

Turn the power back on. The luminaire will turn on when the ambient light is low enough and movement is detected. After the last detection of movement, the luminaire will stay on for 5 minutes. These are default settings and cannot be adjusted.

6

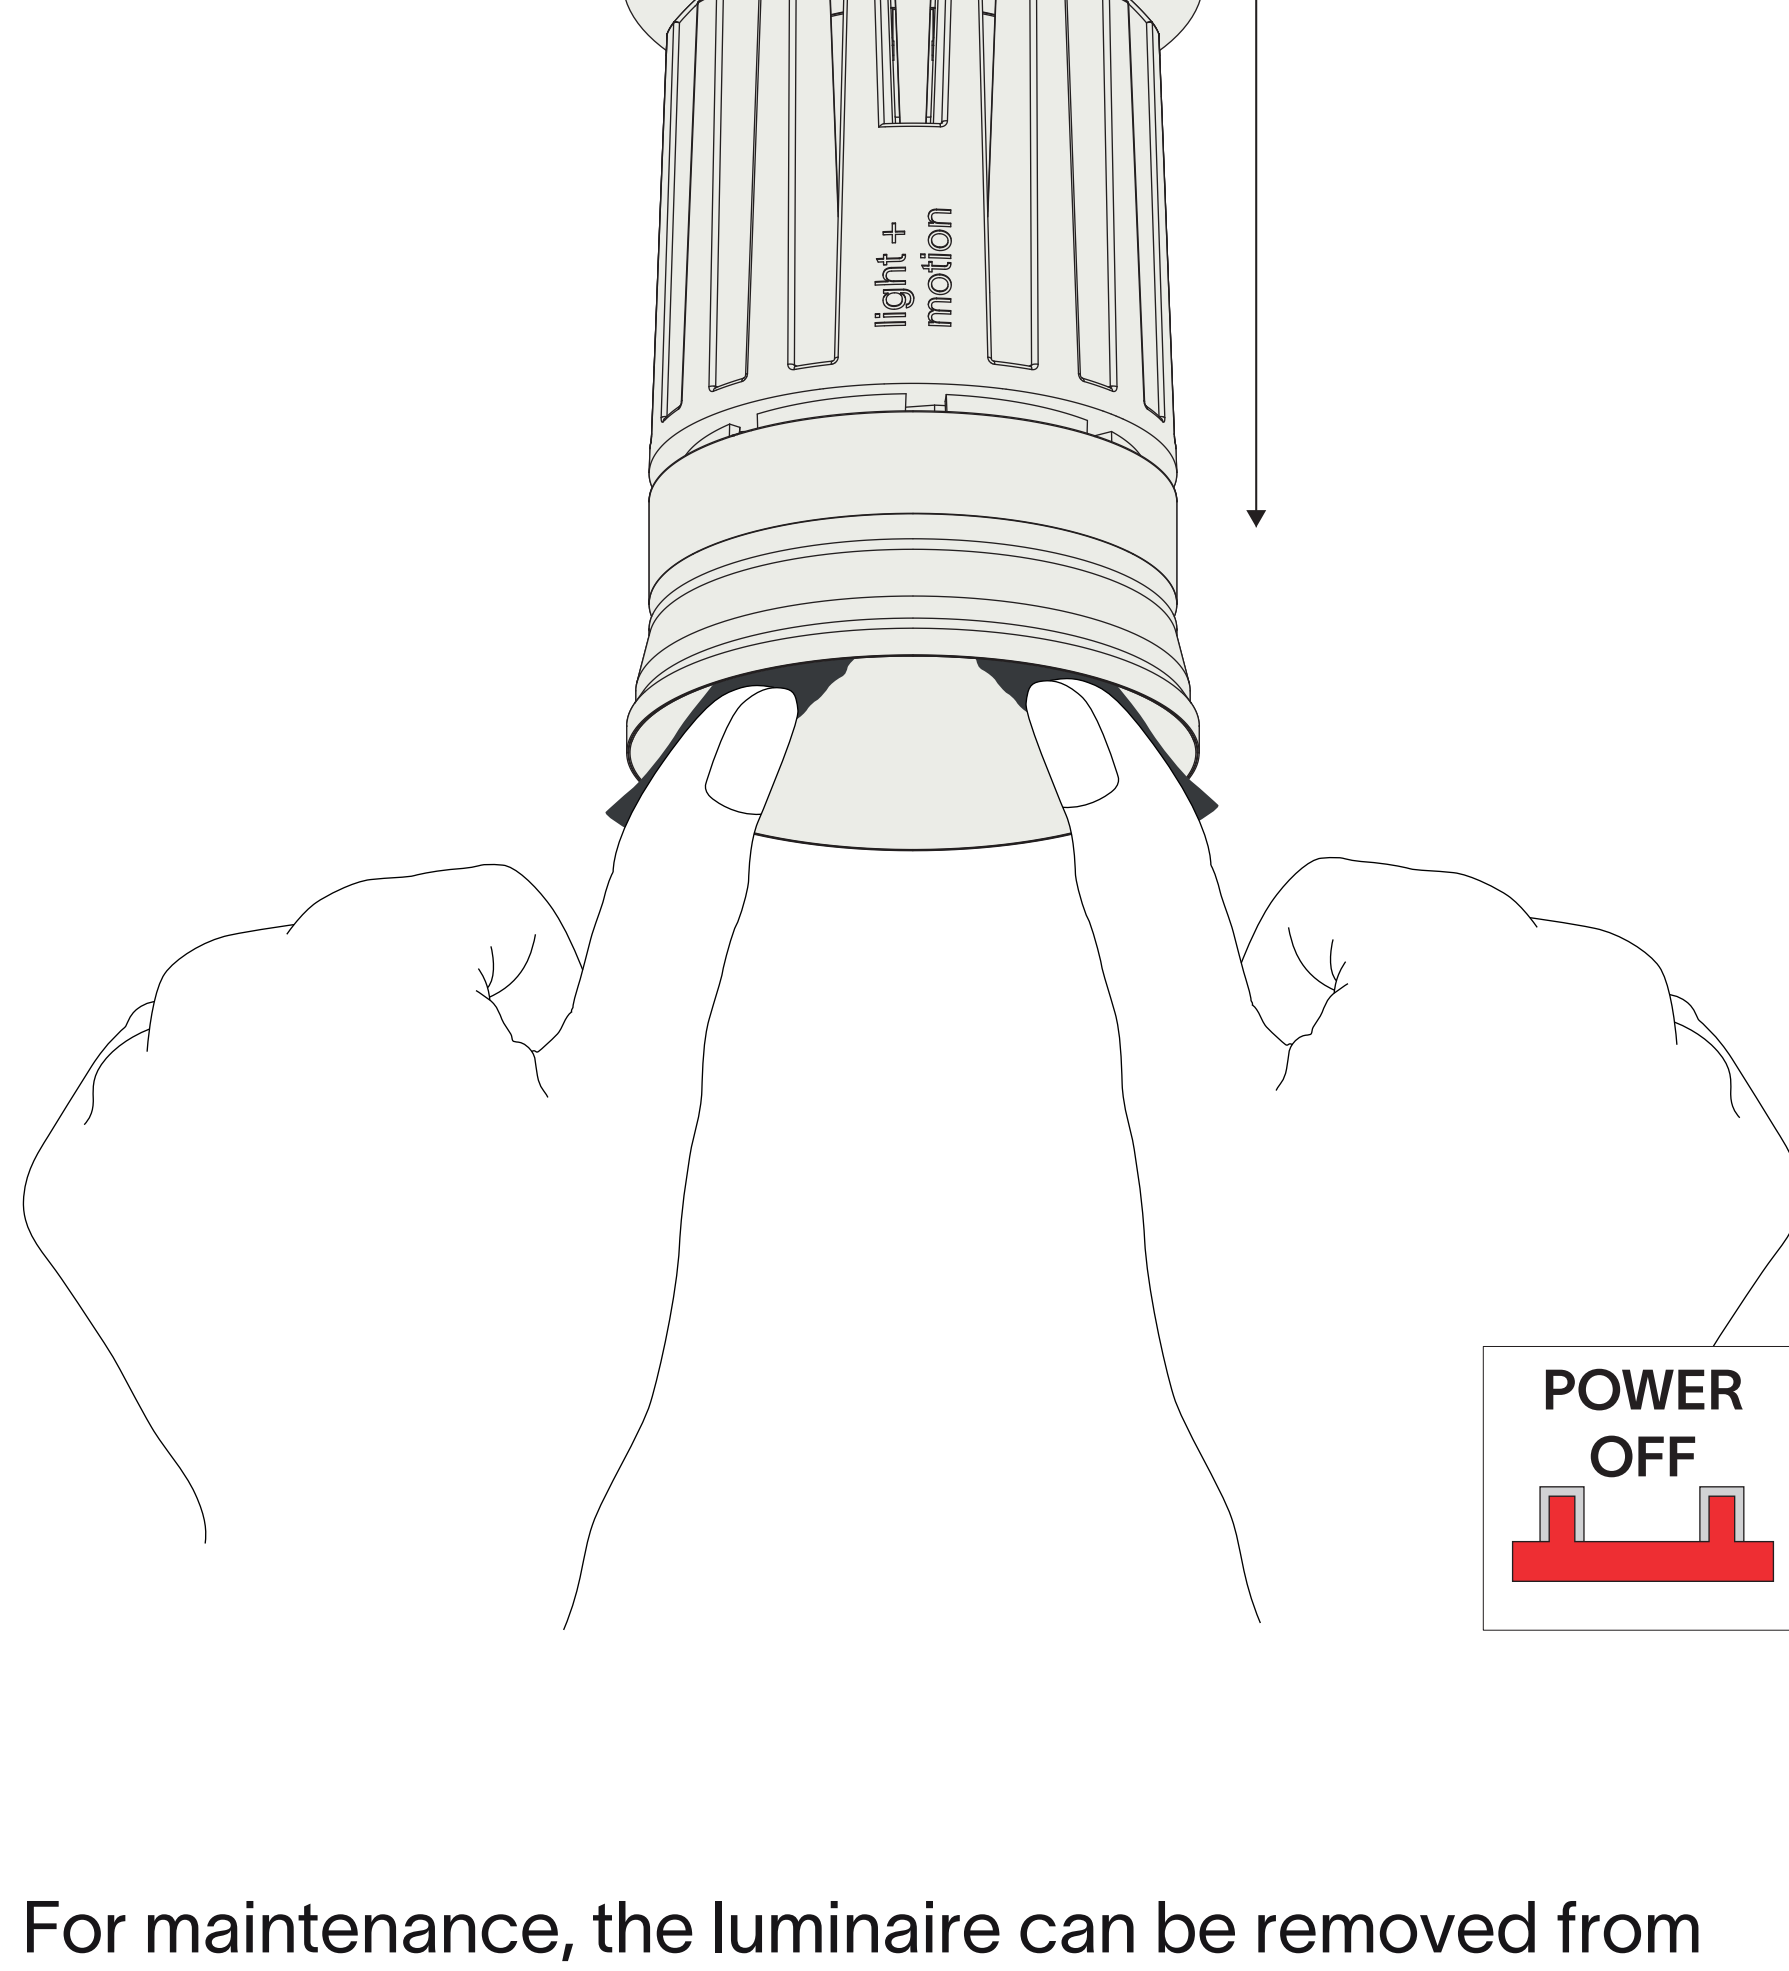

For maintenance, the luminaire can be removed from the plasterkit using duct tape.

thank you for choosing prado

