


# trim spot adjustable 2.0


## installation instruction

1

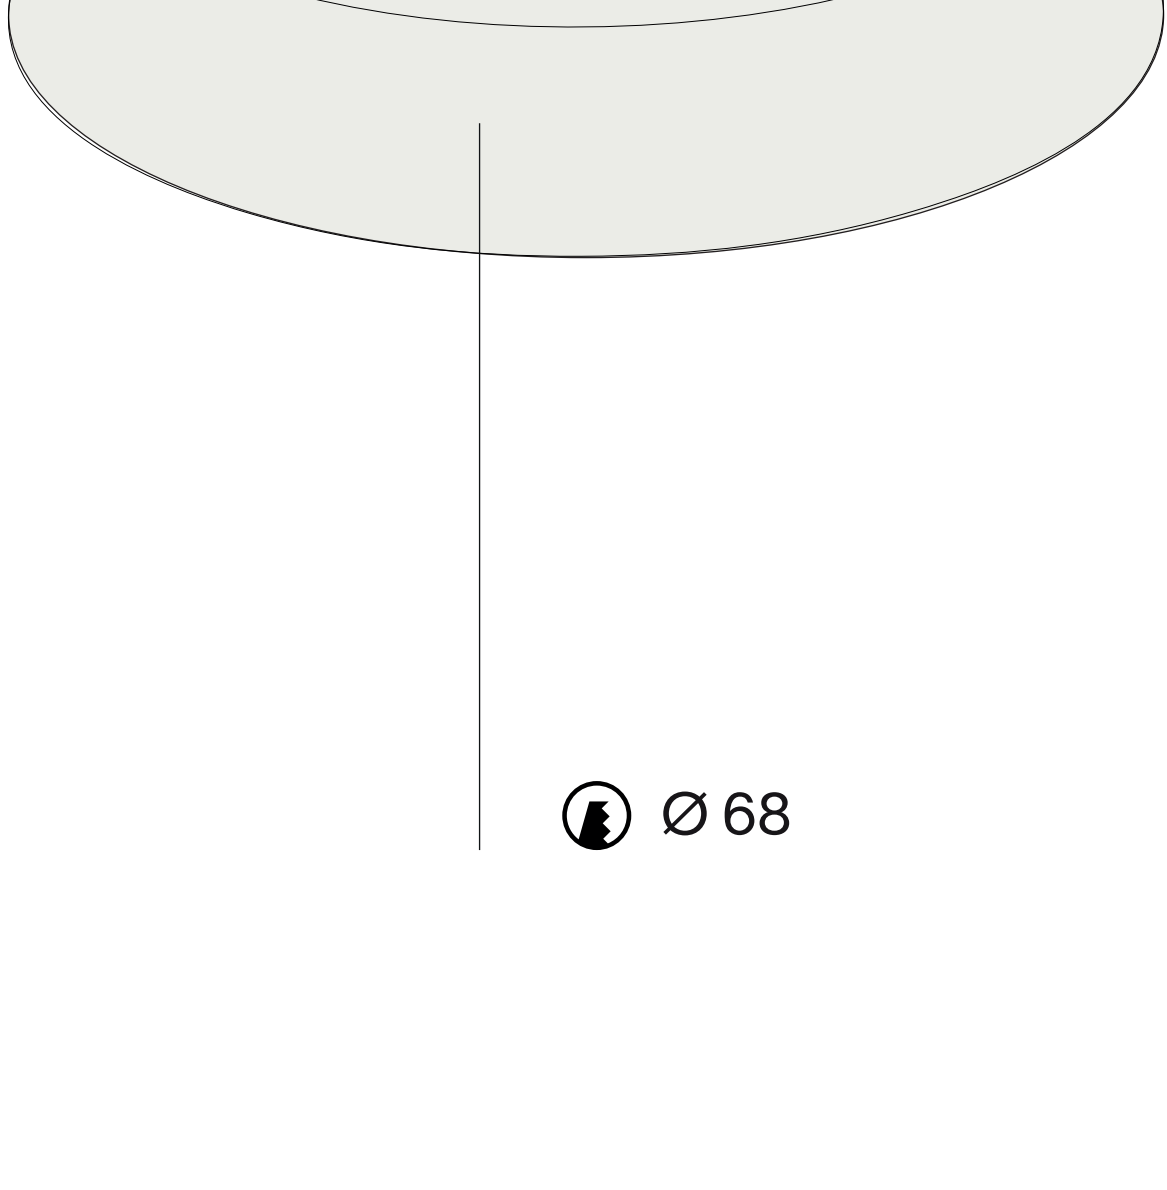


Cut a round hole (Ø 68). Consult the chosen luminaire tech specs for required height and free air dimensions.

2

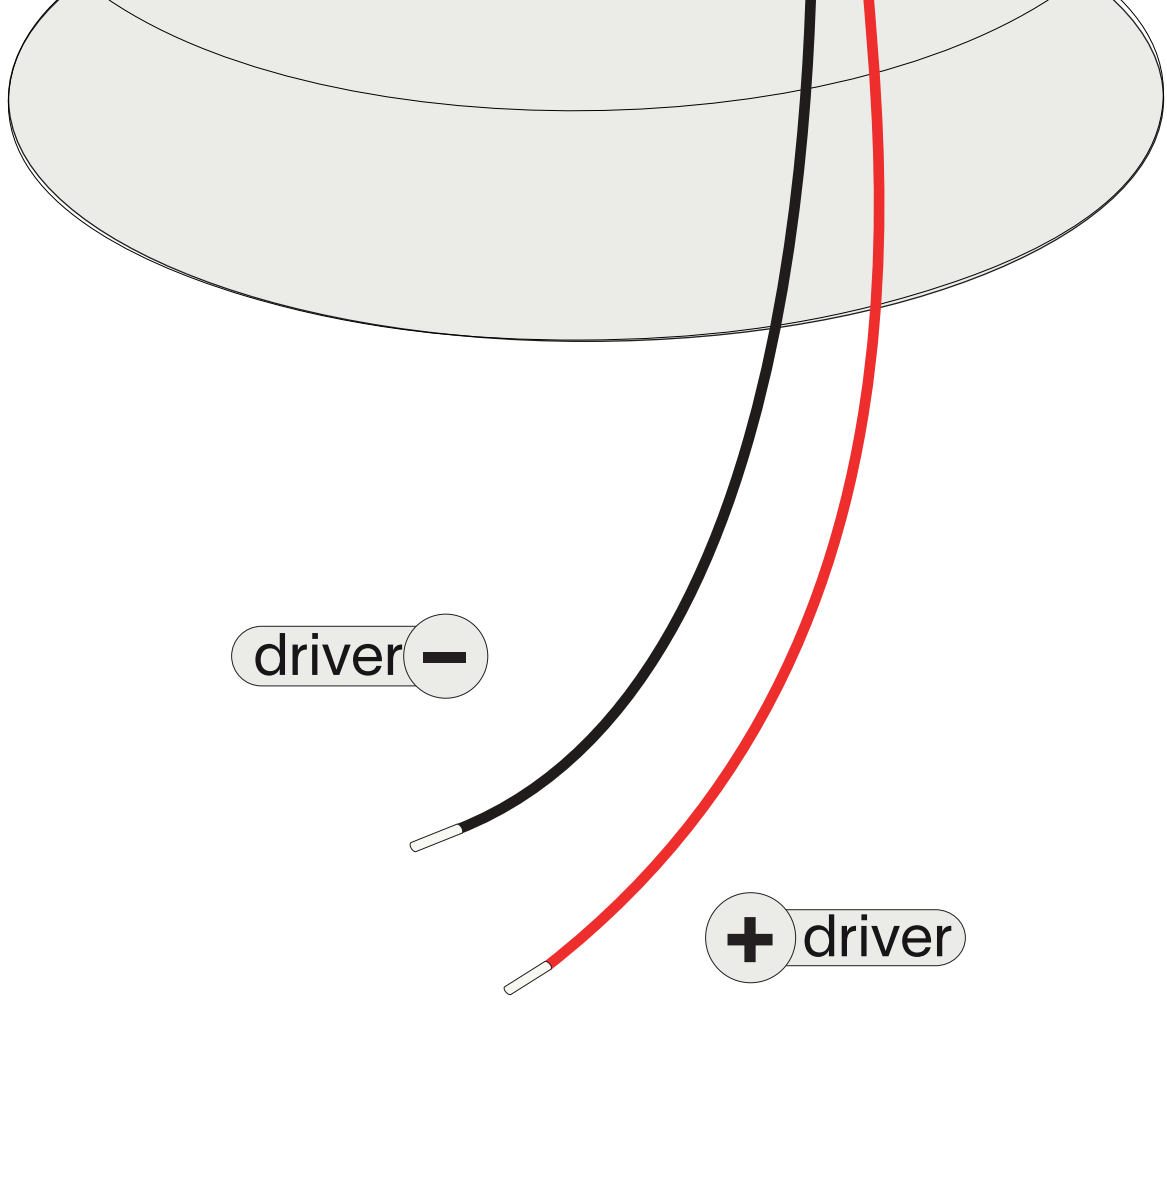


Turn the power off.

3


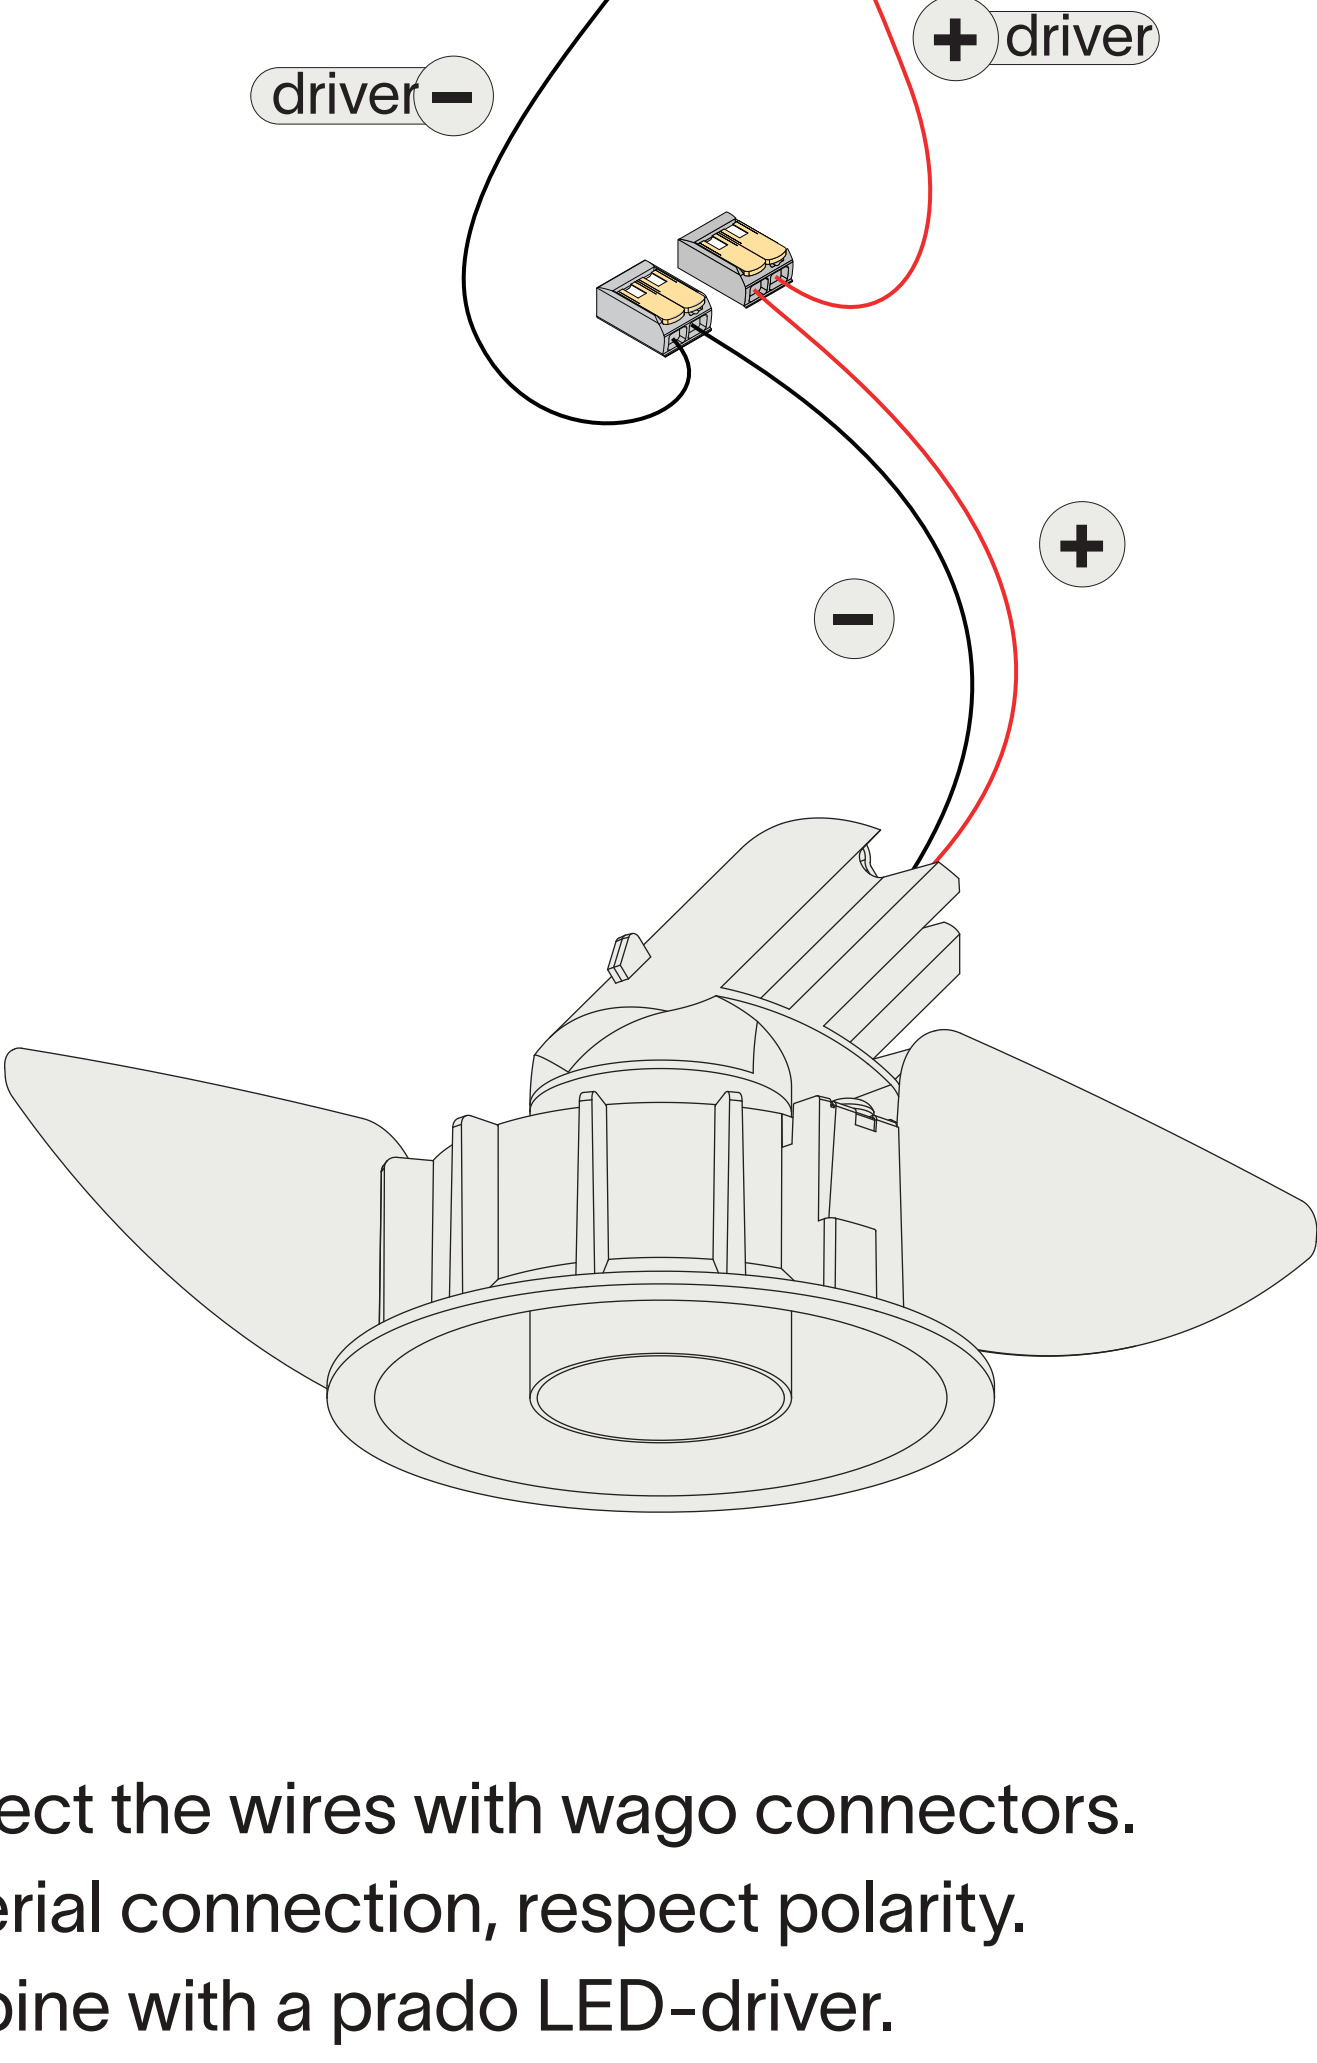


Connect the wires with wago connectors. For serial connection, respect polarity. Combine with a prado LED-driver.

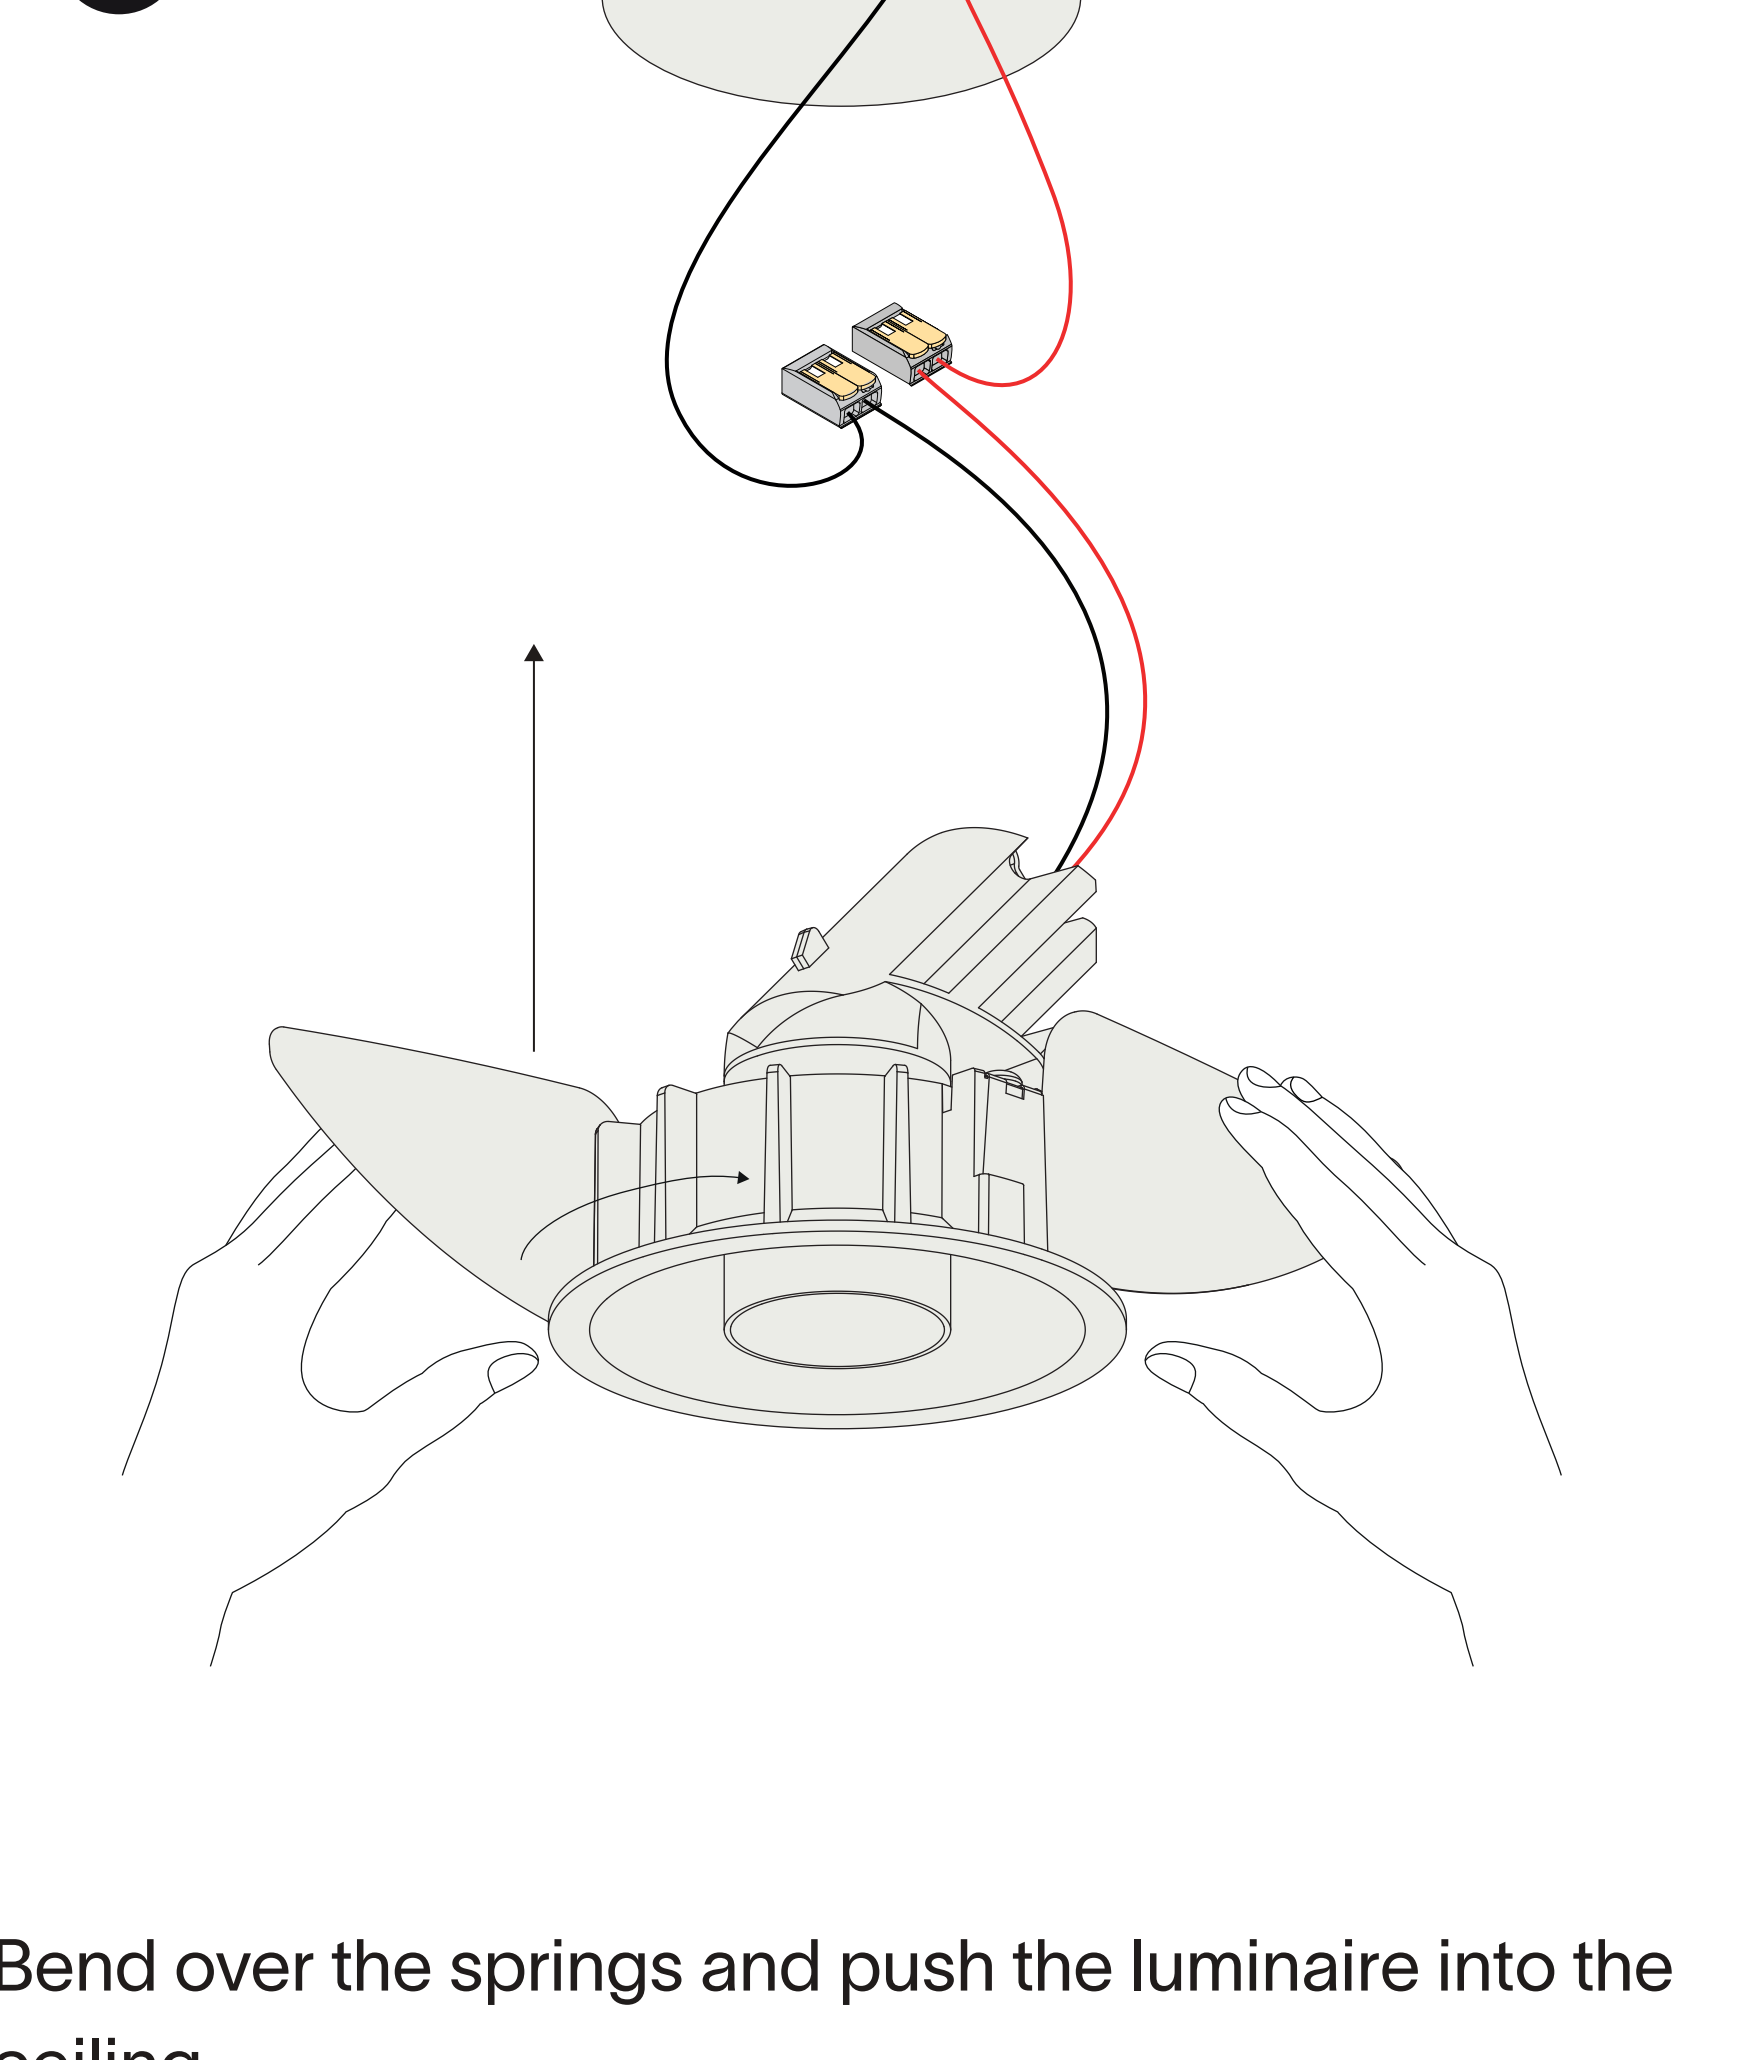

Bend over the springs and push the luminaire into the ceiling.


5

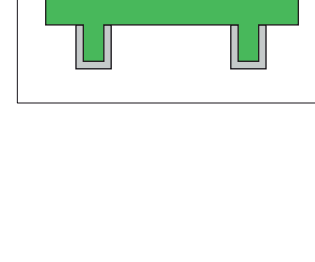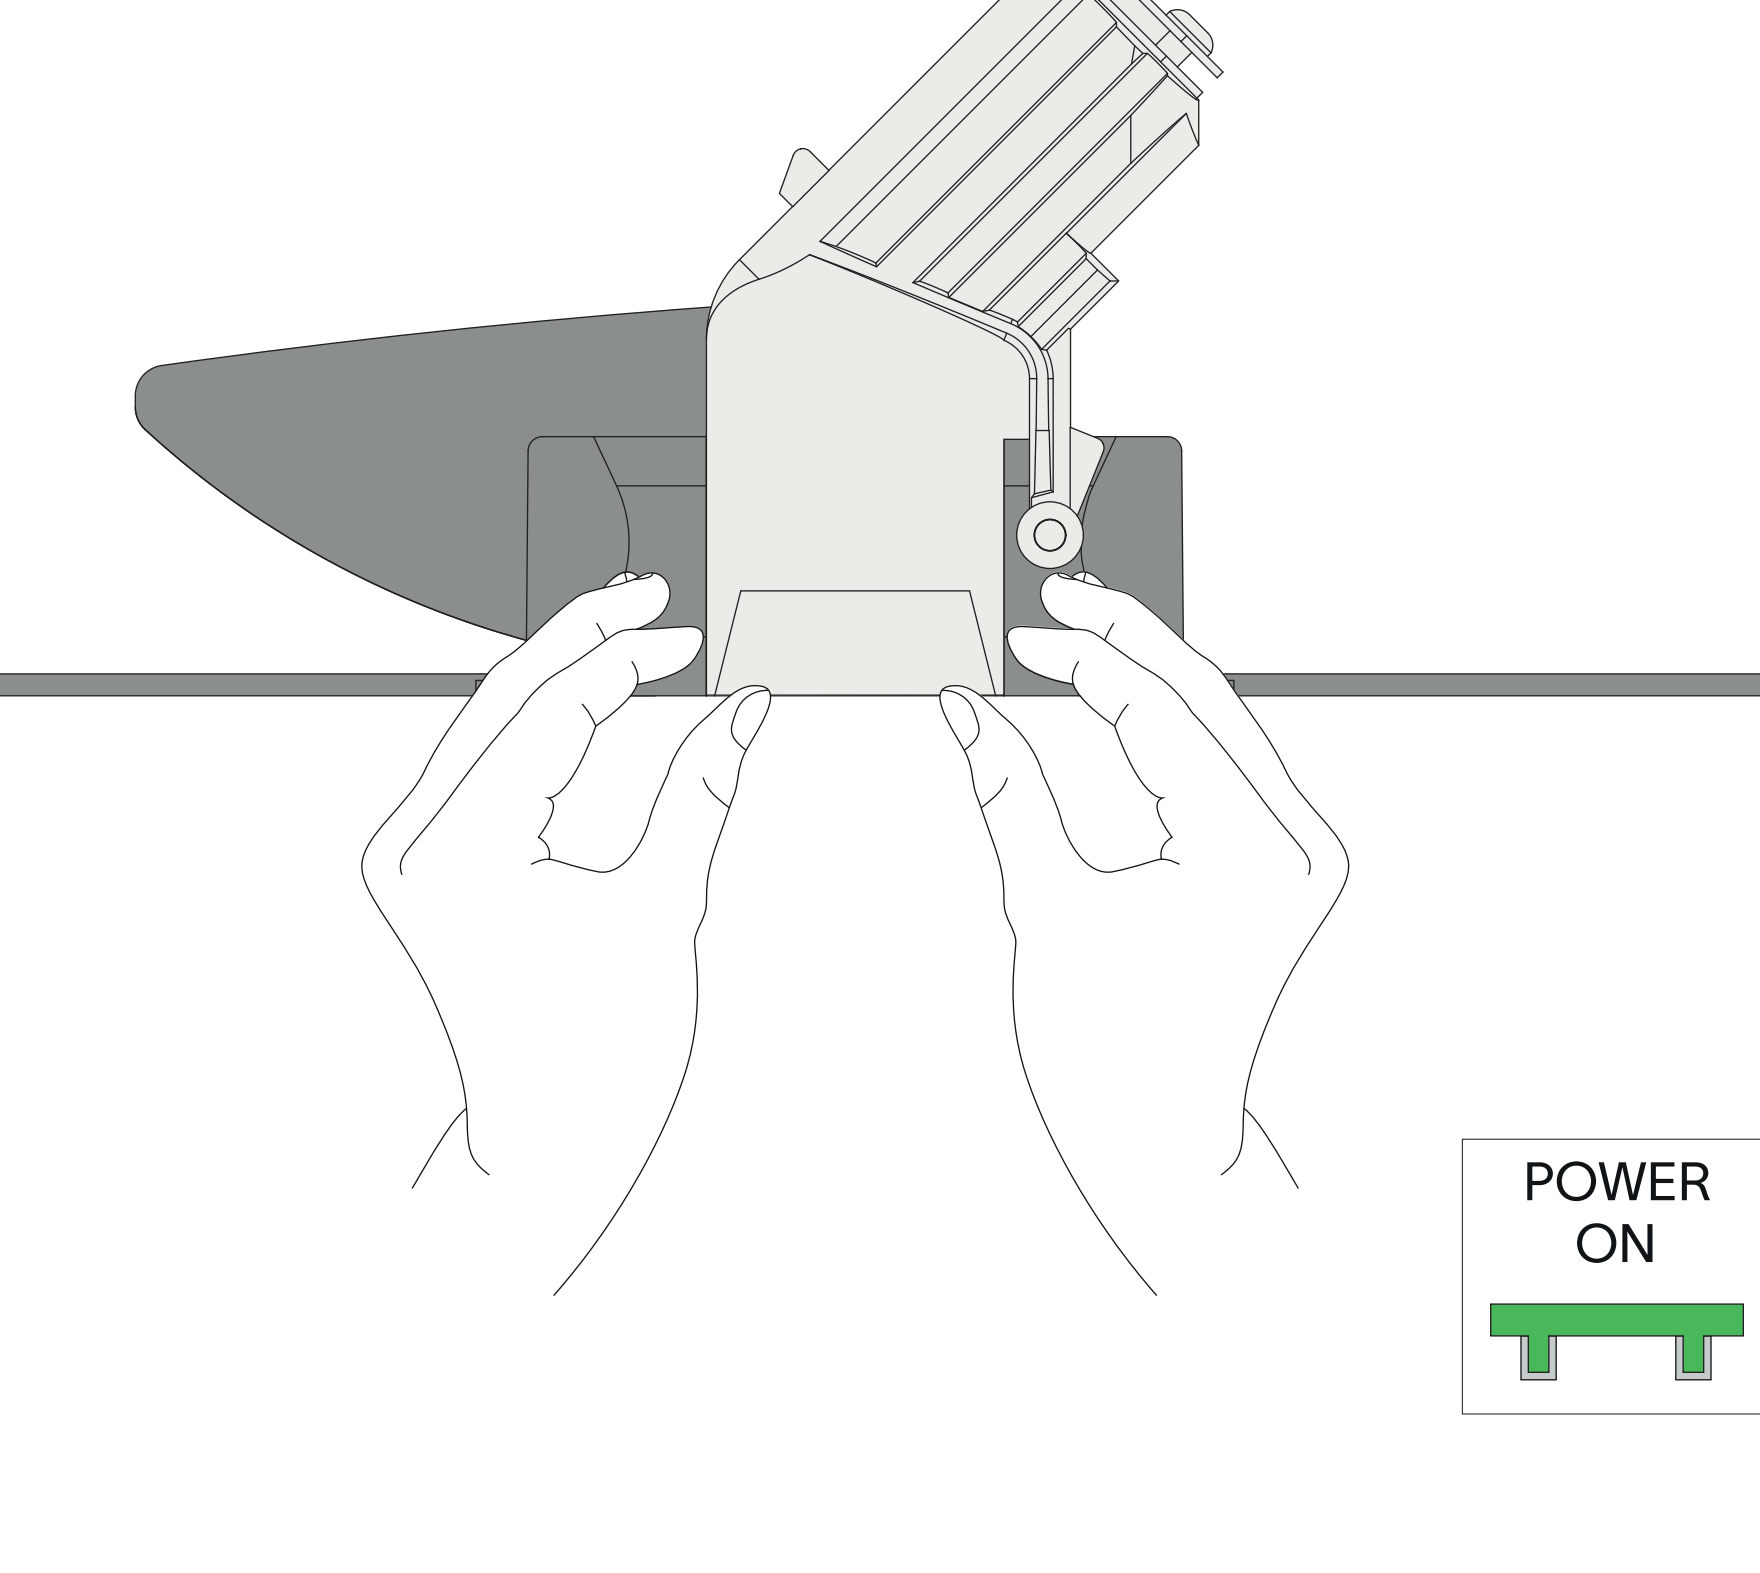

Tilt the luminaire as desired.

6

recommended free air dimensions

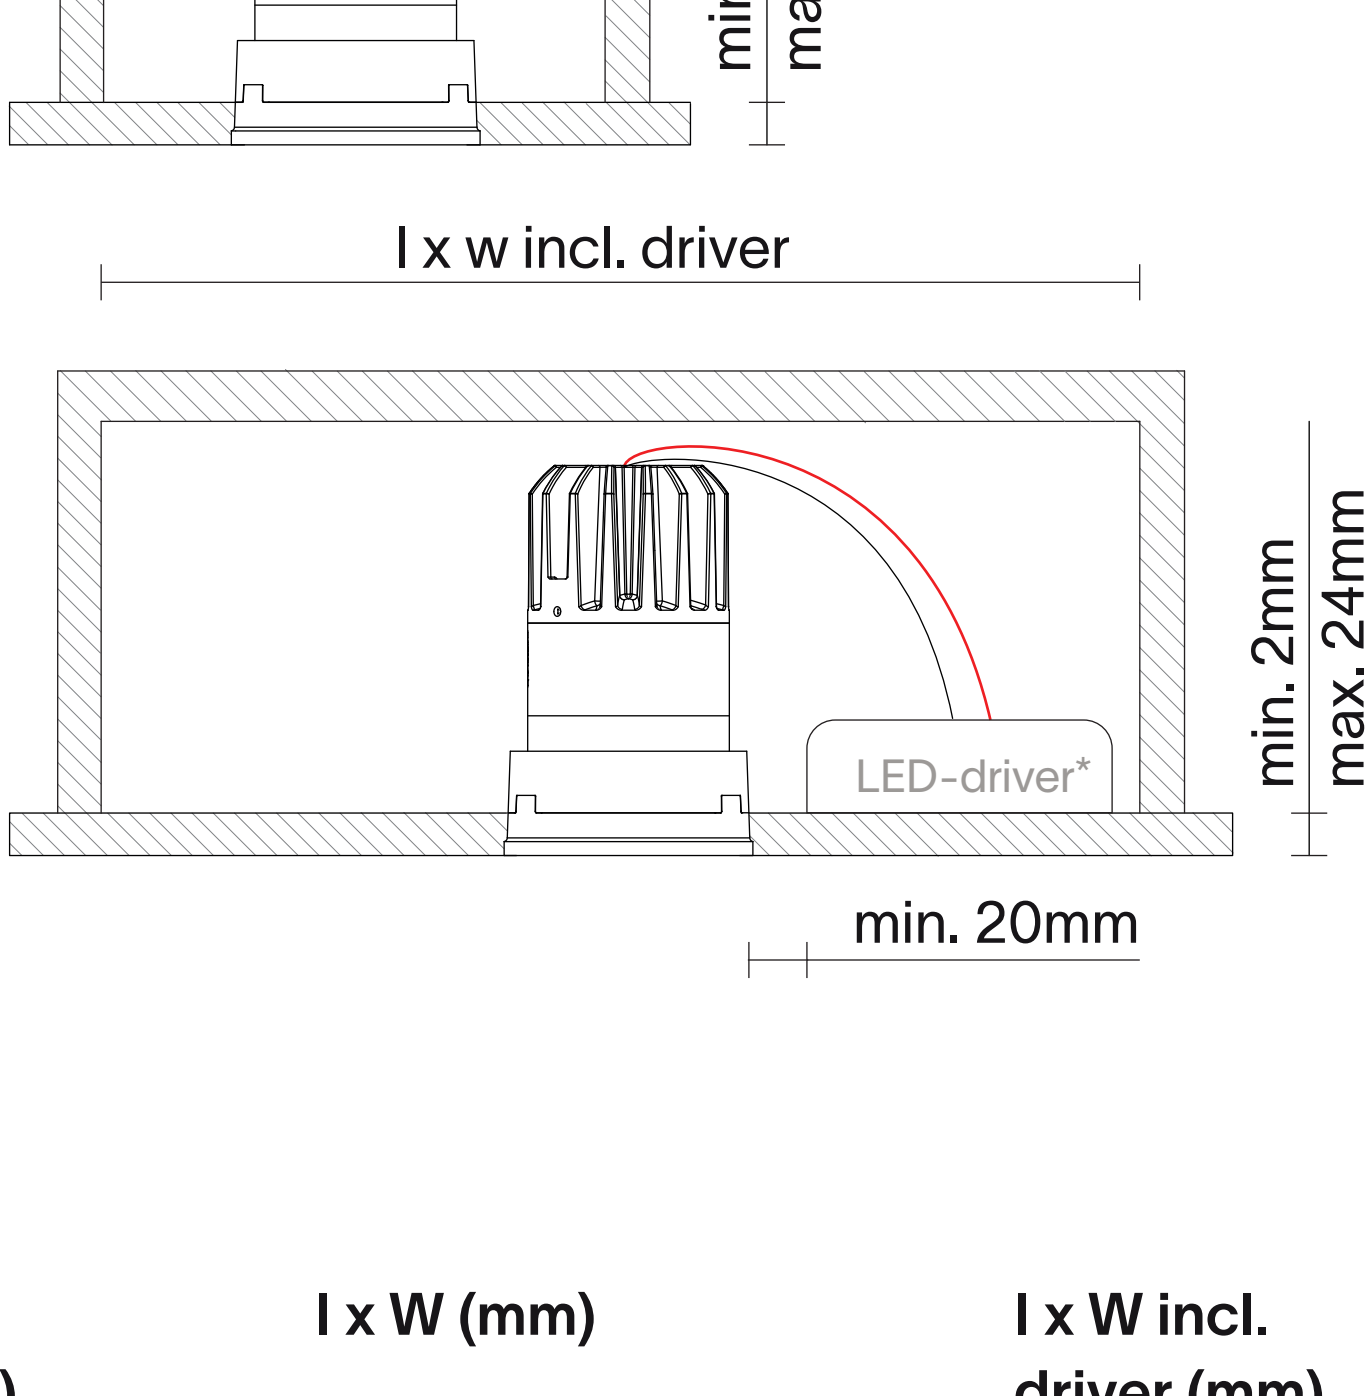

constant current (mA)	I x W (mm)	I x W incl. driver (mm)
350	100 x 100	200 x 200
500	200 x 200	250 x 250

Thank you for choosing prado.

