
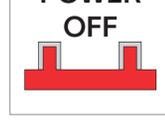
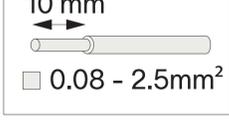



# trimless spot adjustable 2.0 installation instruction

1

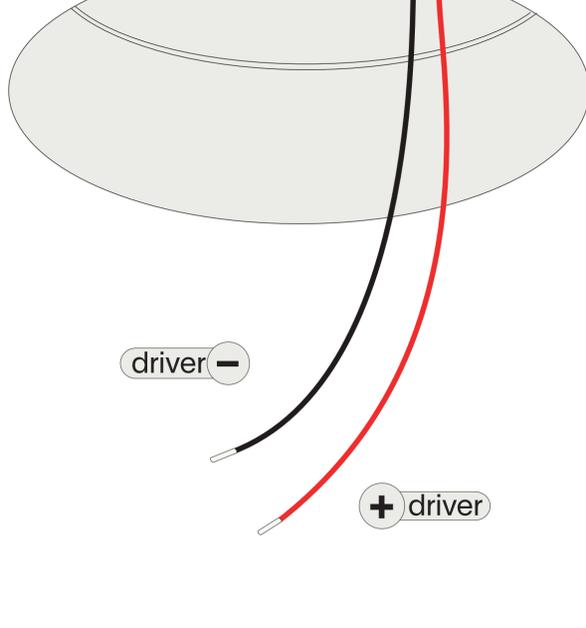



Turn the power off.

2

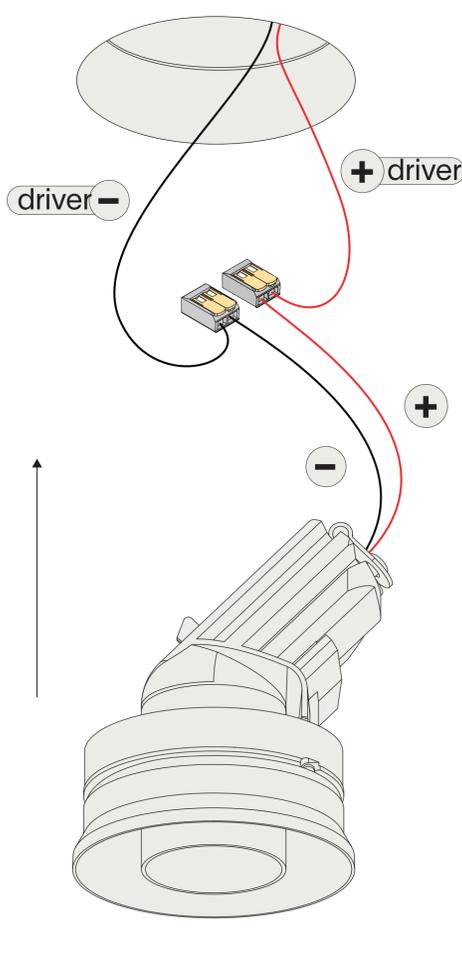

Connect the wires with the included connectors.  
For serial connections, respect polarity.  
Combine with a prado LED-driver.


3

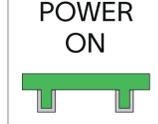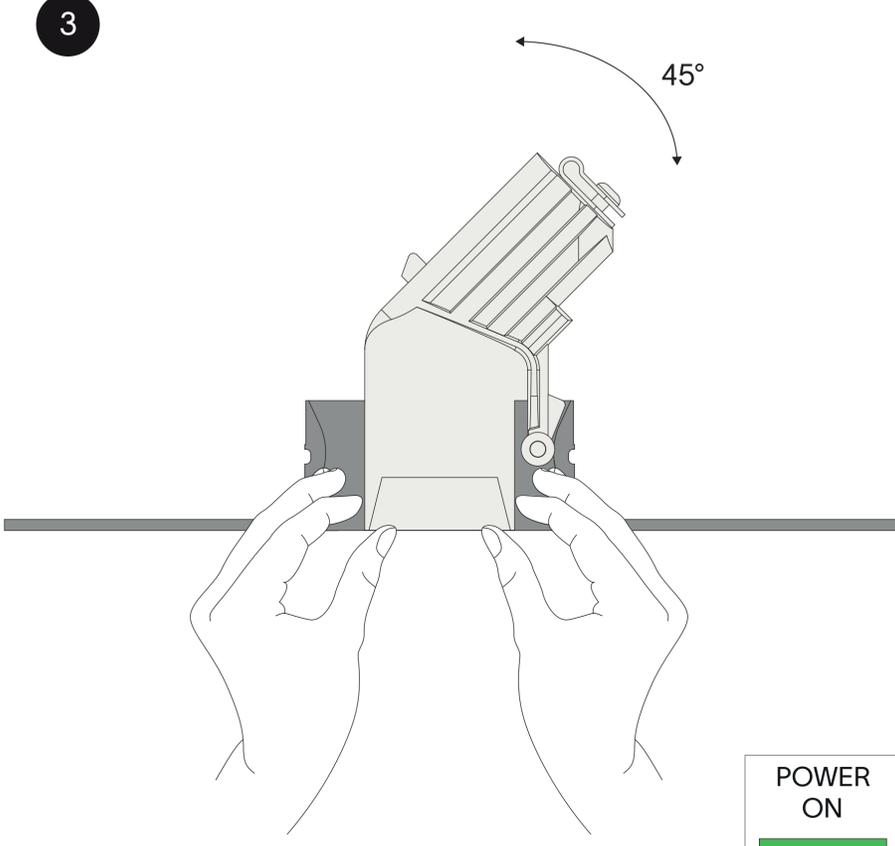

Tilt the luminaire as desired.

4

recommended free air dimensions

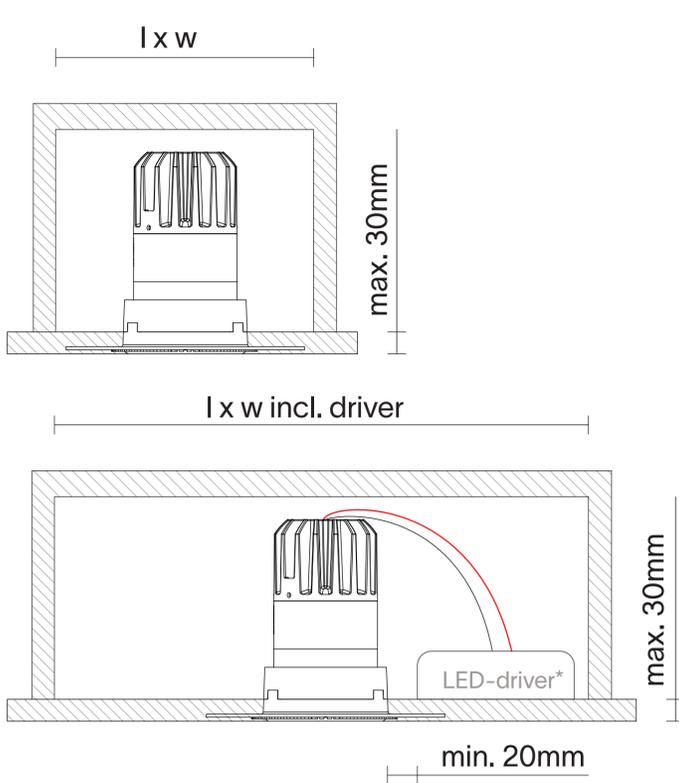

constant current (mA)	l x W (mm)	l x W incl. driver (mm)
350	100 x 100	200 x 200
500	200 x 200	250 x 250

Thank you for choosing prado.

