


trim spot outdoor


installation instruction

1

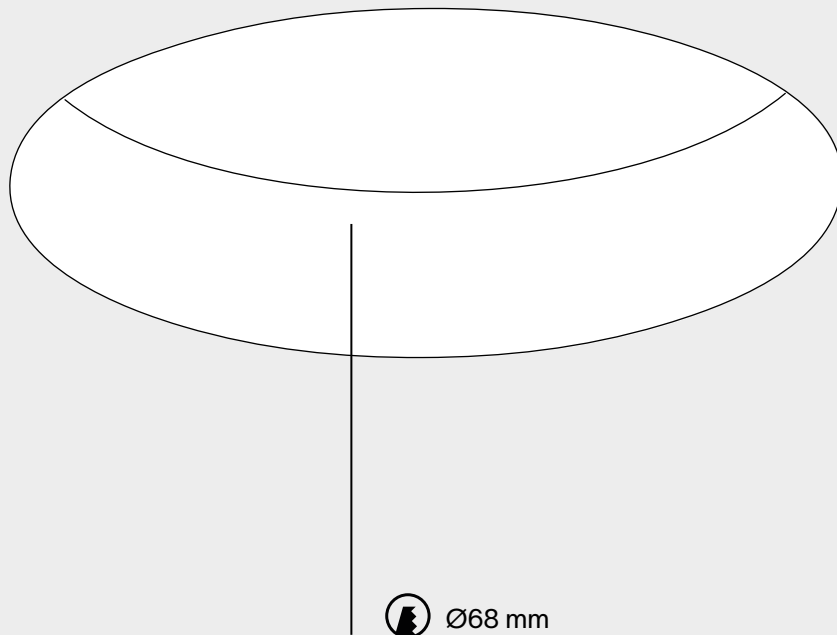


Cut a round hole (Ø68). Consult the chosen luminaire tech specs for required height.

free air dimensions

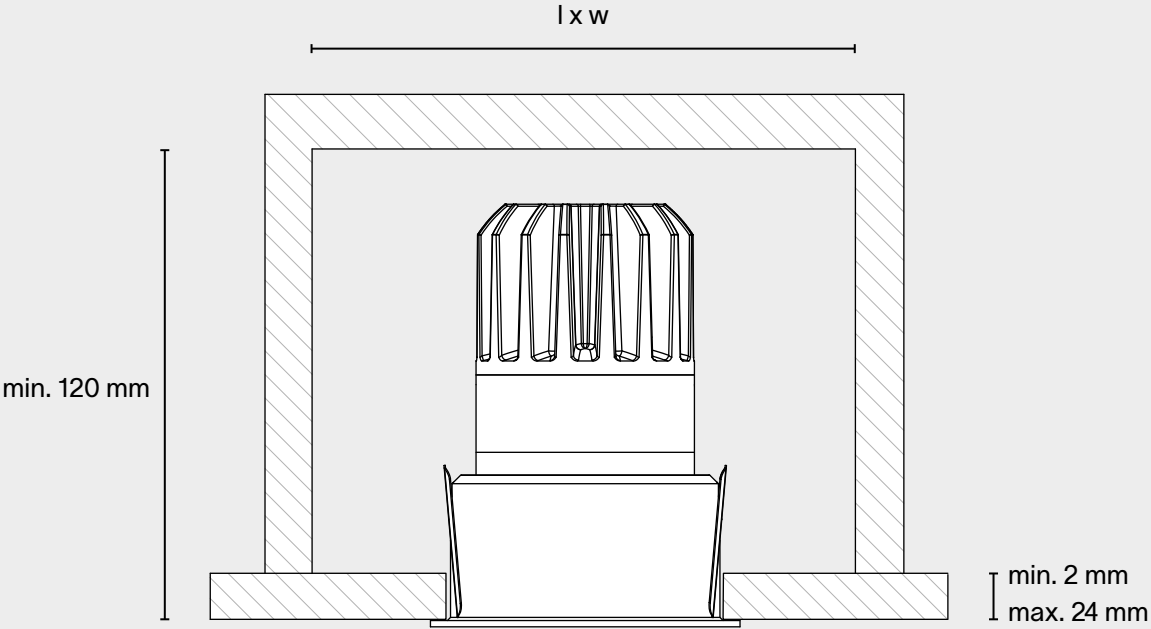


constant current (mA)	l x w (mm)
500	100 x 100
700	200 x 200

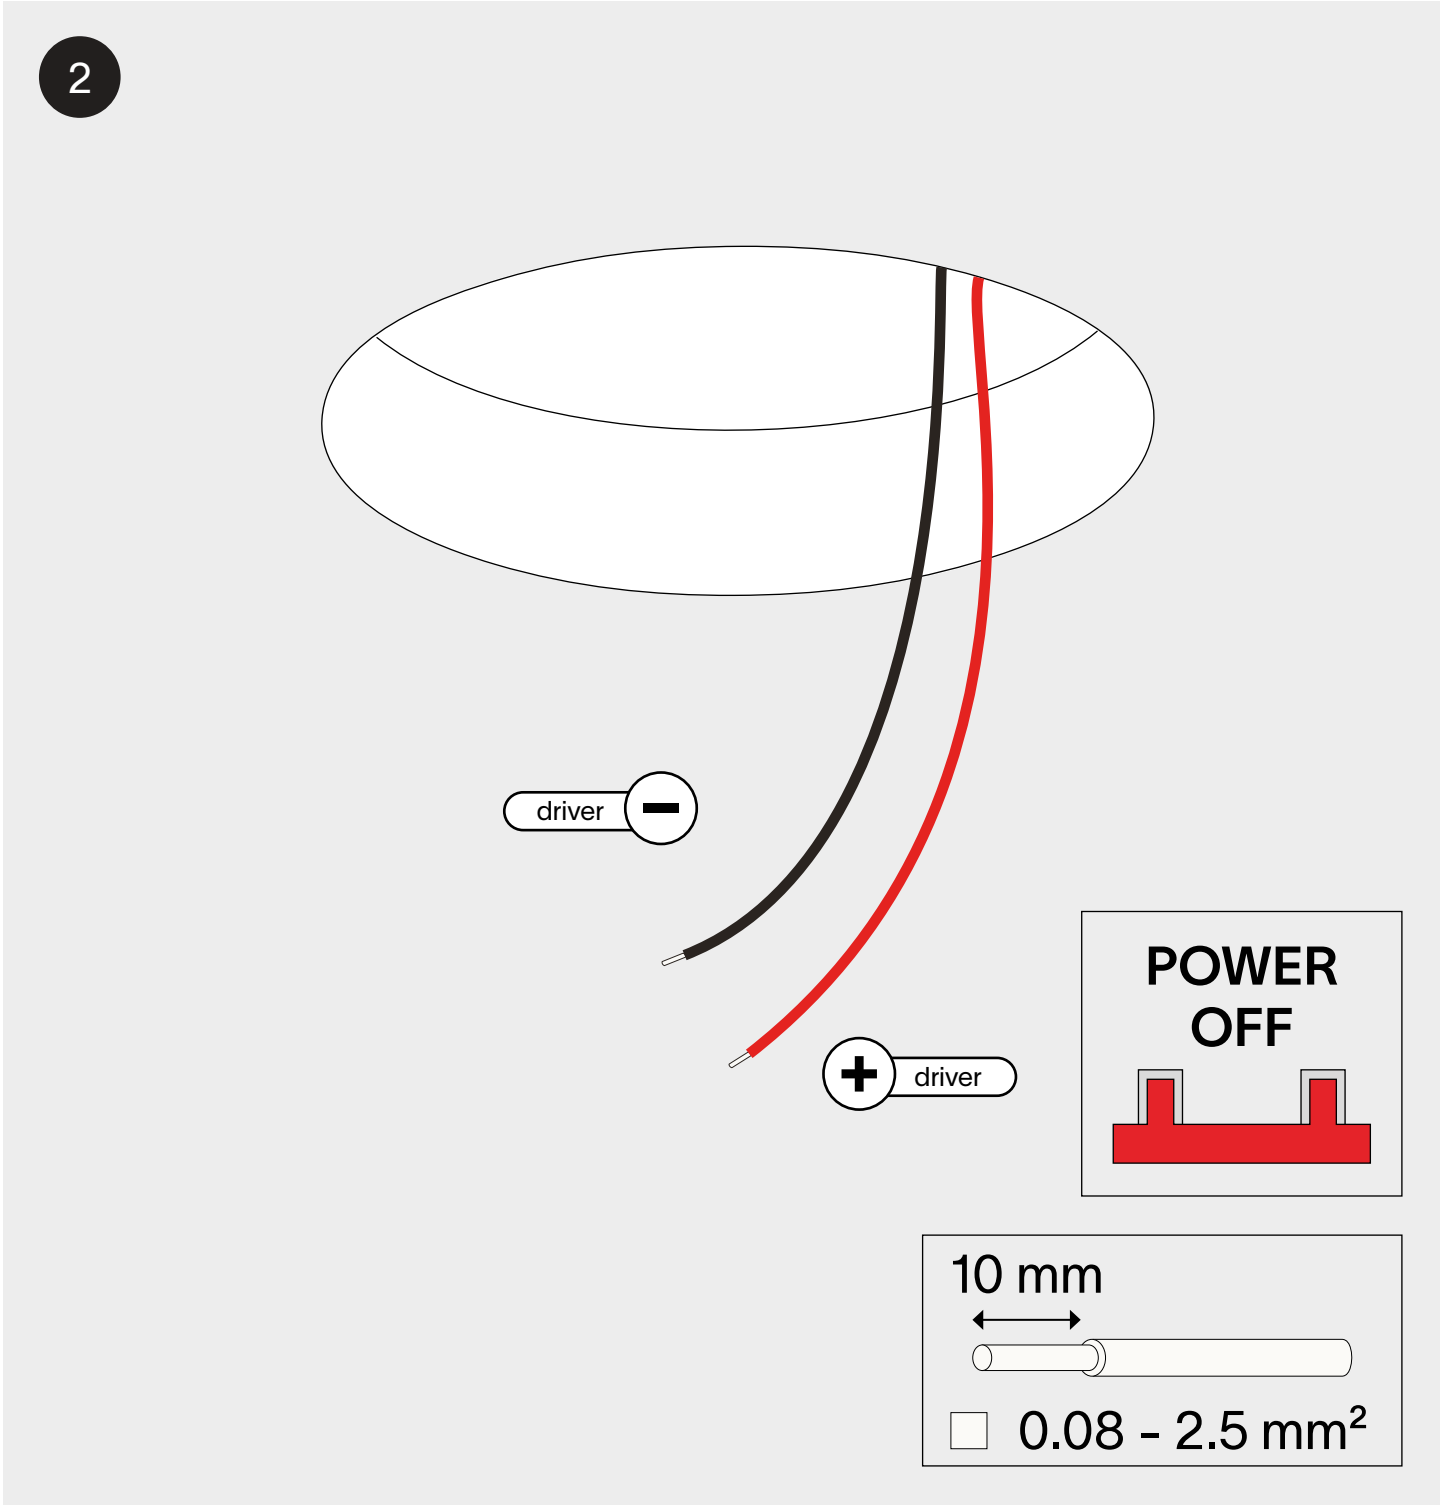

constant current (mA)	typical forward voltage (V)	typical power (W)
350	16.9	5.9
500	17.4	8.7
700	18.2	12.7


trim spot short: max. 350/500 mA
trim spot long: max. 700 mA

3

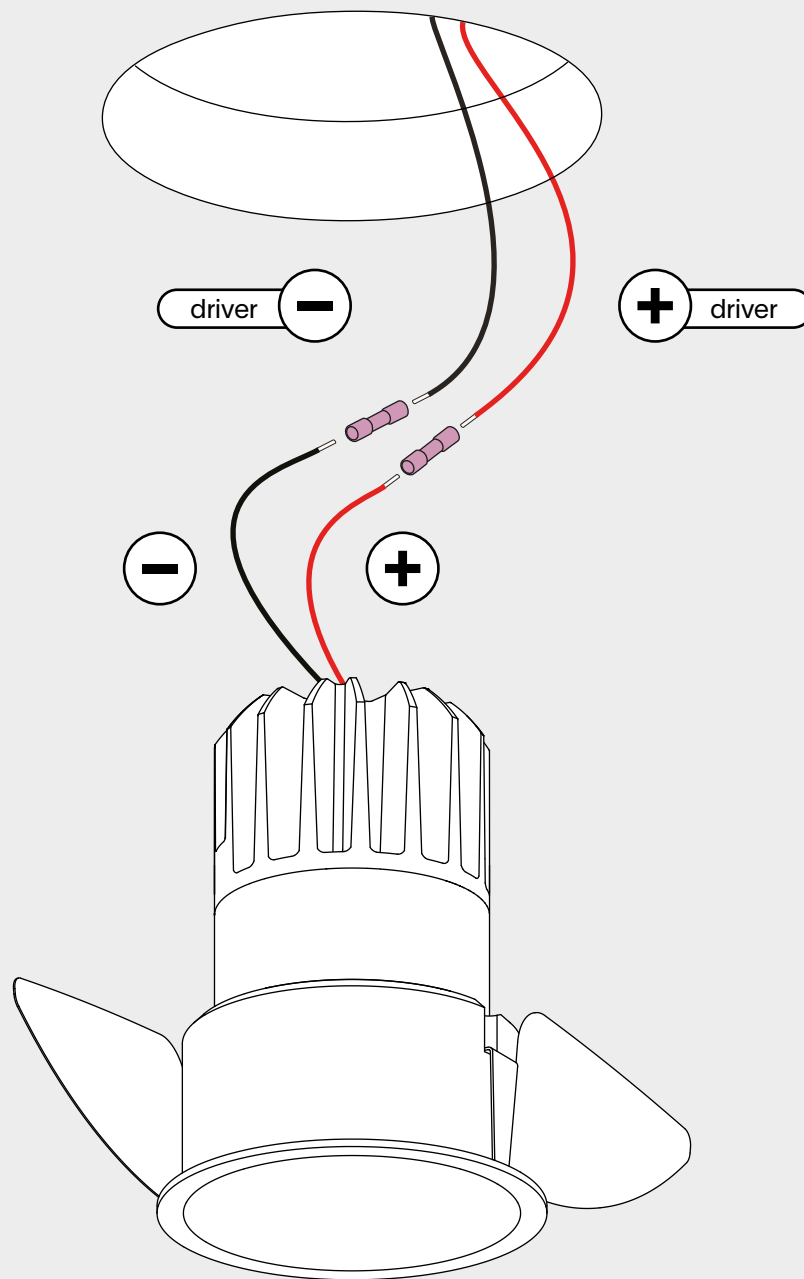


Make the connection using a waterproof connector. For serial connection, respect polarity.

4

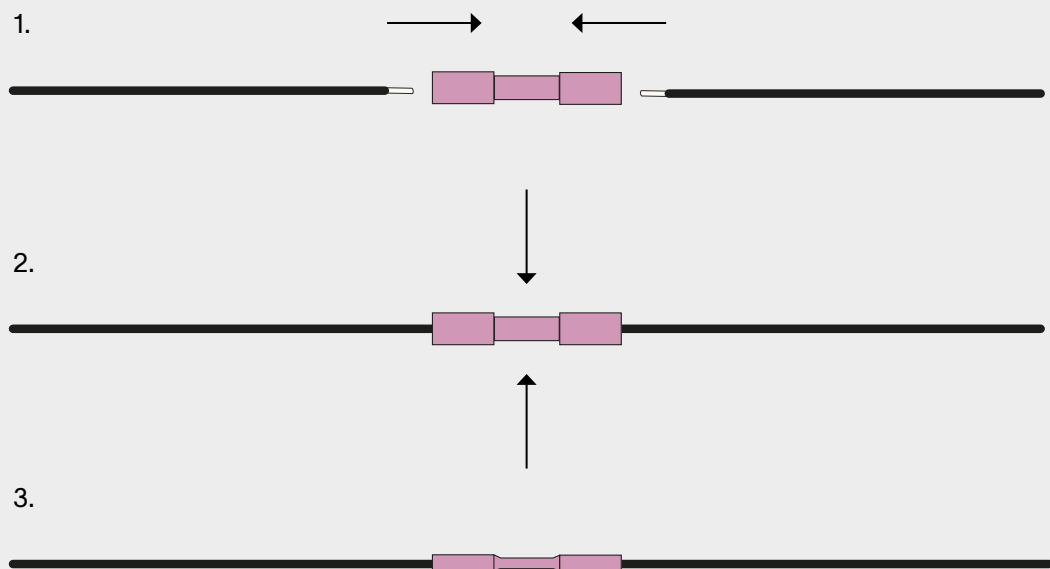


heat

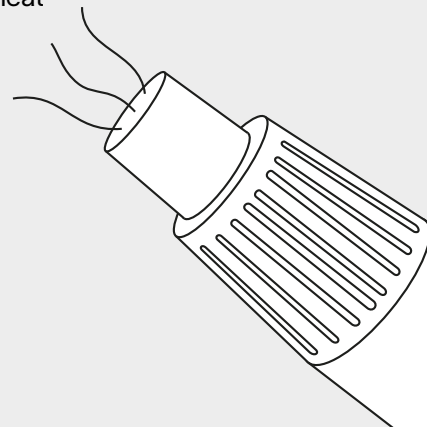


1. Insert the wires into the connector
2. Compress the middle part
3. Seal with a heater

5

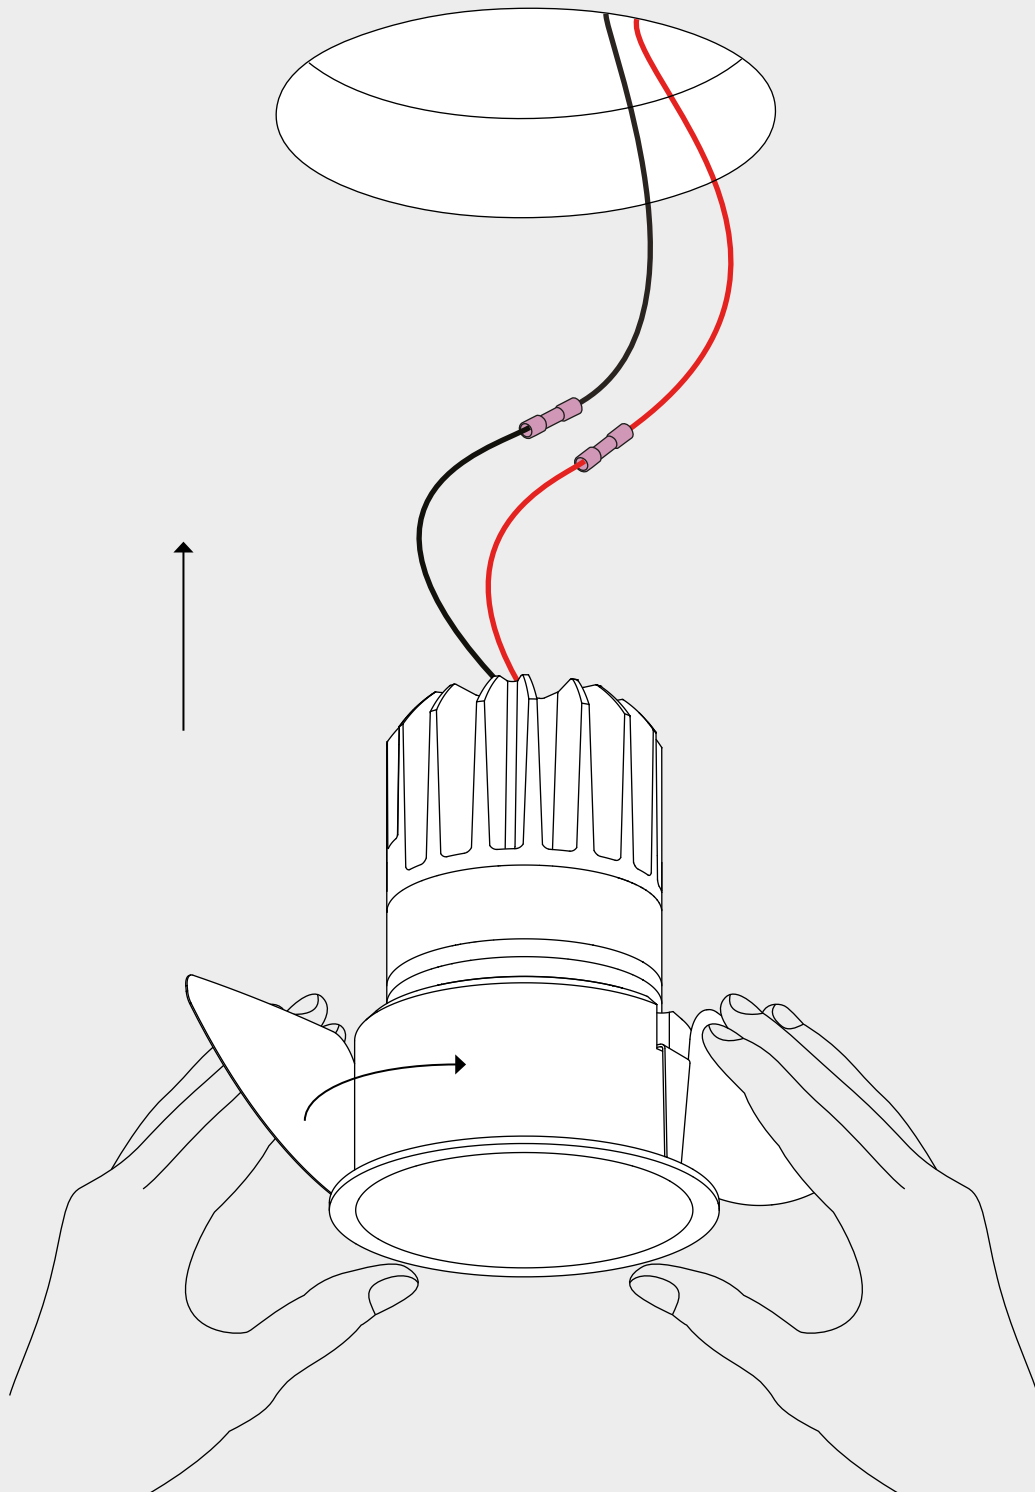


Bend over the springs and push the luminaire into the ceiling.

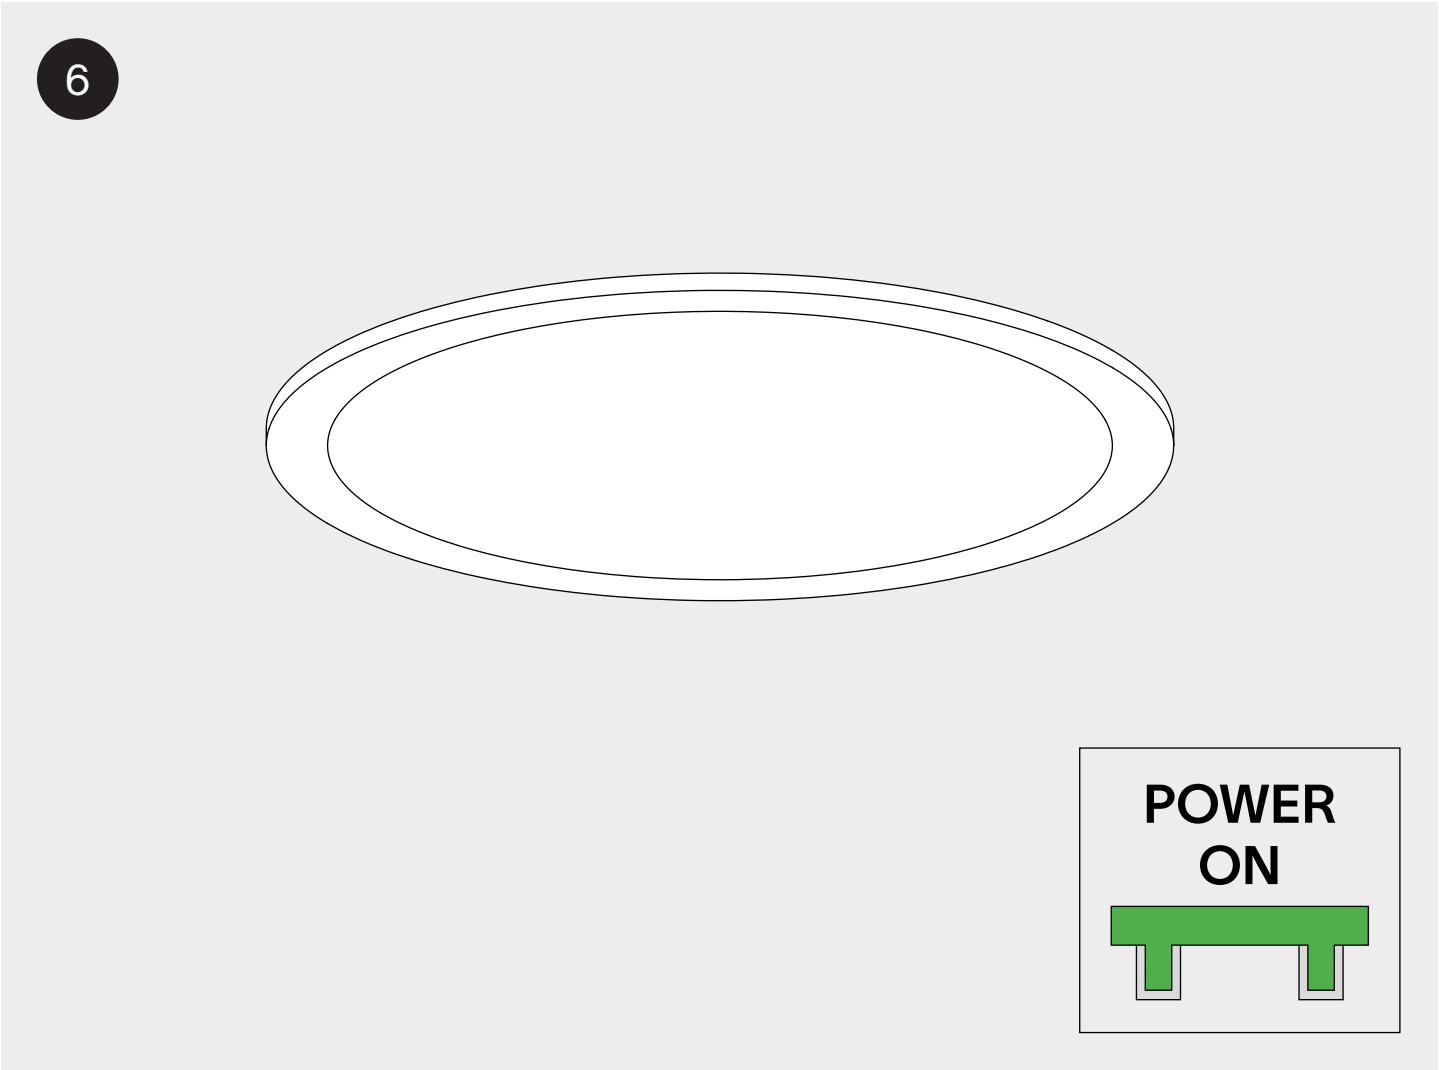

Turn the power back on.

thank you for choosing prado

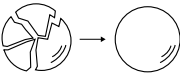			IP65	CE		Replace glass lense when broken. Luminaire shall only be used together with glass lens.
---	---	---	------	----	---	--

prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.