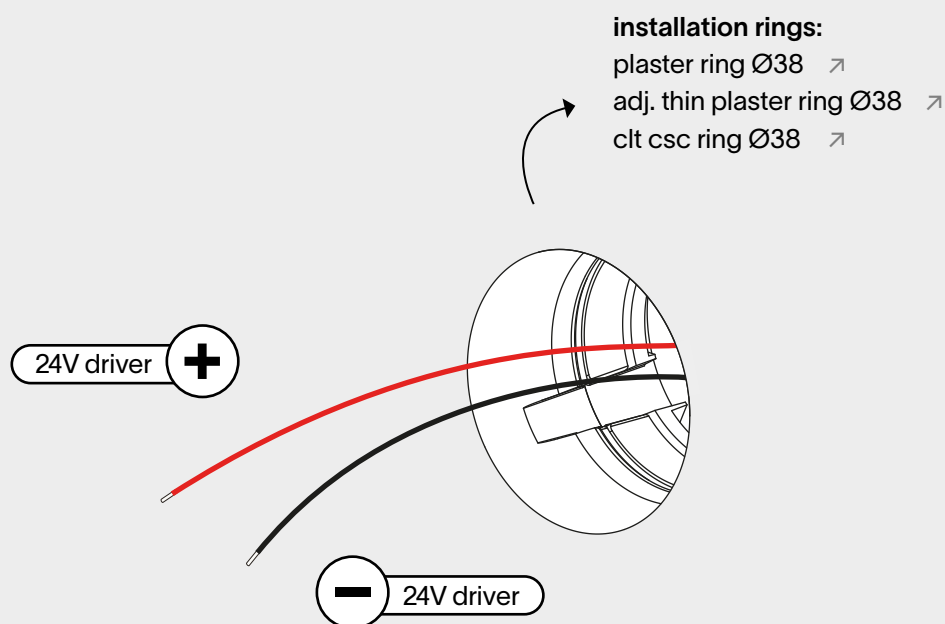




steplight mini | trimless

installation instruction

1


**POWER
OFF**

10 mm

□ 0.08 - 2.5 mm²


Turn the power off.

2

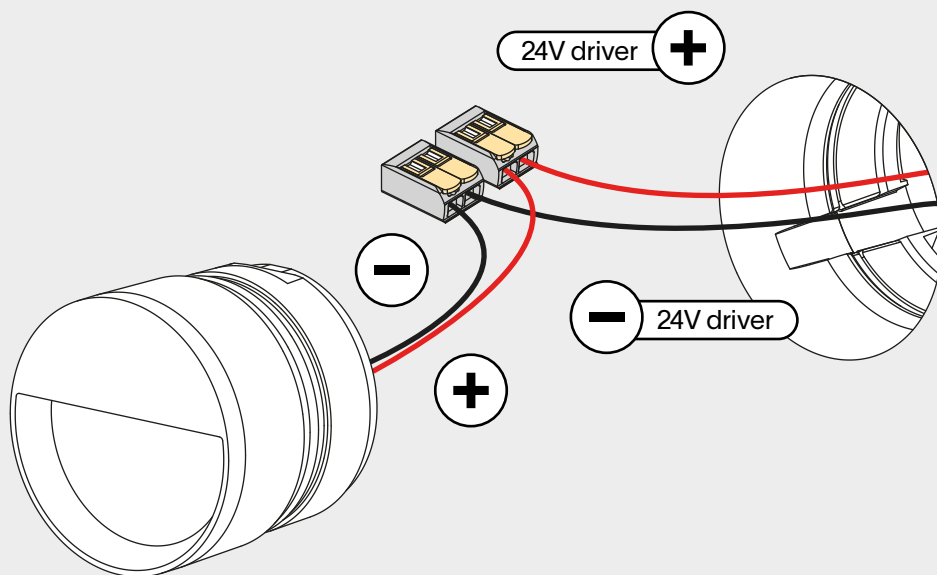



Connect the wires with wago connectors. For parallel connection, respect polarity. Combine with a prado LED-driver.

3

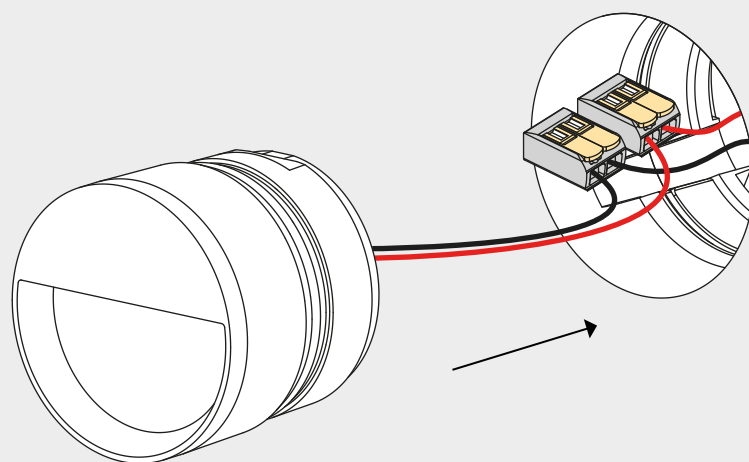


Insert the luminaire into the installation ring.

4

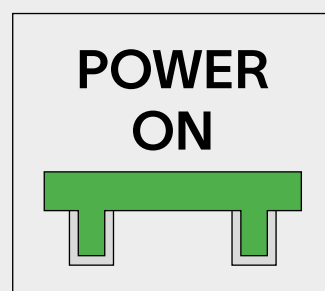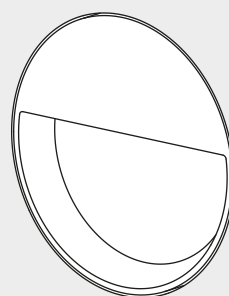

Turn the power back on.

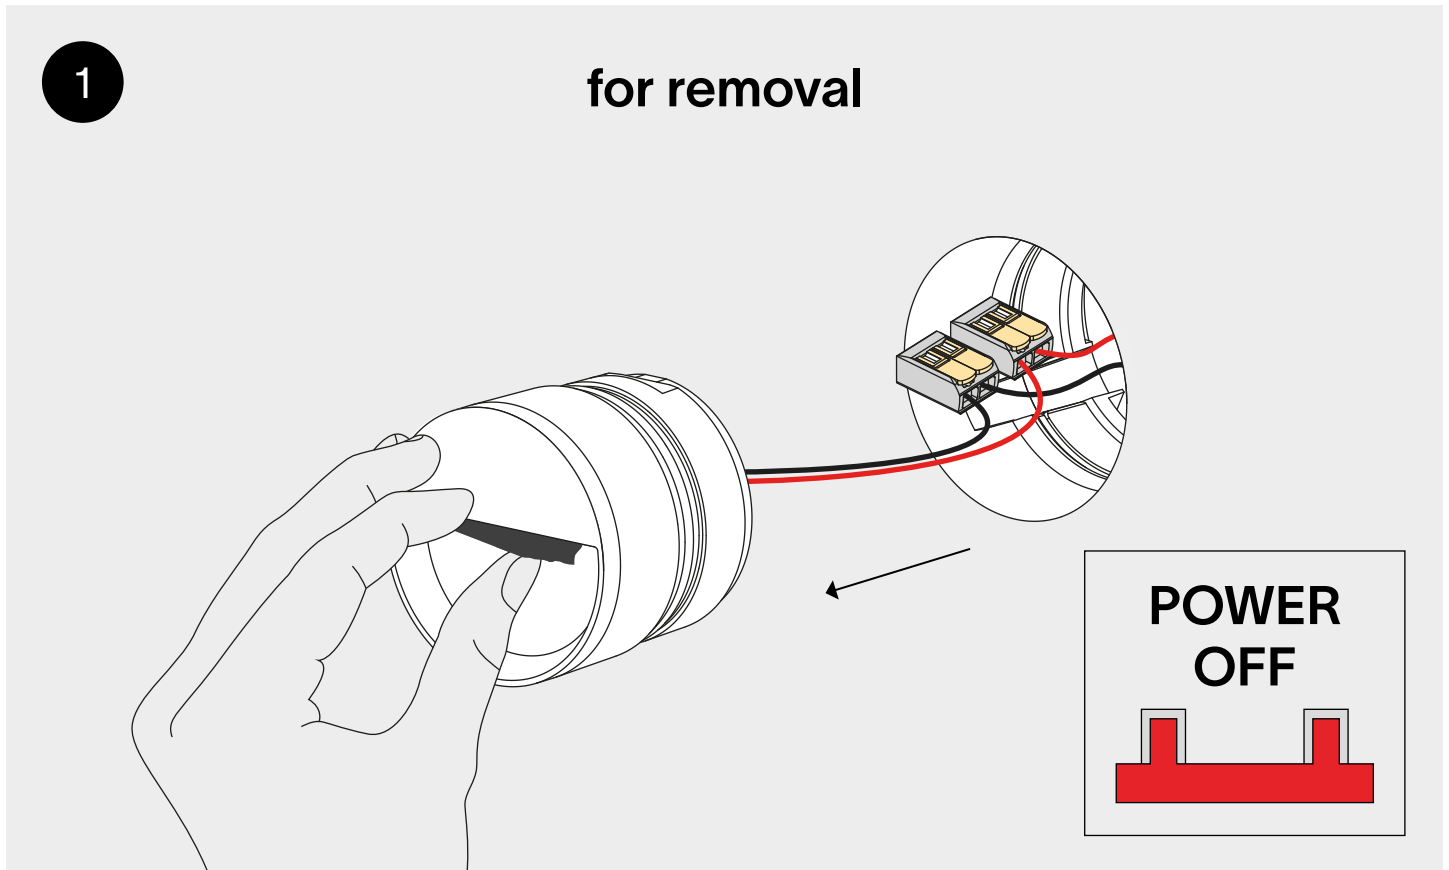

In case maintenance would be needed, the luminaire can be removed from the plaster ring without doing any damage by using duct tape. Make sure the luminaire has cooled down before using the duct tape.

thank you for choosing prado



prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.