


adj. plaster ring Ø68 | duct Ø100


installation instruction

1

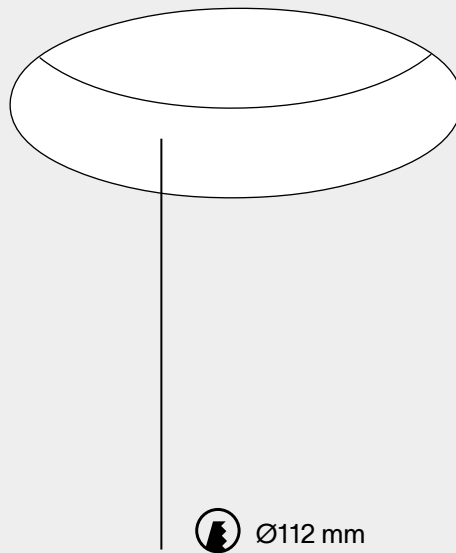


Cut a round hole (Ø112 mm).

2

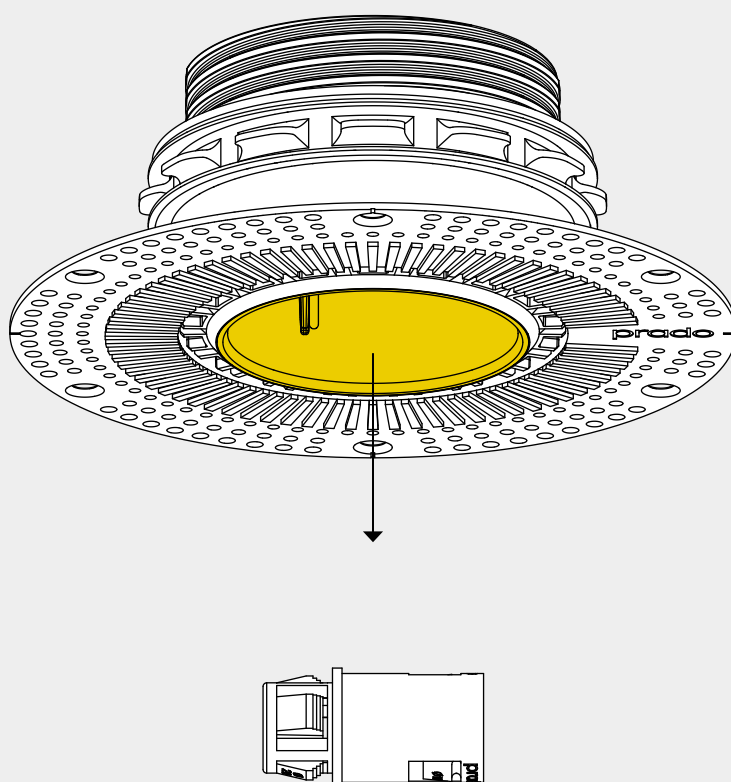


Take out the prado connector from the plaster lid.

3

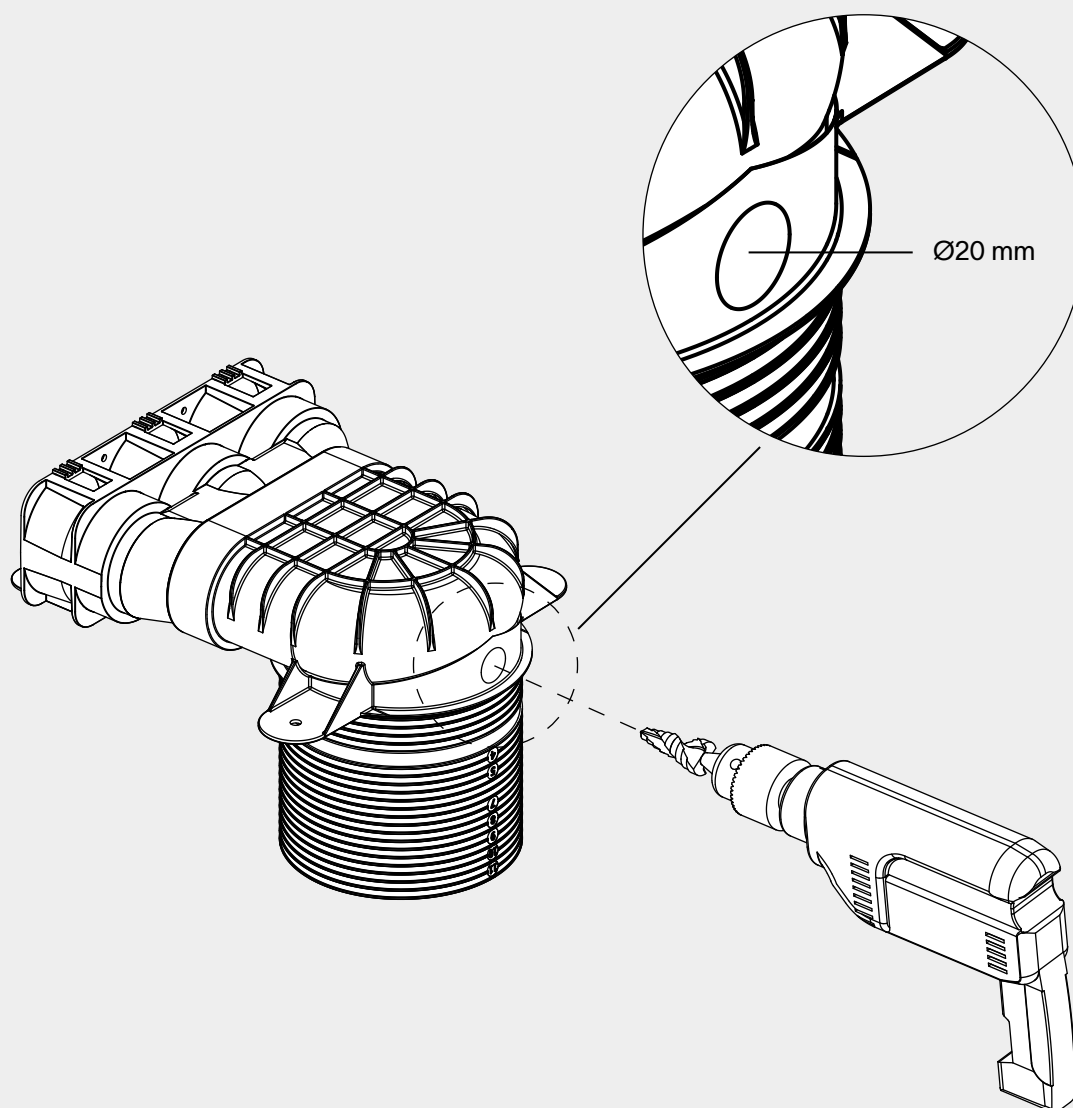






Use a step drill to cut a Ø20 mm hole into the Ø100 valve adapter of your choice. A hole can be drilled in any type or brand of Ø100 valve adapter.

4

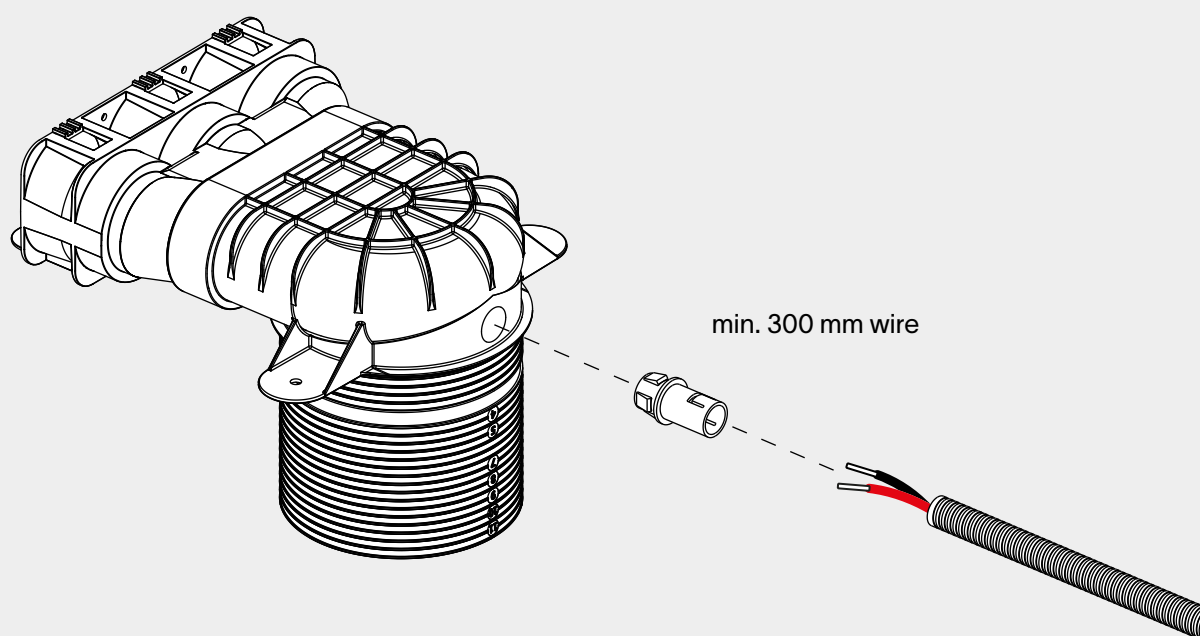**POWER
OFF**


Connect the Ø16 preflex and the valve adapter with the prado connector. Make sure to add minimal 300 mm of wire into the valve adapter. Driver must be placed remotely to remain accessible.

5

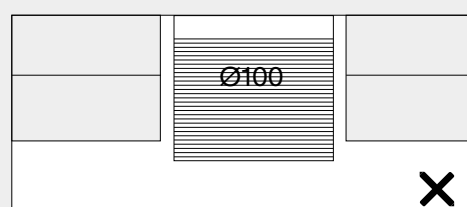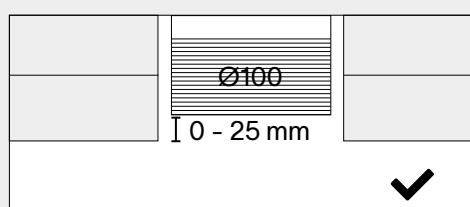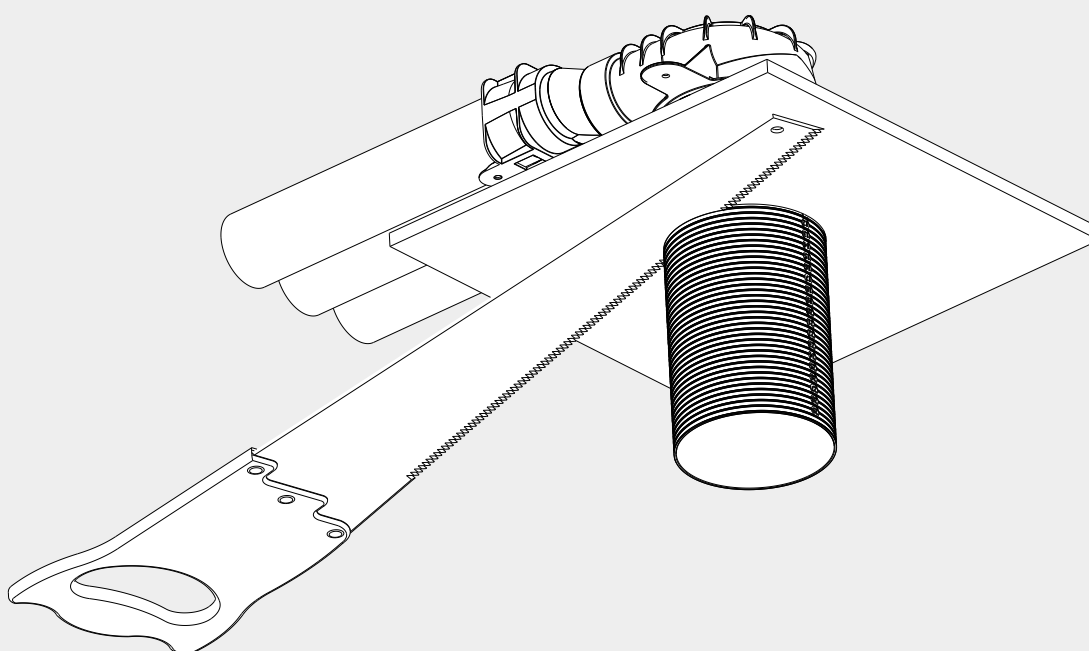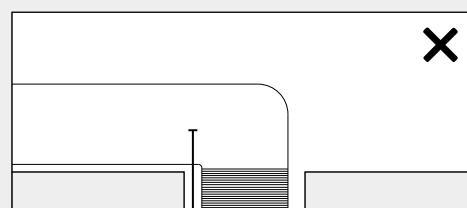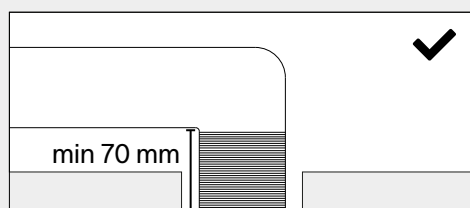


Cut off the excess length of the valve adapter (between 0 and 25 mm above final ceiling level). The remaining vertical part of the adapter (before the start of the turn) must be at least 70 mm high for the ventilation valve (connector can't be placed in this zone).

6

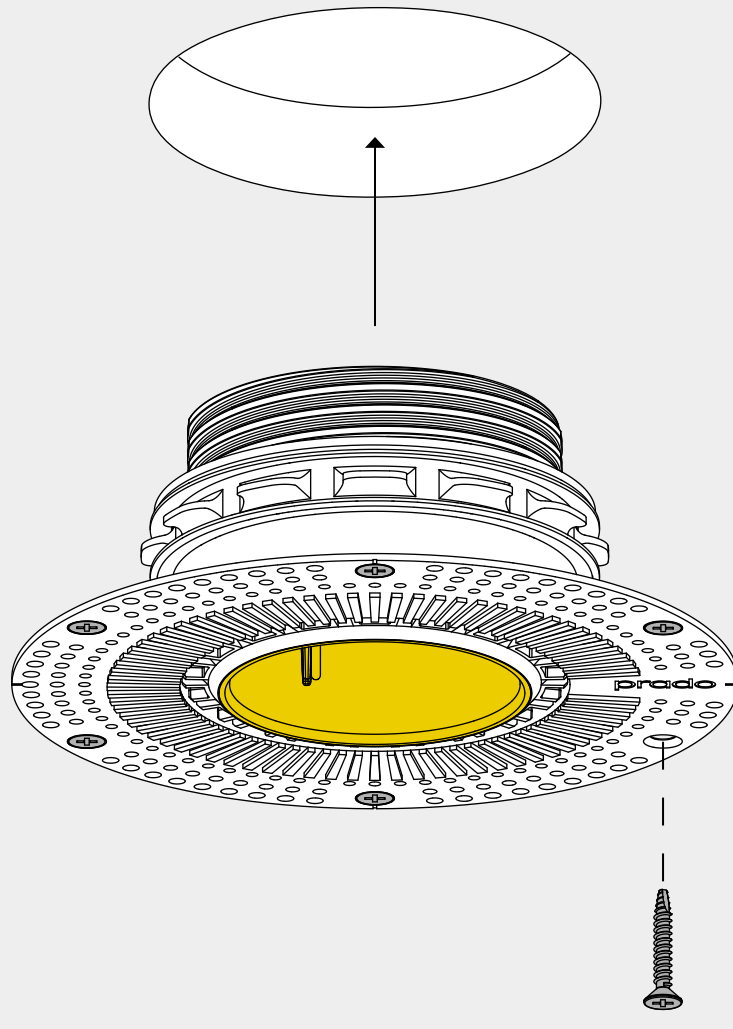


Insert the plaster ring and securely fasten it with glue or the appropriate screws on a screw-fast surface. The attachment must be able to obtain a static load of 5 kg. It's the installers responsibility to ensure optimal attachment.

7

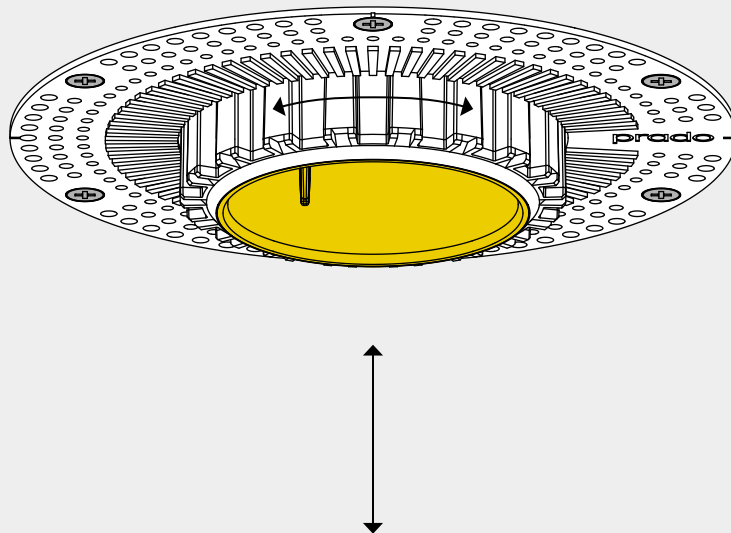




Adjust the height of the plaster ring by twisting the inner part of the kit (min. 3.6 mm - max. 20 mm).

8

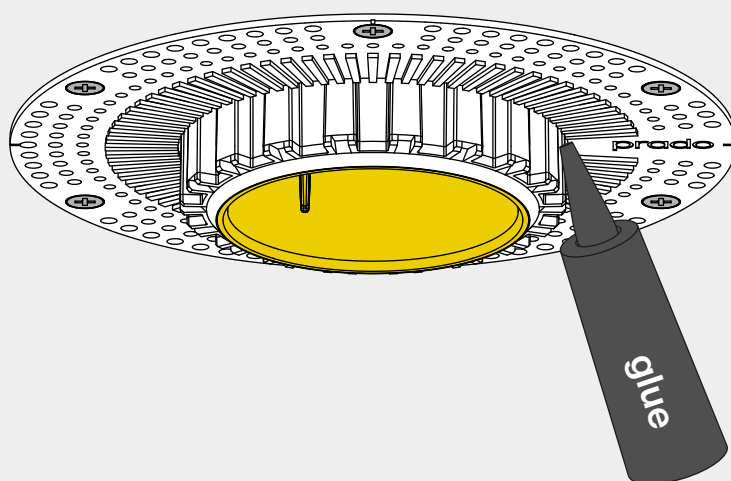


Fixate the inner part with some glue.


9

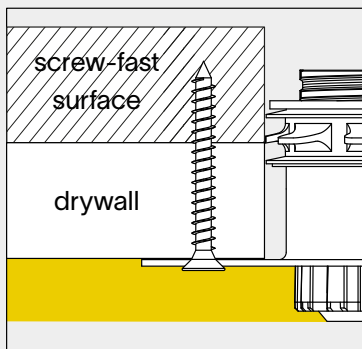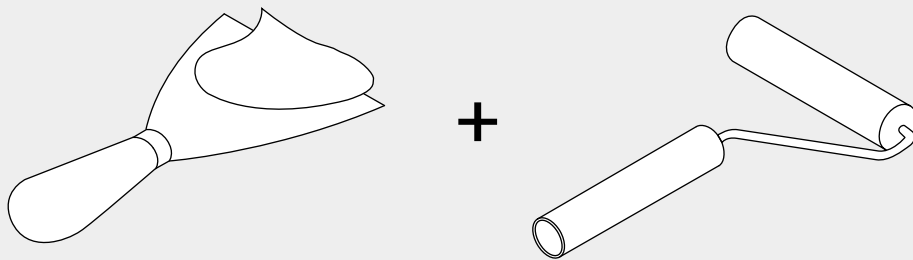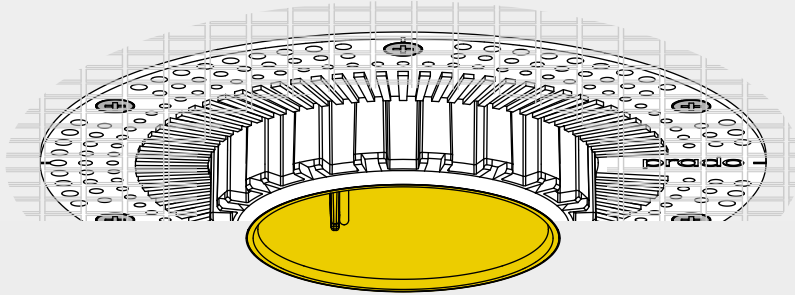

perfect amount of plaster ✓

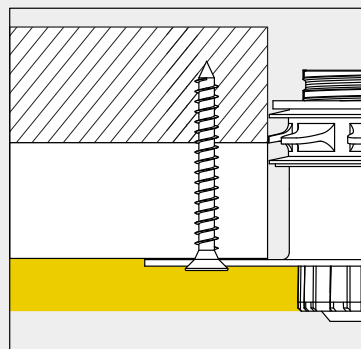


not enough plaster ✗

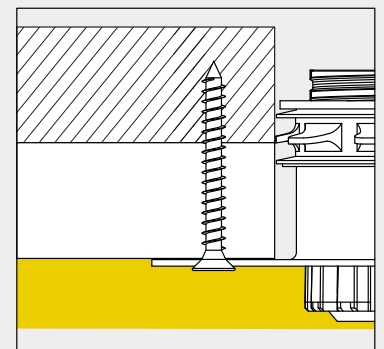

too much plaster ✗

Excercise caution while plastering, do not damage the ring. Keep the plaster lid inside the plaster ring while plastering. Use a fiberglass mesh tape for optimal plaster adhesion. Make sure not to touch the edge of the ring while sanding.

10

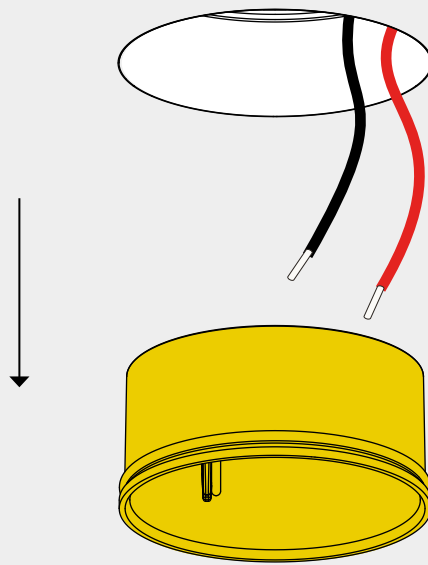

Remove the plaster lid before installing the fixture. Any residue needs to be removed without damaging the edges of the ring.

thank you for choosing prado

prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.