

mounting collar for pradovent trim Ø100


installation instruction

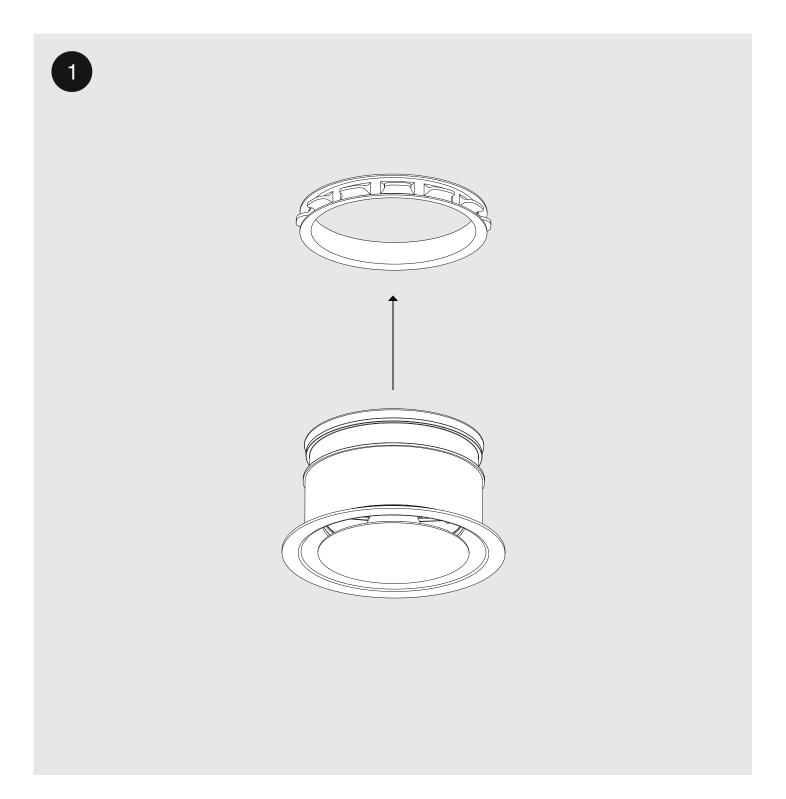


Remove the rubber part from the pradovent trim Ø100.

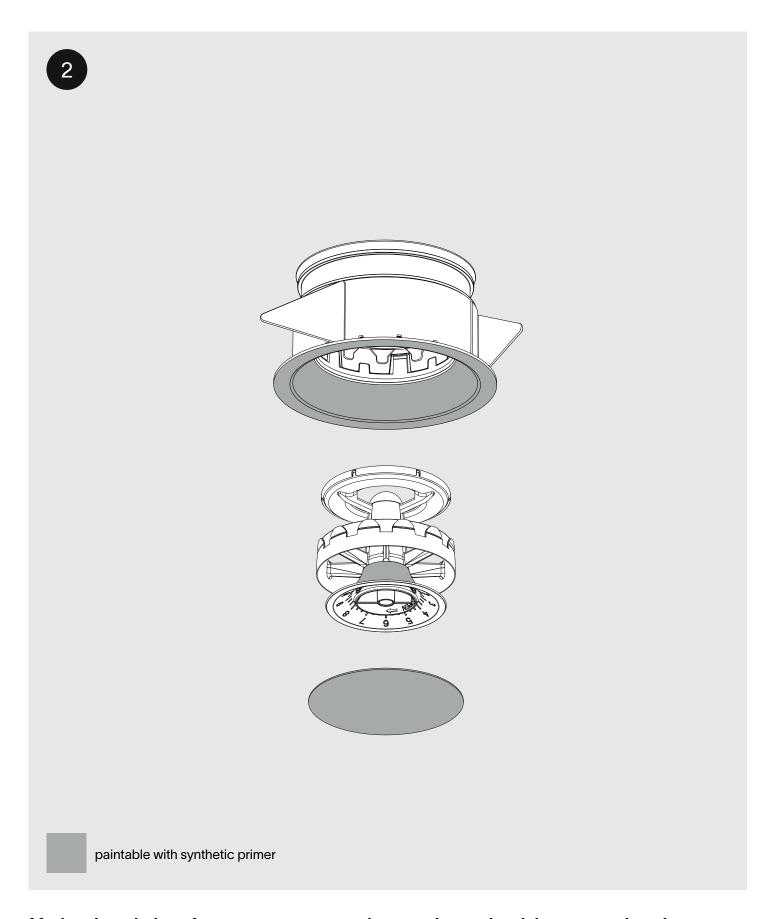

If desired the front parts can be painted with a synthetic primer.

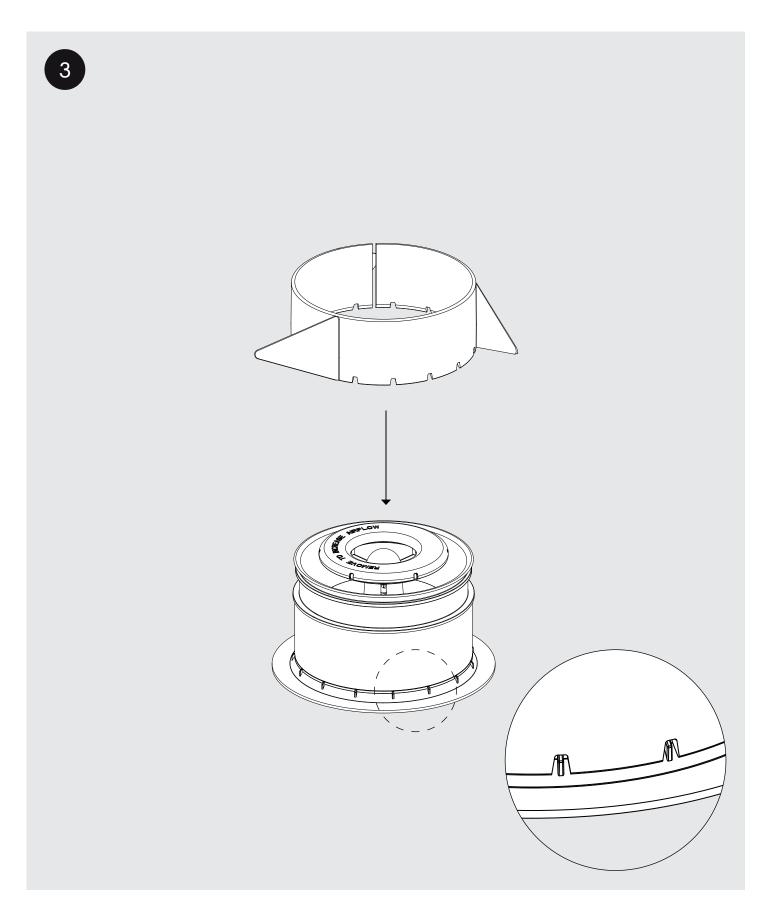


Slide the mounting collar on top of the pradovent. Make sure that the cutouts of the mounting collar match the teeth of the pradovent.

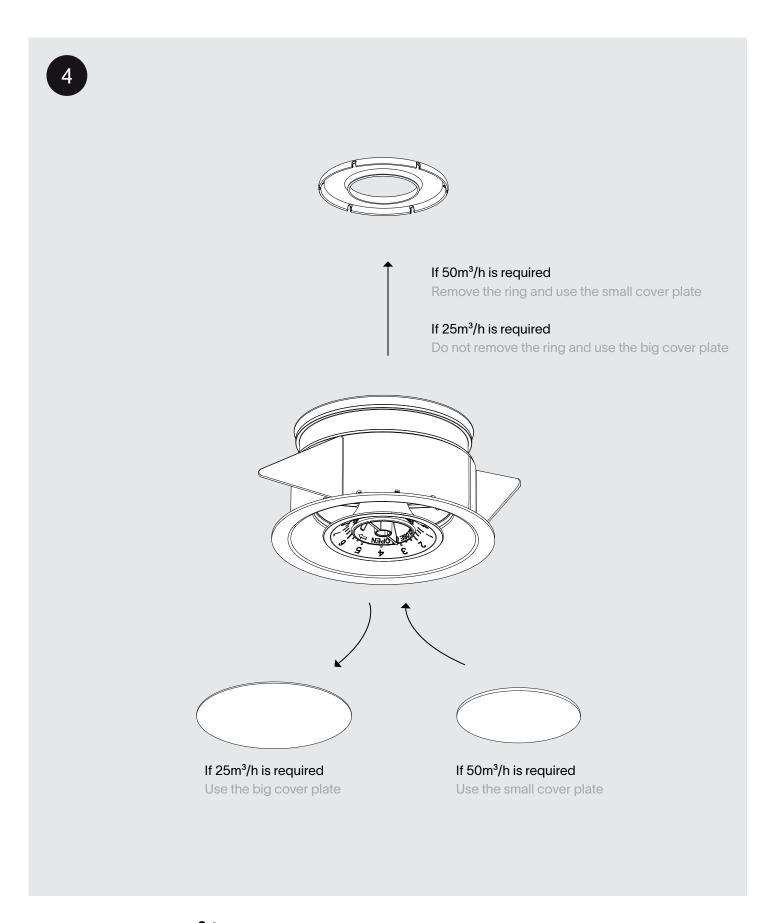


Remove the m³/h ring if necessary.

prado.com prado.com

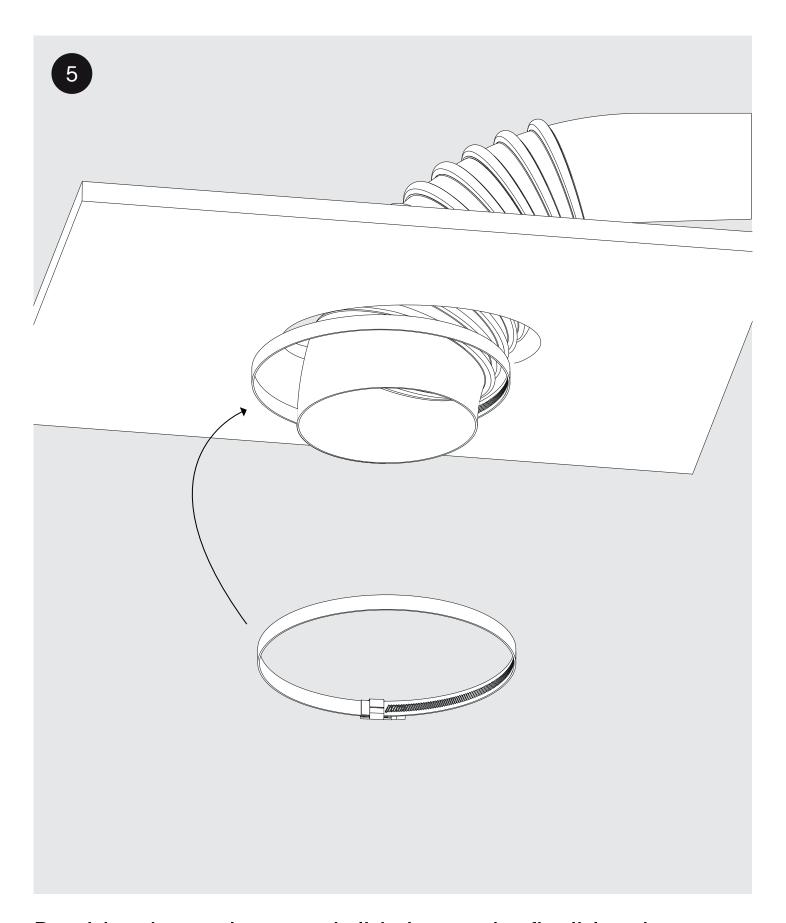


Provide a hose clamp and slide it over the flexible tube.

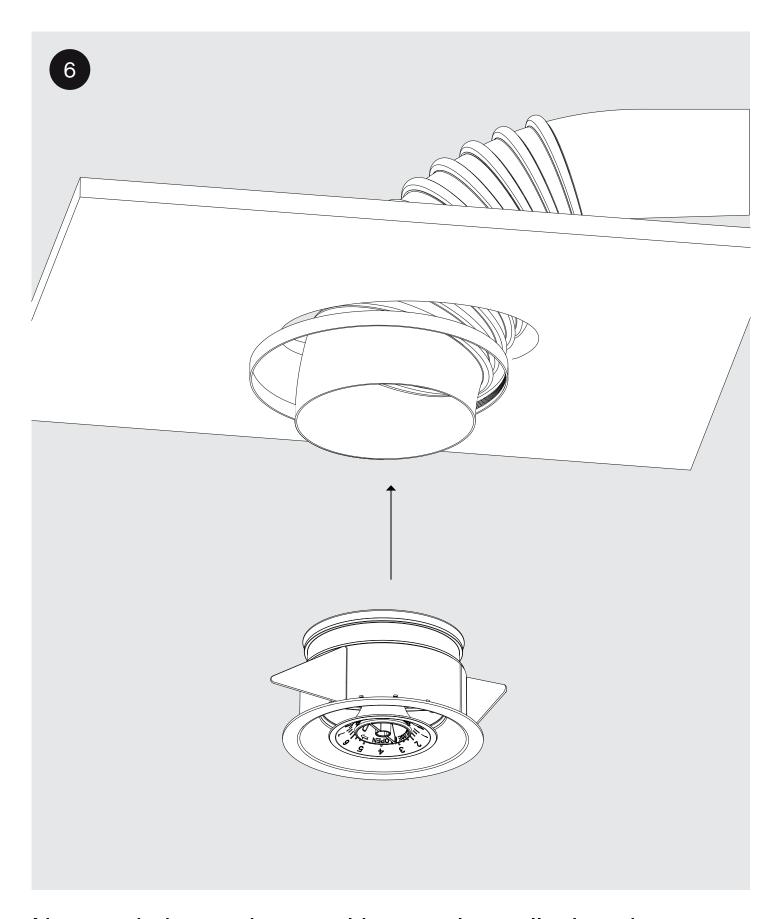


Now push the pradovent with mounting collar into the flexible tube and tighten the hose clamp.

prado.com prado.com

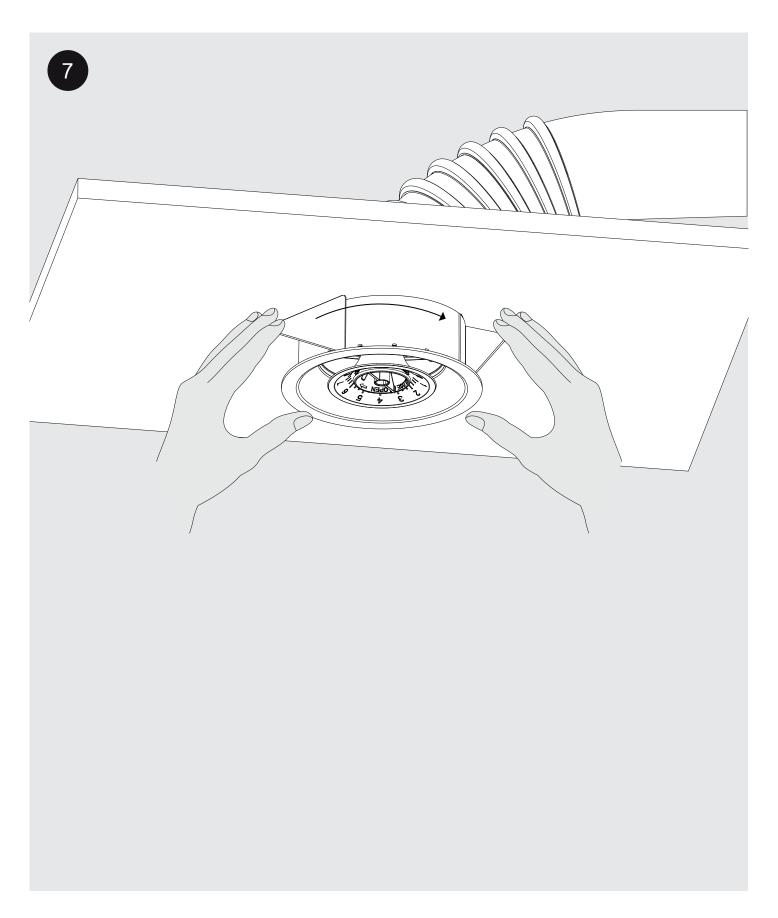


Push the valve into the ceiling opening while twisting it clockwise.

prado

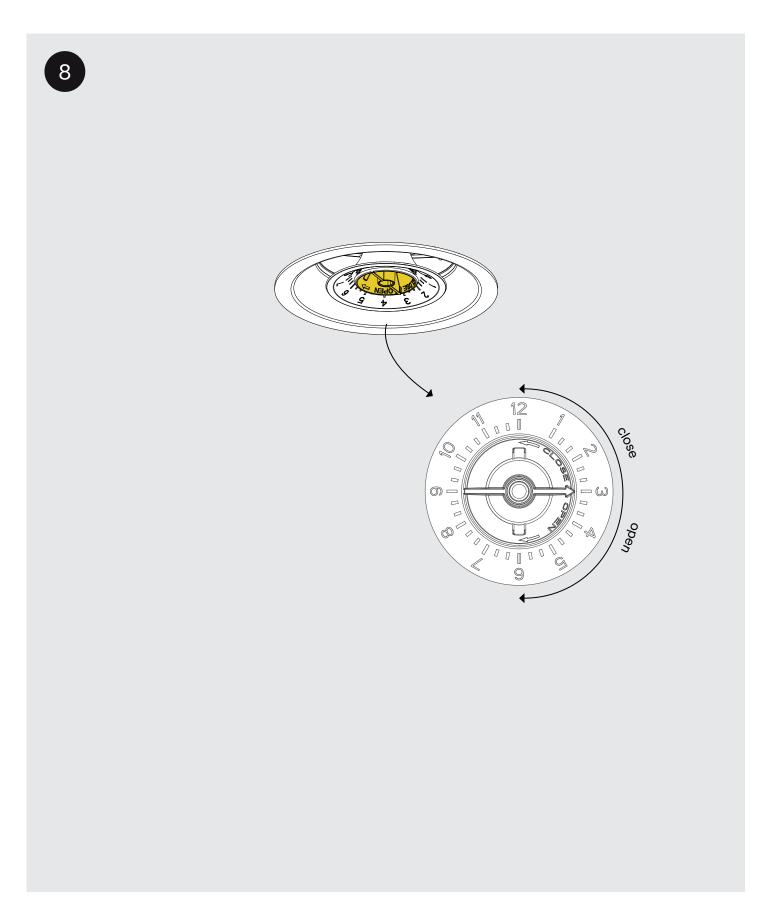


Twist the center of the valve to adjust the ventilation flow level.

prado.com prado.com

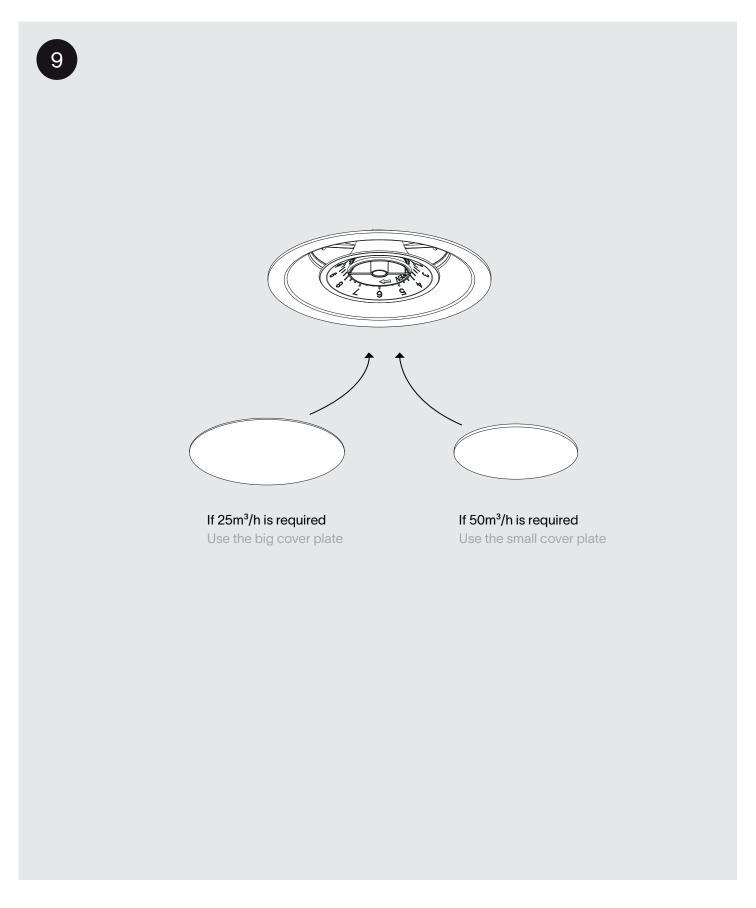


Reinstall the cover plate.

prado.com

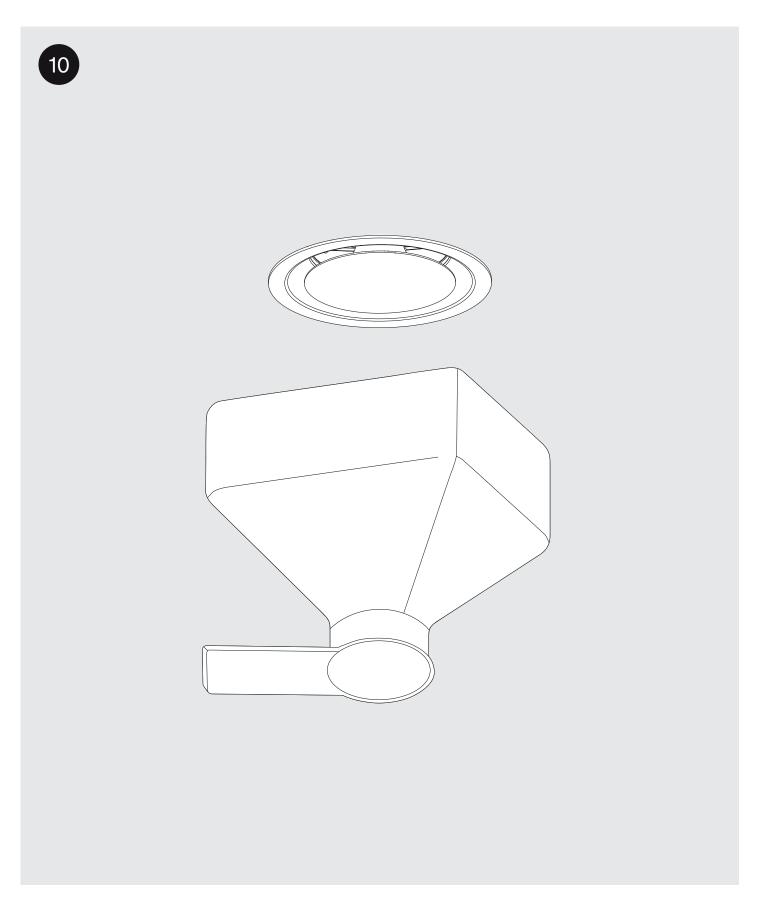

Measure the ventilation flow with the cover plate on the valve and repeat step 8-10 until the desired flow is reached.

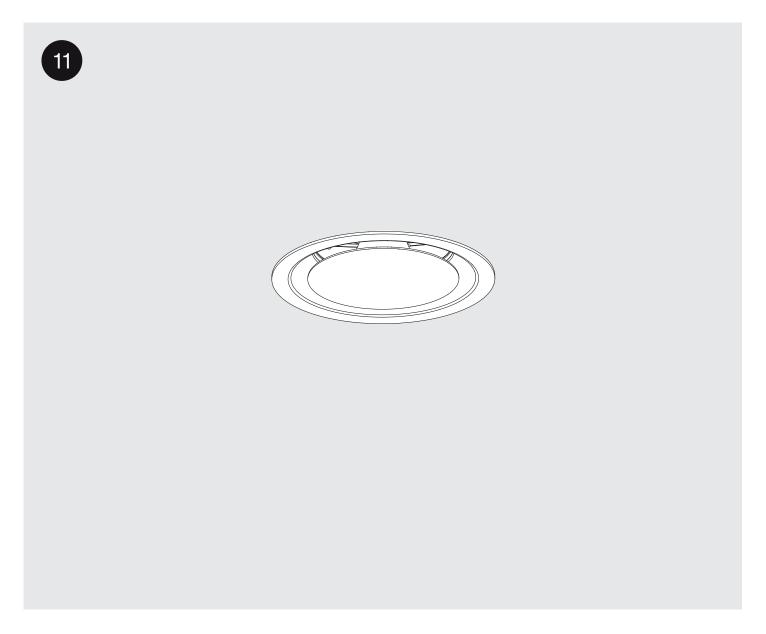

Maintenance: clean and replace the filters of your ventilation system regularly to keep your ceiling clean.

thank you for choosing prado

prado.com

Installation must be done by skilled professionals only and instructions must be followed at all times. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair a product.